


MONTCLAIR TEAKWOOD CHAISE LOUNGE

DESIGN # CPT1067

Assembly Instructions


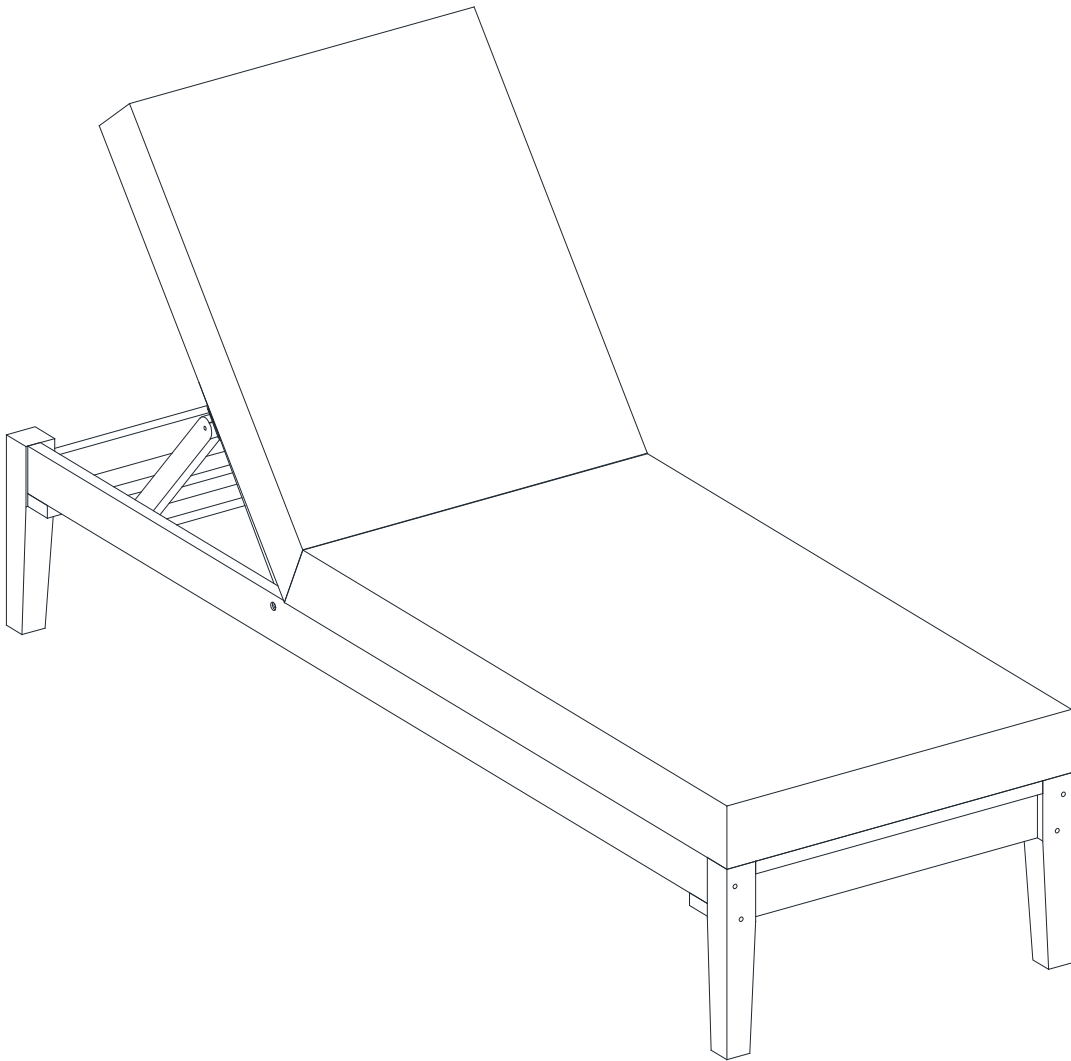


SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into Your home

Every thing we make is incredibly simple to set up, including your new chaise lounge . You won't need any additional tools.

Parts List

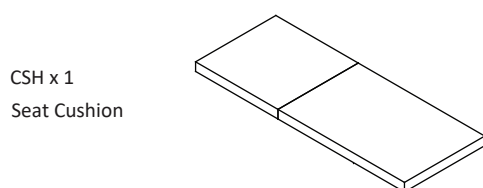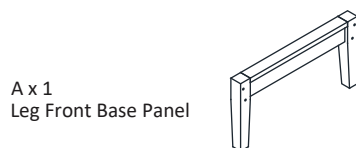

Hardware List

HW1 x 8
Allen Screw: M6x0.5x90 mm



HW2 x 1
Allen Screw: M6x0.5x40 mm




HW3 x 1
Allen key




1

Attach Leg Front Base Panel (A) and Seat Back Base Panel (B) to Seat Panel (C), Use Screws (HW1) tighten with Allen Key (HW3) .

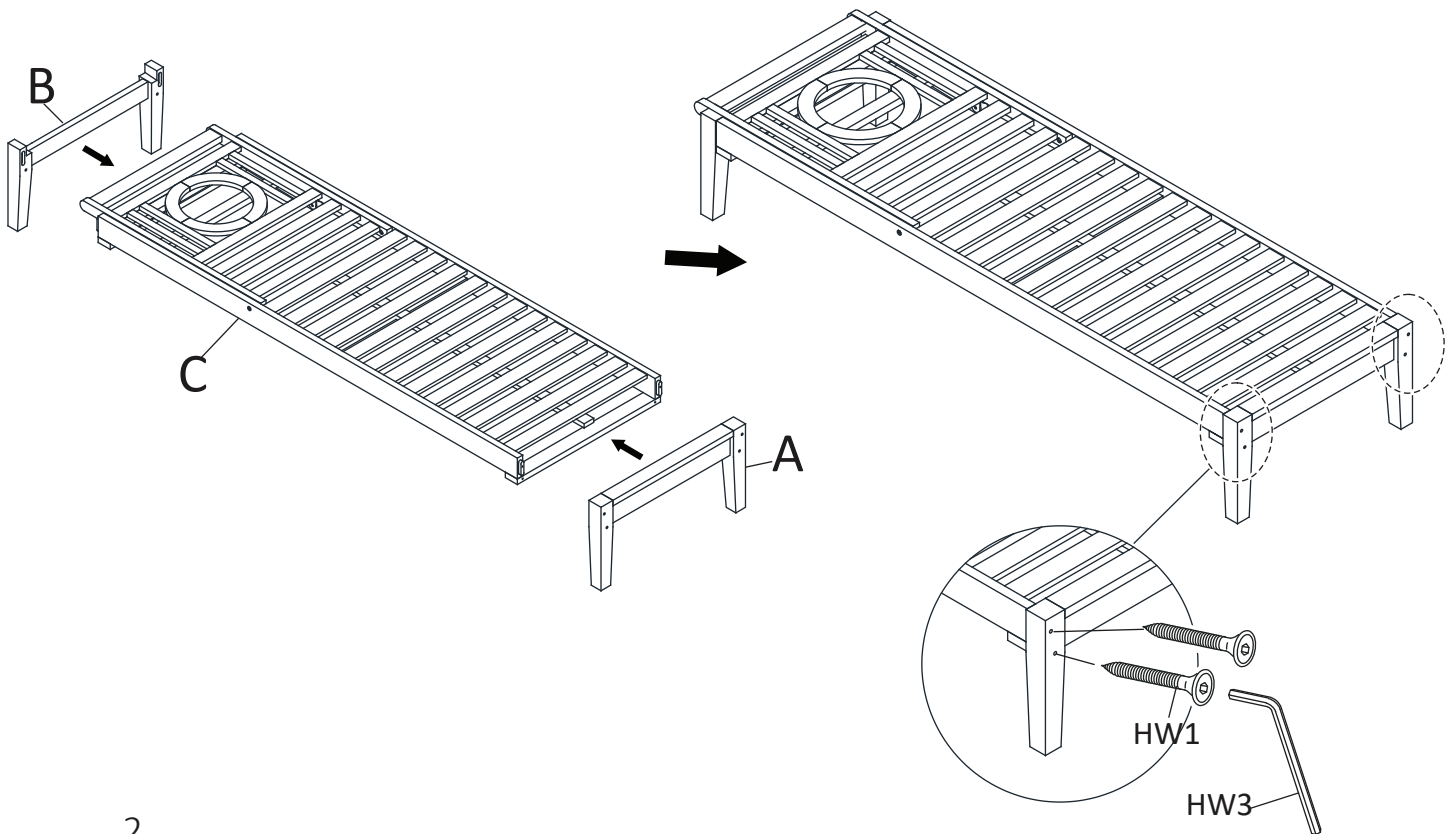


2

Attach Leg (D) to Seat Panel (C). Use Screws (HW2) tighten with Allen Key (HW3)

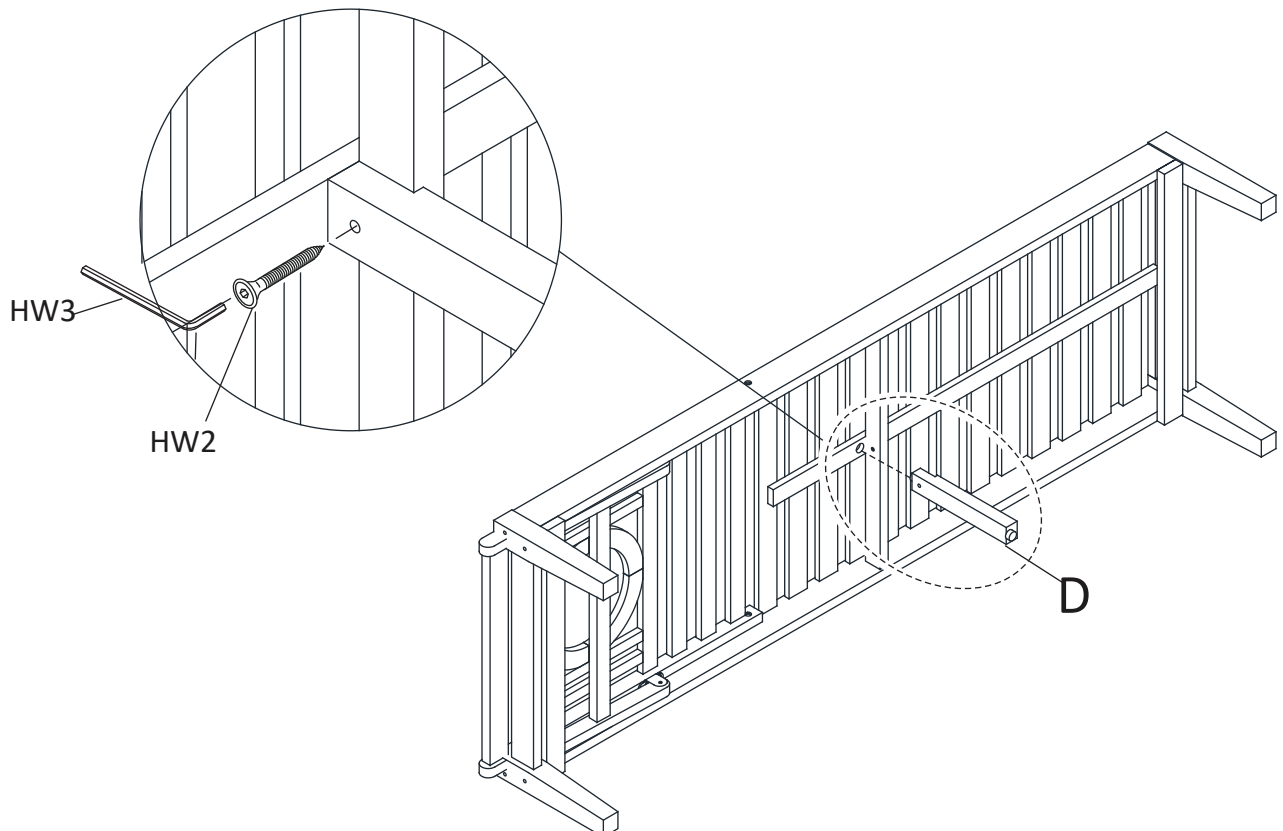


Attach Ensure all screws, bolts are fully locked into position .

Attach Seat Cushion (CSH) in CHAISE LOUNGE .

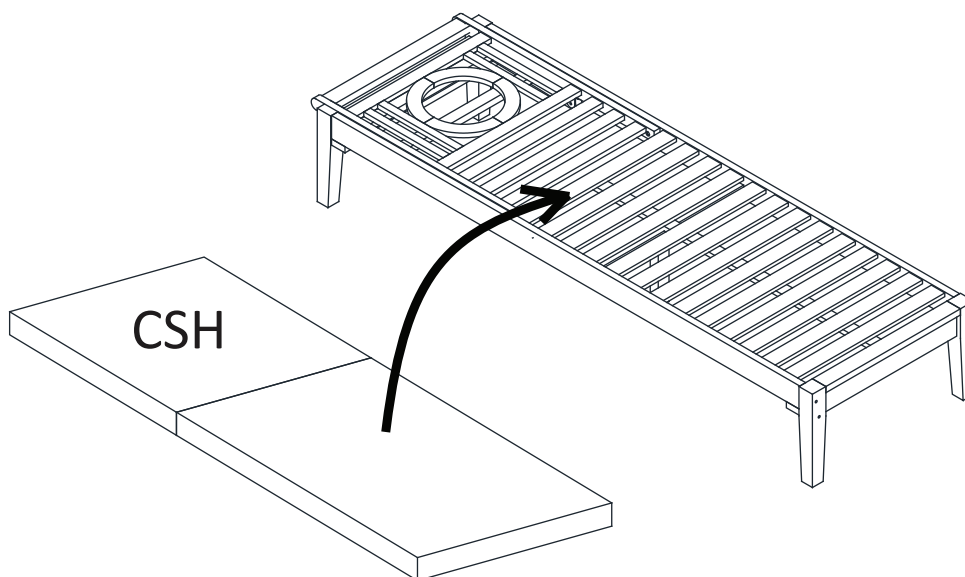

Place the chaise lounge in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

@safavieh

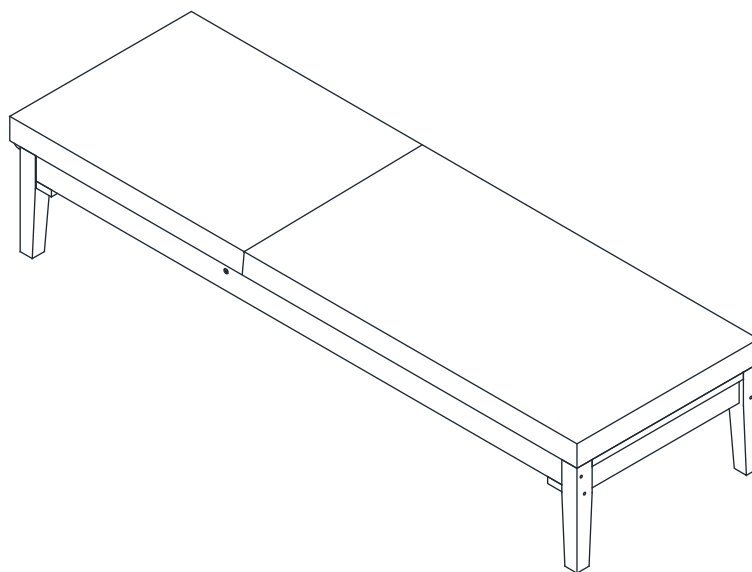

Need help?

Feel free to contact us via email or call
If you have any specific question!

Contact us:

CS@safavieh.com
866-422-9070