
MARINA TEAK PATIO CHAIR

DESIGN # CPT1084

Assembly Instructions

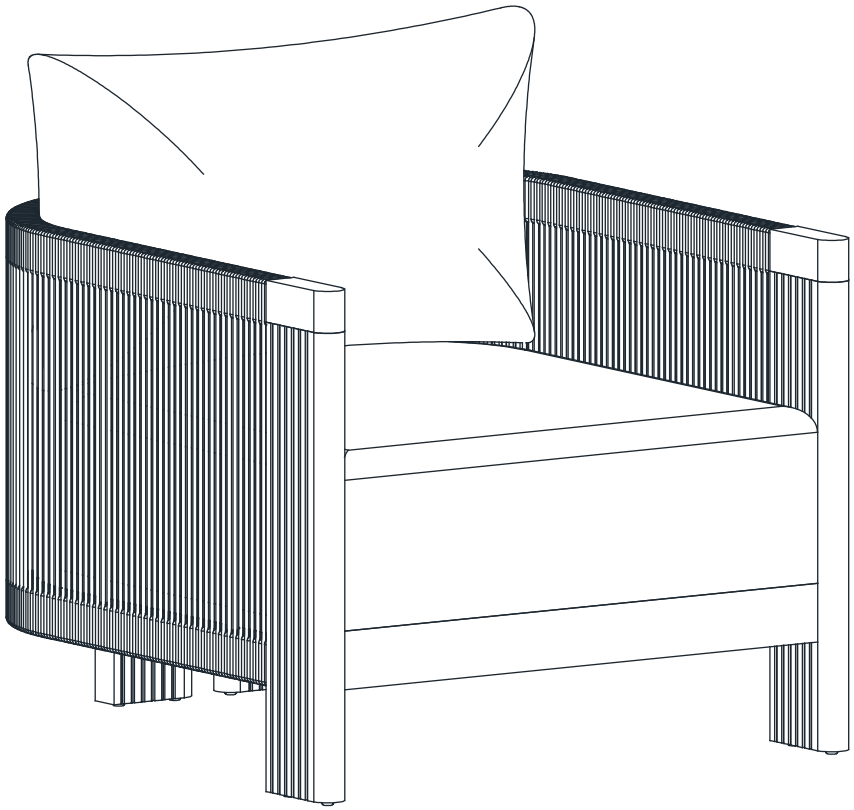

SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into Your home


Every thing we make is incredibly simple to set up, including your new chair. You won't need any additional tools.

Parts List

A x 1
Right leg Panel



B x 1
Left leg Panel




C x 1
Seat panel




D x 1
Connection Leg



CSH1 x 1
Seat Cushion

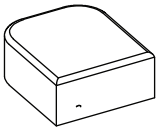

CSH2 x 1
Back Cushion

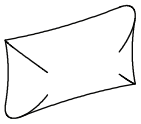

Hardware List

HW1 x 8
Bolt M8x0.5x40



HW2 x 2
Screws M6x0.5x 30 mm




HW3 x 1
Allen key




1

Place the Right Leg Panel (A) on a soft and clean surface. Insert the Connection Leg (D) into the Right Leg Panel (A) as shown below. Attach them together by using the Allen Key (HW3) to screw in the Screw (HW2).

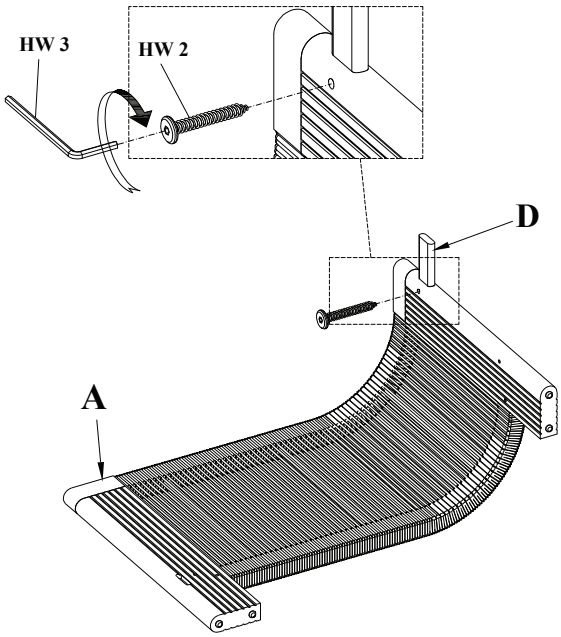


2

Align the screw holes on the Seat Panel (C) to the screw holes on the Right Leg Panel (A).
Attach them together by using the Allen Key (HW3) to screw in the Bolts (HW1) in the spots shown below.

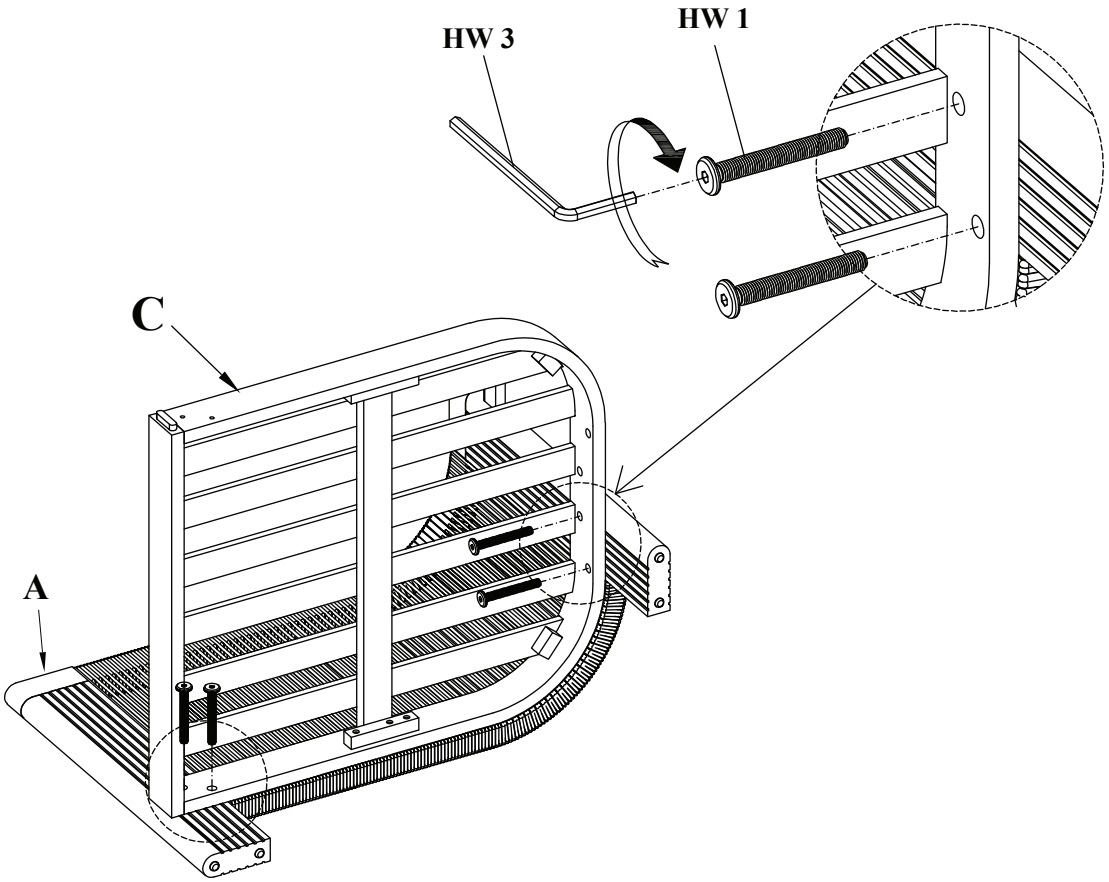


3

Align the screw holes on the Seat Panel (C) to the screw holes on the Left Leg Panel (B).
Attach them together by using the Allen Key (HW3) to screw in the Bolts (HW1) in the spots shown below.

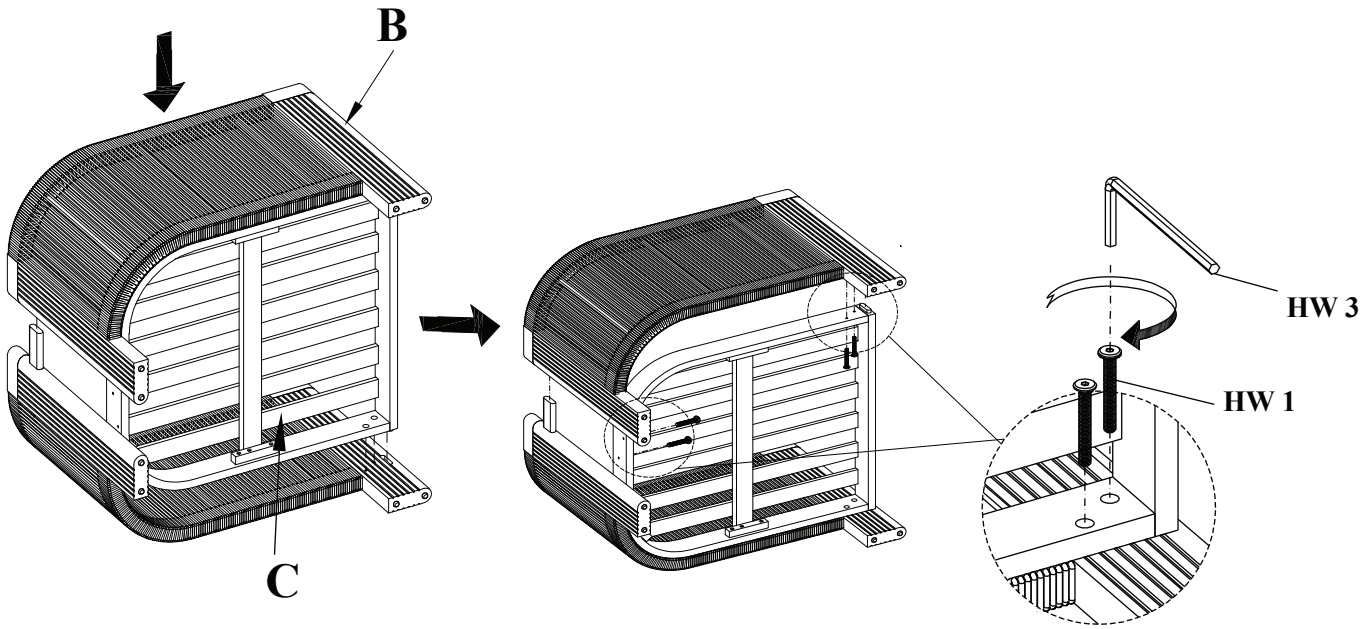


4

Attach the other side of the Connection Leg (D) to the Left Leg Panel (B) as shown below.
Attach them together by using the Allen Key (HW3) to screw in the Screw (HW2).

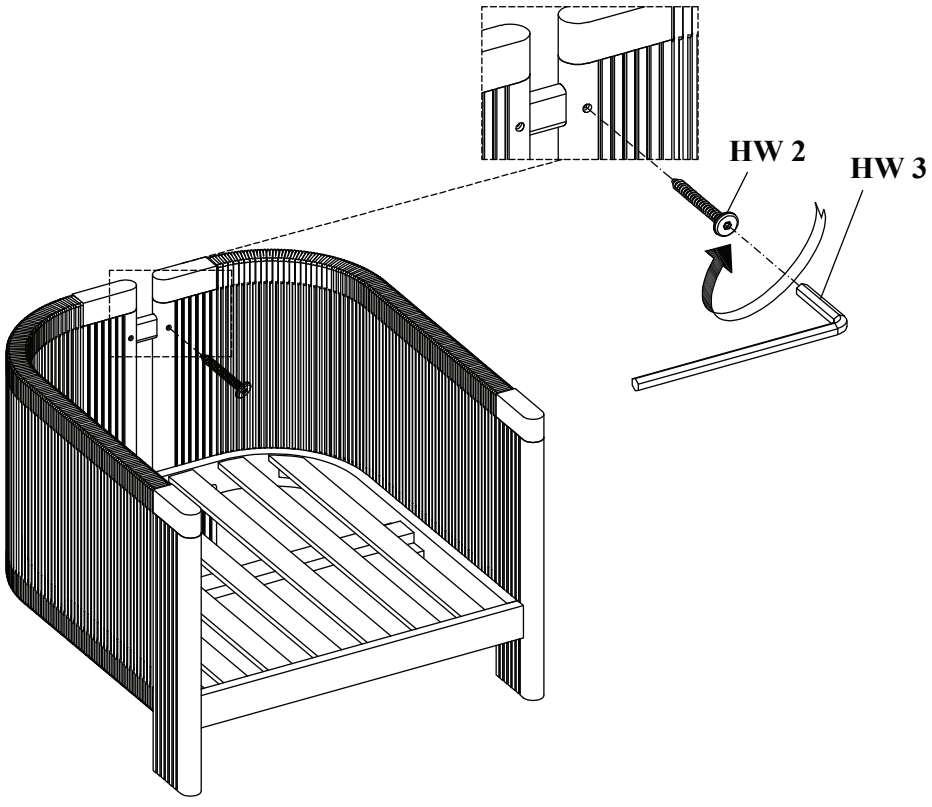


5

Turn the chair upright and place the Seat Cushion (CSH1) and Back Cushion (CSH2) on the assembled chair.

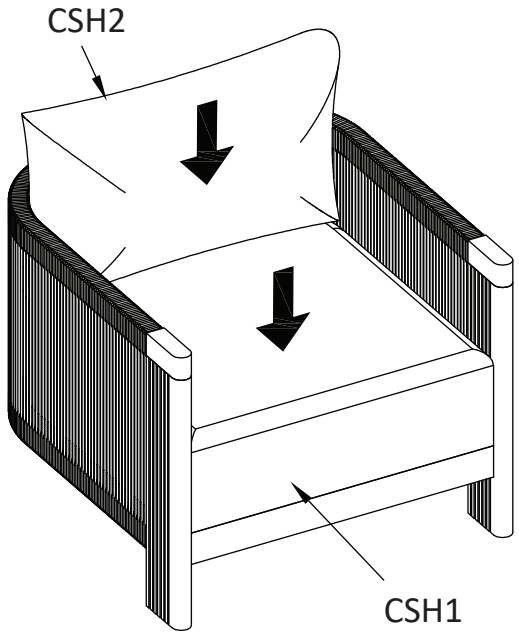

6

Place the chair in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

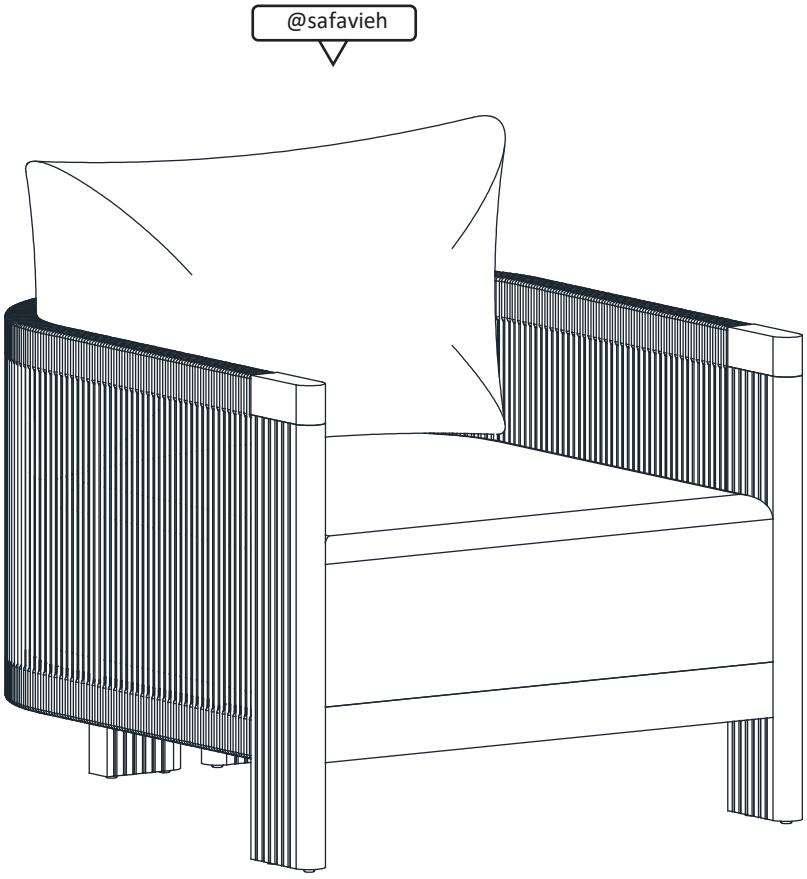

Need help?
Feel free to contact us via email or call
If you have any specfic question!

Contact us:

CS@safavieh.com
866-422-9070