


SKIPPER SOFA 3 SEATER

DESIGN # Item ID : CPT2011A

Assembly Instructions
Product Dimensions : W : 69.3" X D: 30.3" X H : 23.6"

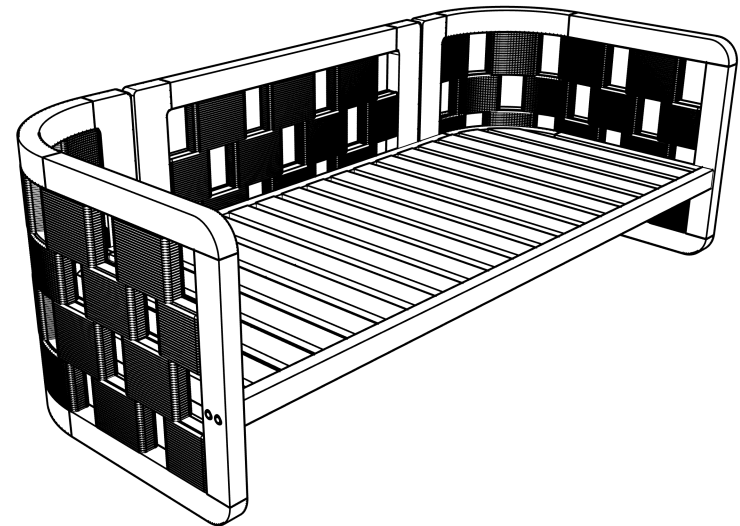

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com

866-422-9070


SAFAVIEH
C O U T U R E

Thanks For bringing Safavieh Couture Into your home


Every thing we make is incredibly simple to set up, including your new chair. you won't need any additional tools.

Parts List


A X 1
SIDE PANEL (LEFT)

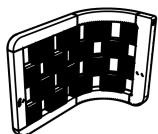


B X 1
SIDE PANEL (RIGHT)

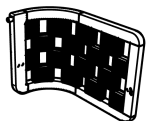


C X 1
SEAT PANEL

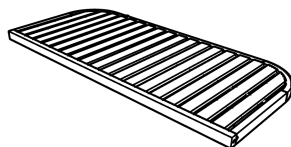

D X 1
BACK PANEL

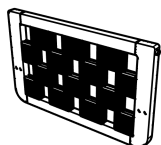

E X 1
MIDDLE LEG



Hardware List

HW1 X 12
JCBC BOLT M6 X 50



HW2 X 1
ALLEN KEY



HW3 X 1
JCBC BOLT M6 X 40




HW4 X 12
BOLT CAP




1

Attach the back panel (D) to the seat panel (C) with bolt (HW1), do not tighten until completely assembled

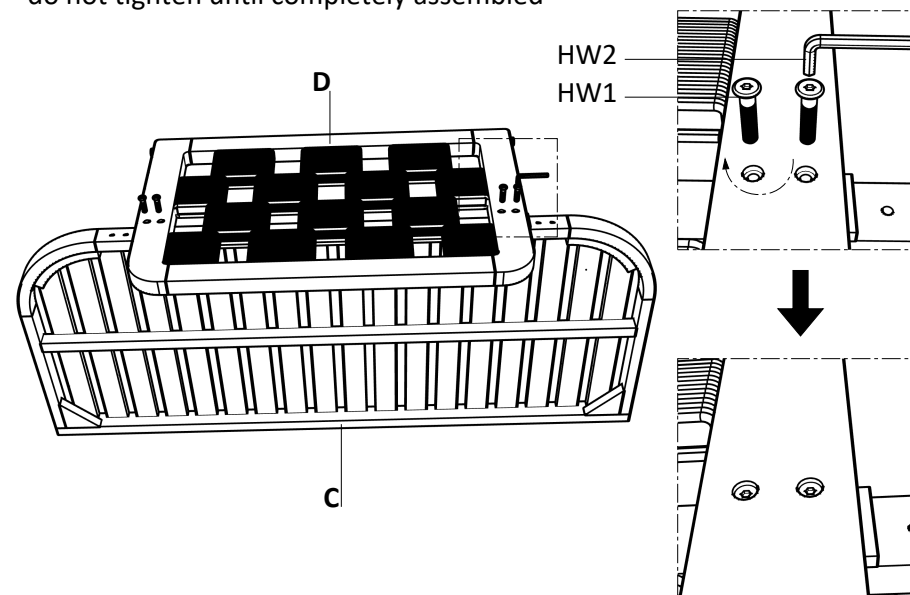


2

Attach the side panel (left) (A) to the seat panel (C)
And on the back, make sure the dowel guide of back panel (D) enters
the side panel (left) (A) hole (**Picture 1**)
and attach the bolt (HW1) from the side panel (left) (A)
to the seat panel (C) (**Picture 2**).

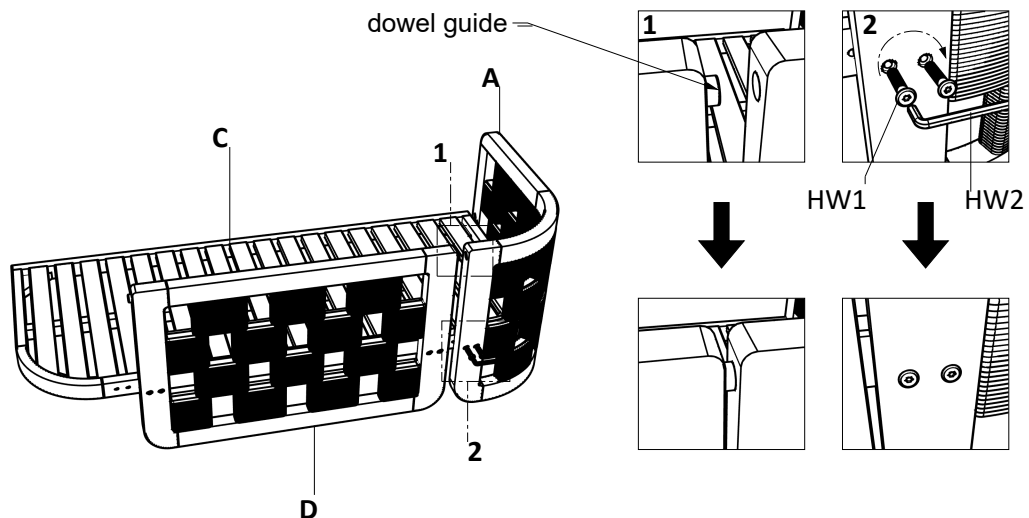


Before tighten the screws, the side panel must be
in line than tighten the screws.

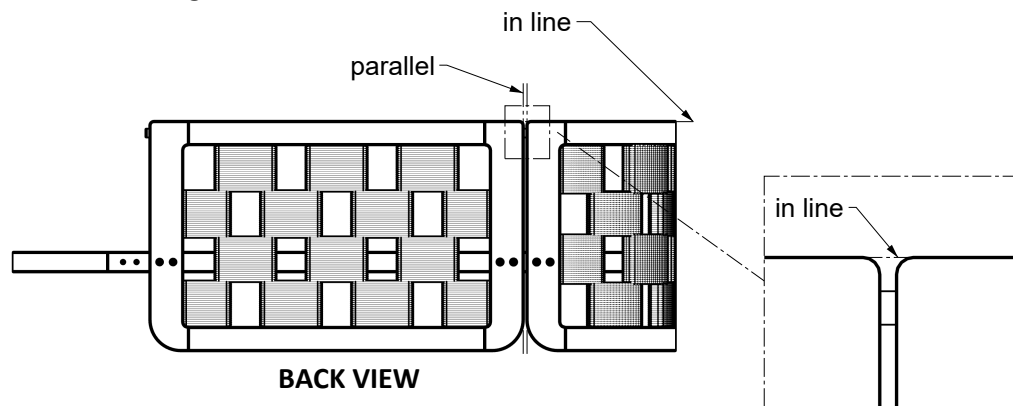


3

And on the side, also attach the bolt (HW1) from the side panel (left) (A)
to the seat panel (C)
do not tighten until completely assembled

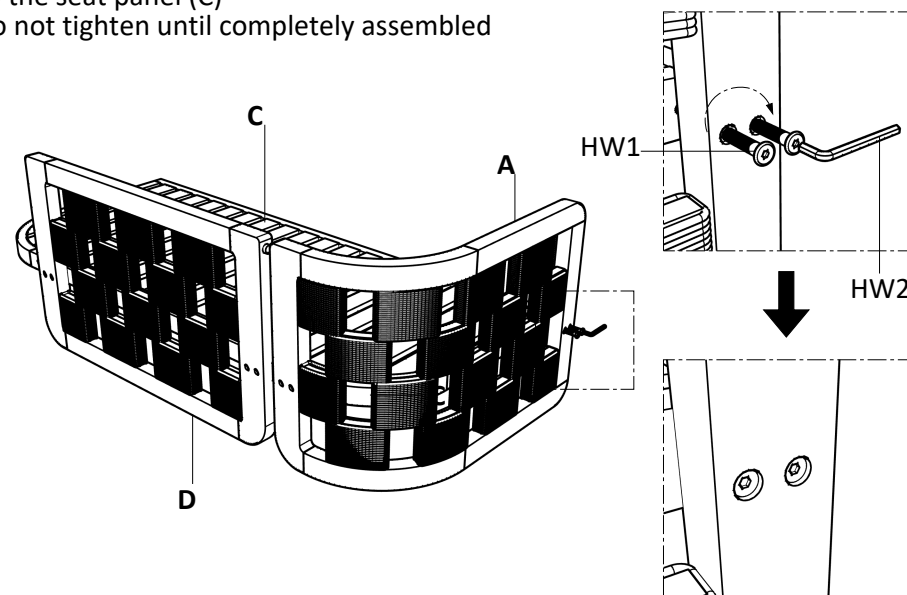


4

Attach the side panel (right) (B) to the seat panel (C)
And on the back, make sure the dowel guide of back panel (D) enters the side panel (right) (A) hole (**Picture 1**)
and attach the bolt (HW1) from the side panel (right) (B) to the seat panel (C) (**Picture 2**).

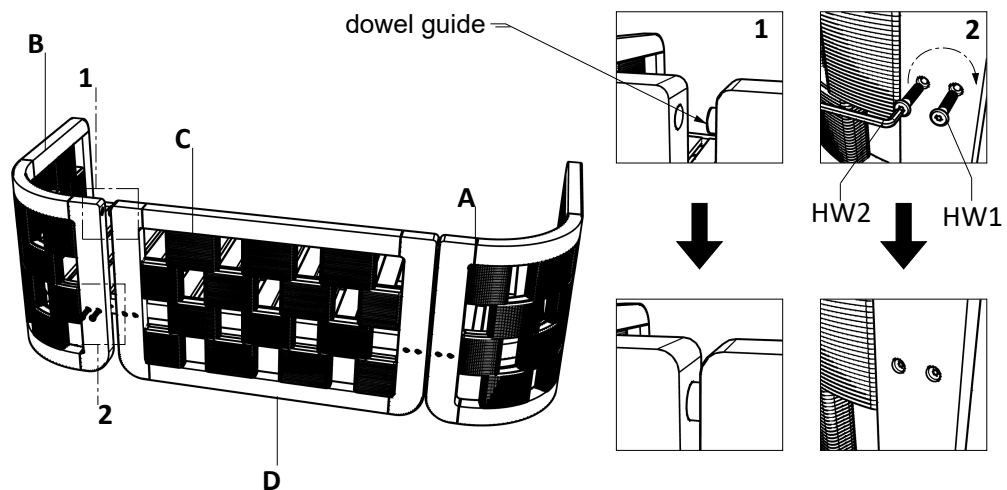


5

And on the side, also attach the bolt (HW1) from the side panel (right) (B) to the seat panel (C)
do not tighten until completely assembled

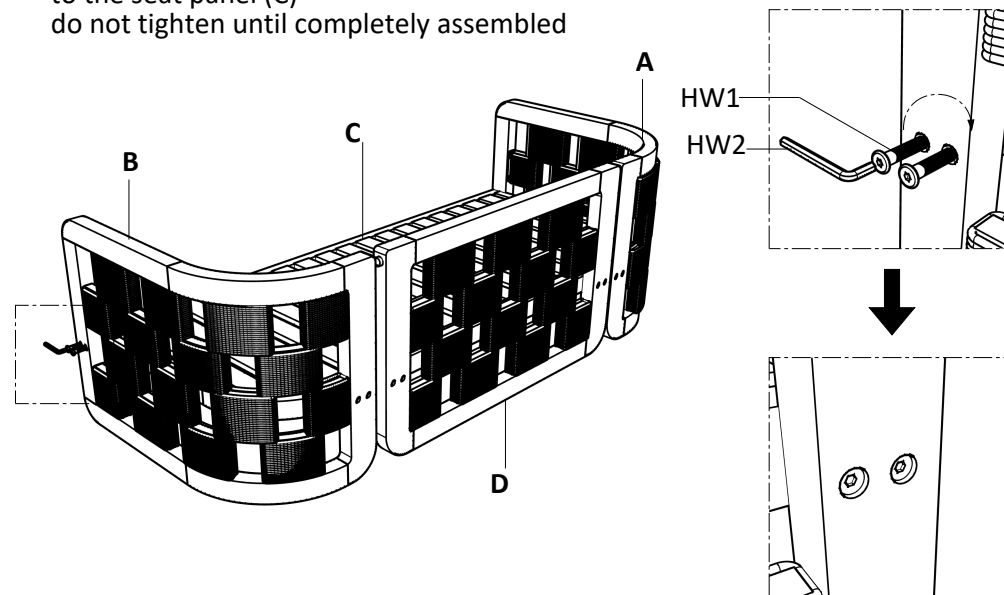


Before tighten the screws, the side panel must be in line than tighten the screws.

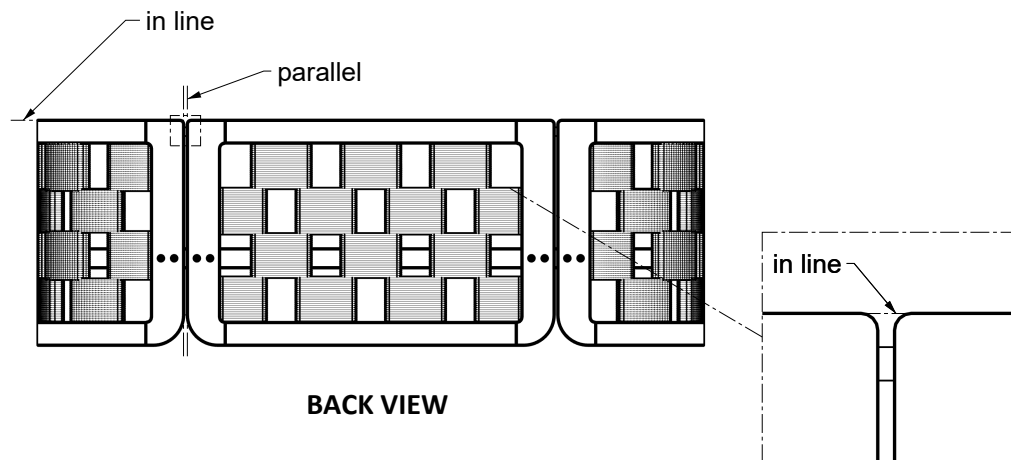


6

Attach the middle leg (E) to the bottom of the seat panel (C) with bolt (HW3), tighten it

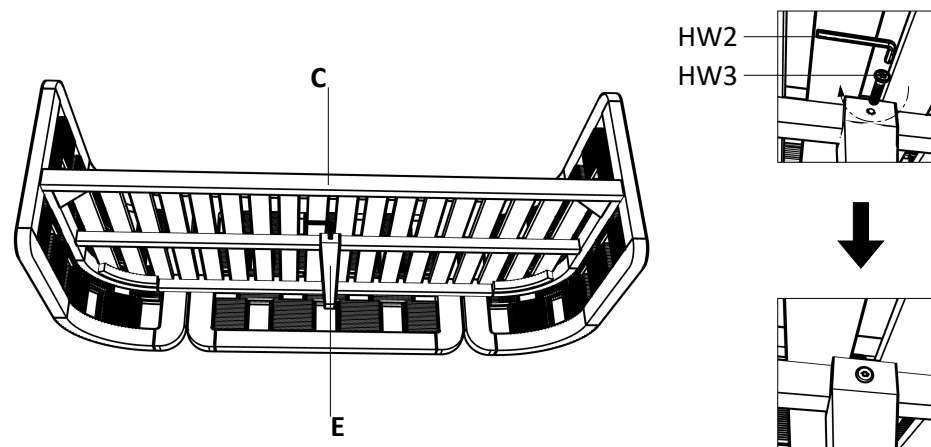

7

Attach bolt cap (HW4) to seal the hole on the side panel left right (A & B) and the hole on the back

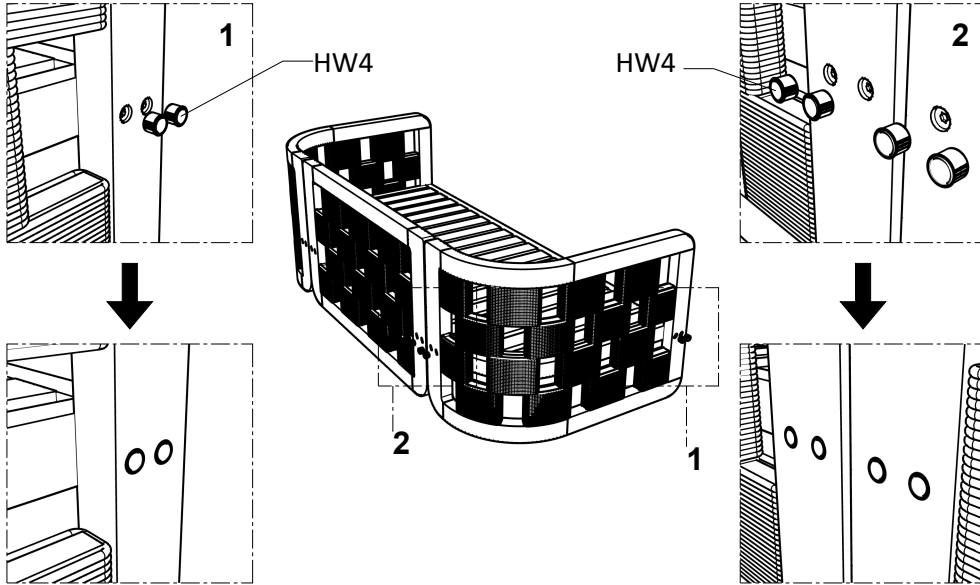

8

Place the chair in the position you use. we'd love to see it -- just tag us (we're @safavieh) and use the hashtag #safavieh on instagram!

@safavieh

