


DORIANNA ALUMINUM PATIO SOFA

DESIGN#CPT4005A

Assembly Instructions

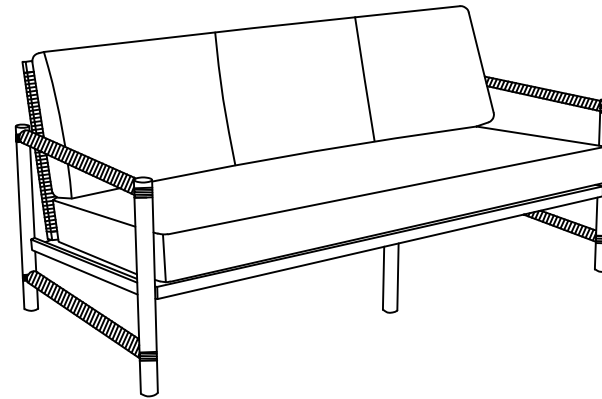

Need help?
Feel free to contact us via email or call
if you have any specific questions!

contact us:
cs@safavieh.com
866-422-9070

SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up. You won't need any additional tools.

Parts & hardware

2 x
Armrest



1 x
Backrest



1 x
Seat Board



1 x
Middle Leg



1 x
Allen Key



2 x
M6*20 Bolt



4x
M6*35 Bolt



2 x
M6*40 Bolt



4 x
M6*55 Bolt



12 x
M6 Washer



3 x
Back Cushion




1 x
Seat Cushion




1

Attach the middle leg to the seat board, aligning the screw holes. Use bolts M6*20 and washer to secure it and tighten with the Allen Key.

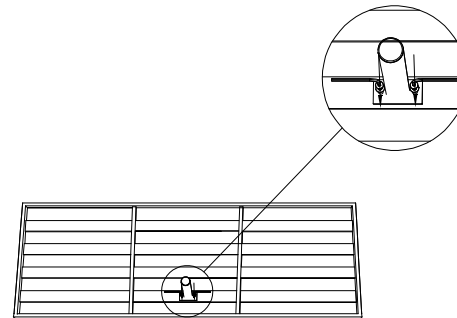


4

Attach the backrest to the seat board, aligning the screw holes. The Lower Part Use bolts M6*55 and washer to secure it, the Upper Part use bolts M6*40 and washer to secure it and tighten with the Allen Key.

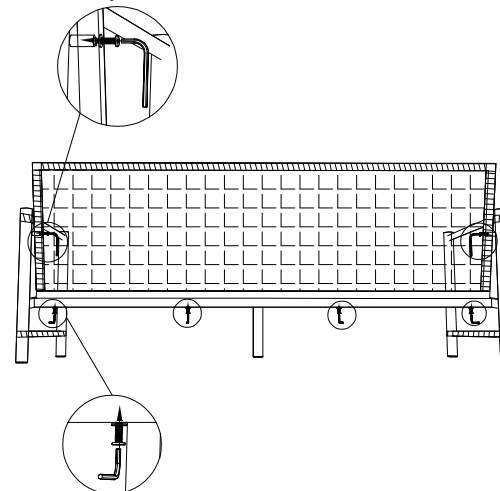


2

Attach the first armrest to the seat board, aligning the screw holes. Use bolts M6*35 and washer to secure it and tighten with the Allen Key.

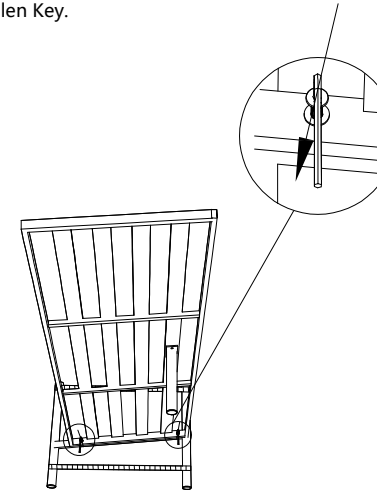

3

Attach the second armrest to the seat board, aligning the screw holes. Use bolts M6*35 and washer to secure it and tighten with the Allen Key.

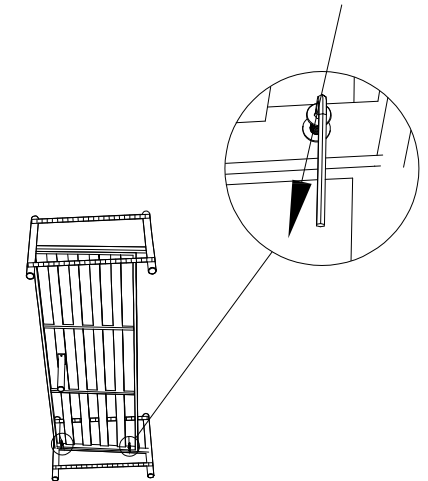

5

Place the seat cushion and back cushion in sequence. Whether you use it outdoor or indoor, we'd love to see it—just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

