


CHRYSSA ALUMINUM AND TEAK PATIO SOFA

DESIGN#CPT4008A

Assembly Instructions

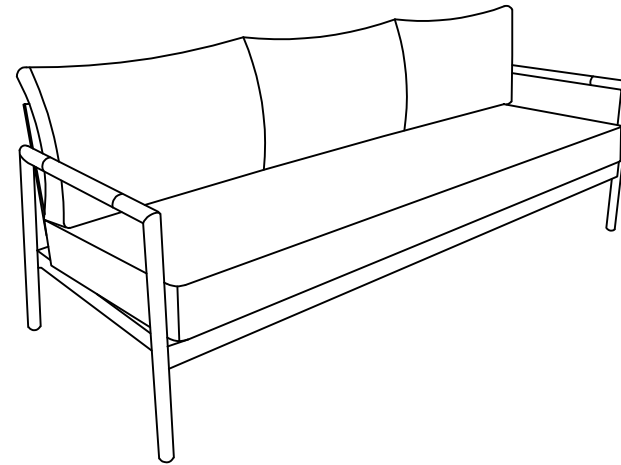

Need help?
Feel free to contact us via email or call
if you have any specific questions!

contact us:
cs@safavieh.com
866-422-9070

SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly
simple to set up.
You won't need any additional tools

Parts & hardware


2 x
Armrest



1 x
Seat Board



1 x
Back Rest



1 x
Allen Key



4 x
M6*40 Bolt



6 x
M6*65 Bolt



10 x
M6 Washer



3 x
Back Cushion




1 x
Seat Cushion




1

Take out one armrest and the seat board,
align the screw holes, and connect the
armrest and seat board using an M6*40 bolt
and M6 washer. Tighten the bolt using a
allen key.

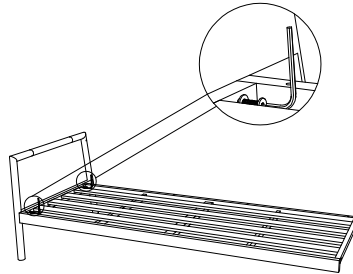


2

Take out the other armrest and align the
holes. Use the same method to secure the
other armrest to the seat board with an
M6*40 bolt and washer. Tighten the bolt.

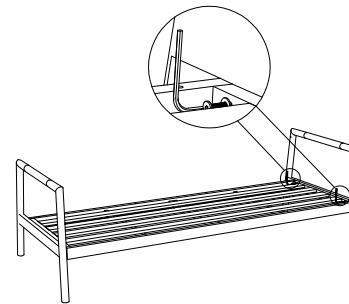


3

Take out the backrest and align the holes. Secure
and tighten the lower part using an M6*65 bolt
and M6 washer. Secure and tighten the upper part
using an M6*65 bolt and washer.

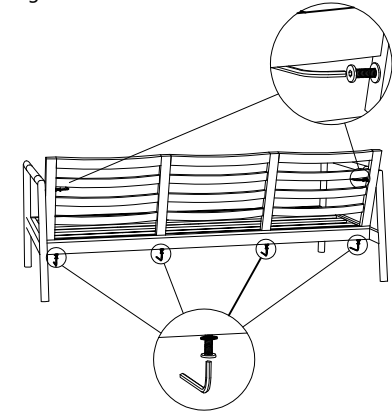

5

The hardware assembly has been completed

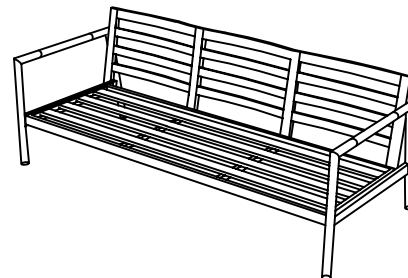

6

Place the seat cushion and back cushion in
sequence. Whether you use it outdoor or
indoor, we'd love to see it—just tag us (we're
@safavieh) and use the hasg tag #safavieh
on Instagram!

