


BERLYNNE BANANA STEM NIGHTSTAND

DESIGN # SFV1312

Assembly Instructions

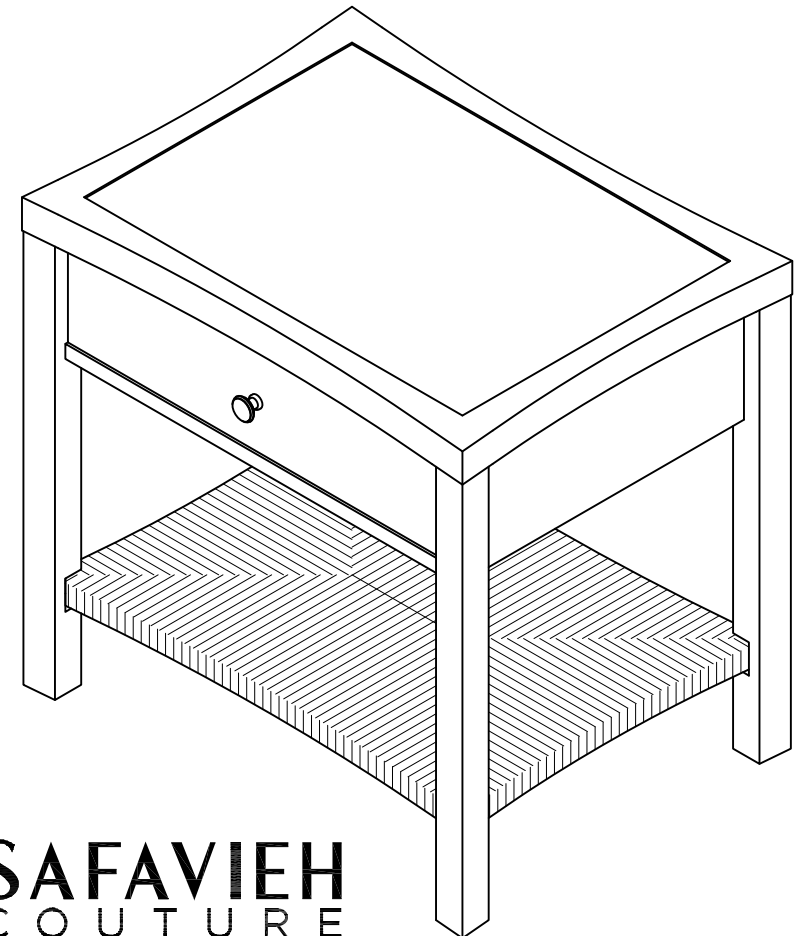

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com
866-422-9070


SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home


Every thing we make is incredibly simple to set up, including your new nightstand. You won't need any additional tools.

Parts List


A x 1
TOP ASSEMBLY




B x 1
LEFT ASSEMBLY




C x 1
RIGHT ASSEMBLY




D x 1
FRONT RAIL




E x 2
BACK PANEL



F x 1
SHELF ASSEMBLY



G x 2
DRAWER FRONT



H x 4
DRAWER LEFT



I x 6
DRAWER RIGHT



J x 6
DRAWER BACK



K x 6
DRAWER BASE




Hardware List

HW1 x 4
BOLT 6x1x80 mm



HW2 x 8
FLAT HEAD SCREW 3x1x32 mm



HW3 x 3
FLAT HEAD SCREW 3x1x19 mm



HW4 x 12
CAMBOLT



HW5 x 12
CAMLOCK



HW6 x 1
MACHINE SCREW 4x0.7x25 mm



HW7 x 1
HANDLE



HW8 x 6
DOWEL



HW9 x 4
SPACER



HW10 x 4
SPRING WASHER Ø13 x 1 MM




HW11 x 1
L KEY




1

Use a Philips head screwdriver to screw in the Cambolts (HW4) to the Top Assembly (A), Left Assembly (B) and Right Assembly (C) as shown.

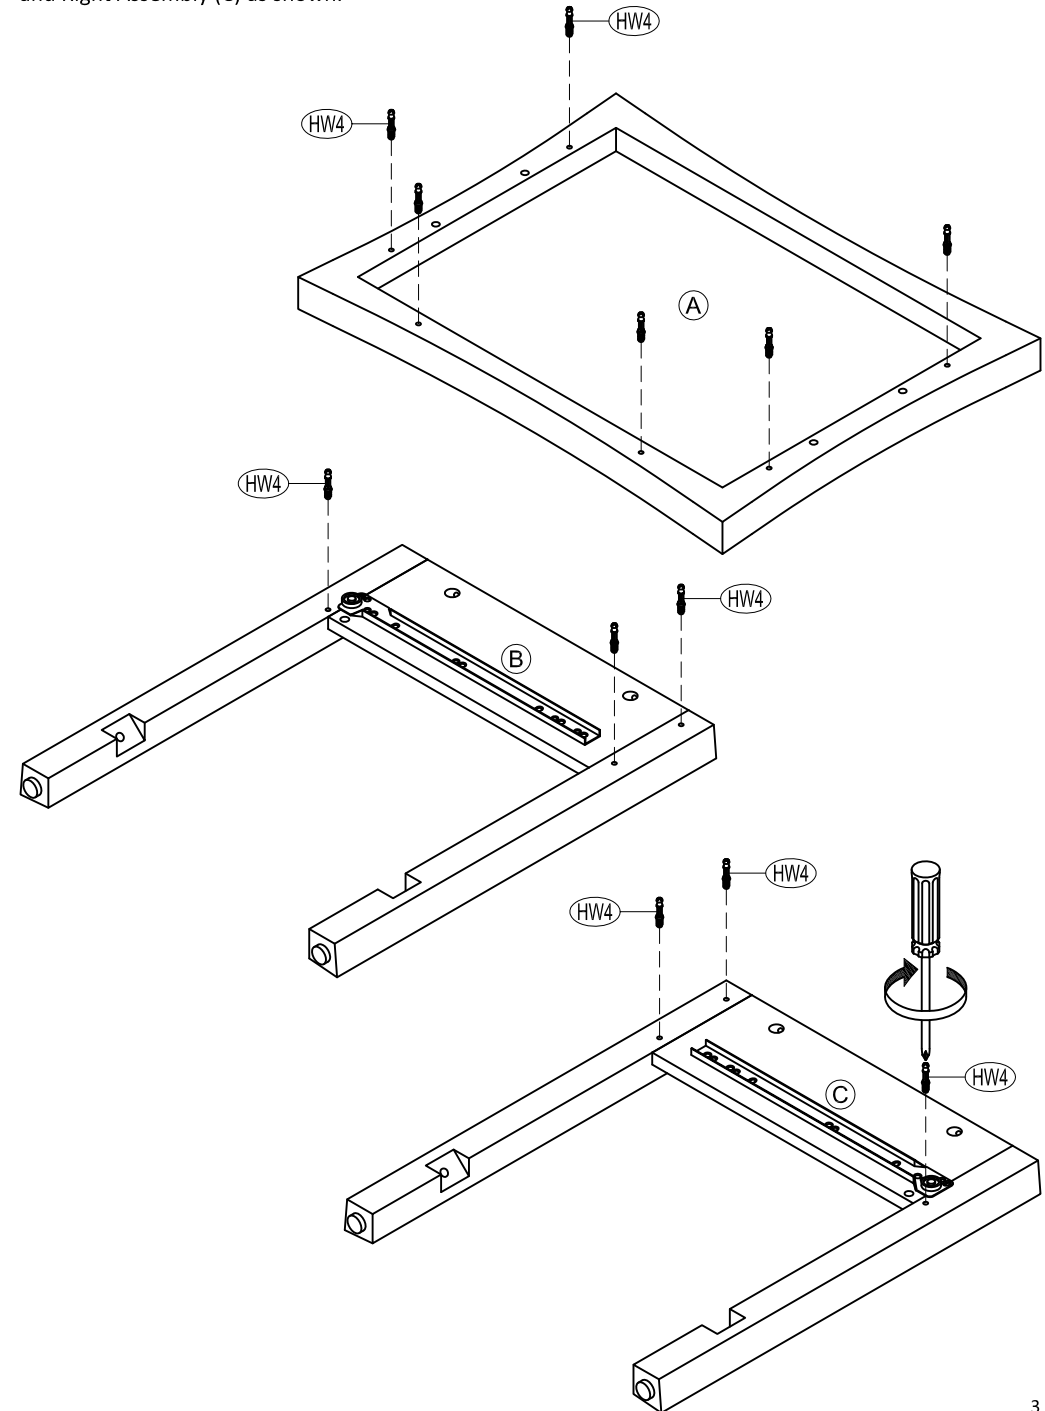


2

Use the Dowels (HW8) to attach the Front Rail (D) to the Right Assembly (C). then use a Philips head screwdriver to screw in the Camlocks (HW5) to attach the Front Rail (D) to the Right Assembly (C) and to attach the Back Panel (E) to the Right Assembly (C) as shown.

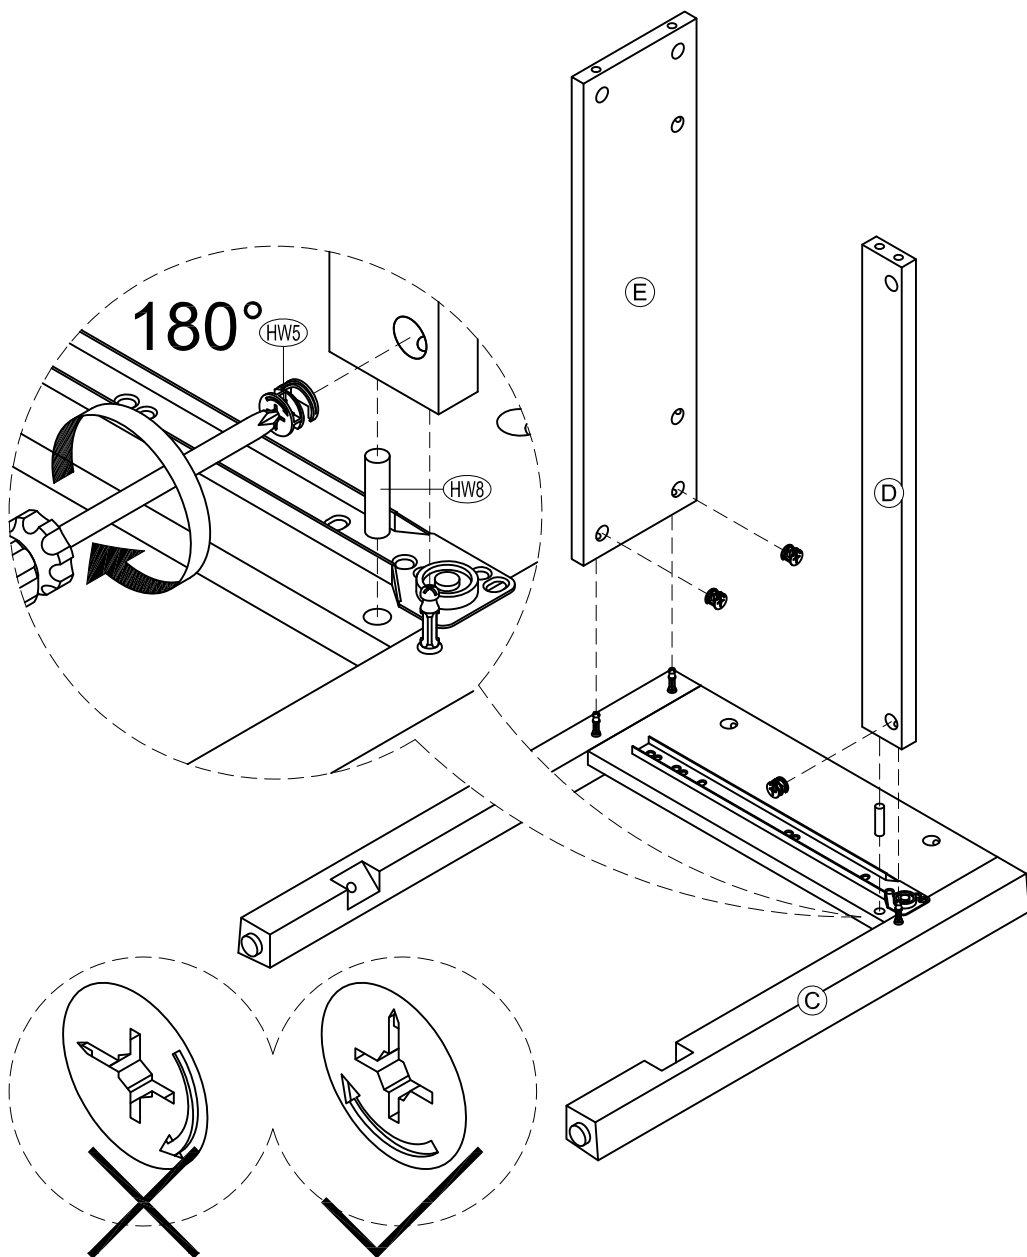


3

Attach the Left Assembly (B) to the Front Rail (D) with the Dowels (HW8). then use a Philips head screwdriver to screw in the Camlocks (HW5) to attach the Left Assembly (B) to the Front Rail (D) and to the Back Panel (E) as shown. Attach the Shelf Assembly (F) to the legs by using the L Key (HW11) to screw the Bolts (HW1) in through the Spring Washers (HW10) and Spacers (HW9) as shown.

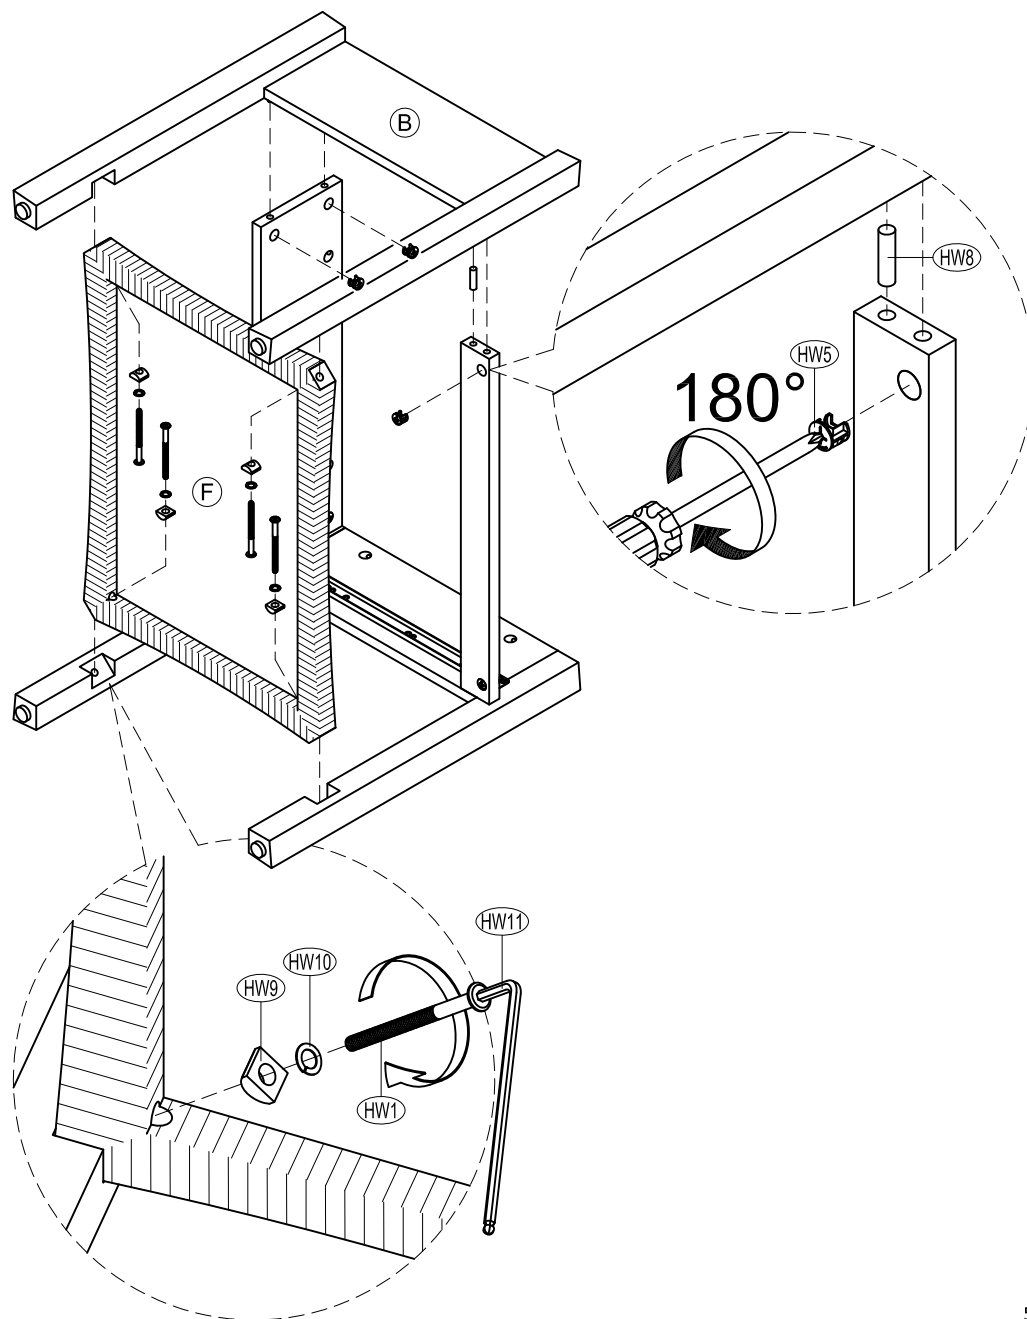


4

Use the Dowels (HW8) to attach the Top Assembly (A) to the Assembled Unit. Then use a Philips head screwdriver to screw in the Camlocks (HW5) as shown. Adjust the levelers on the bottom of the legs to make the table straight.

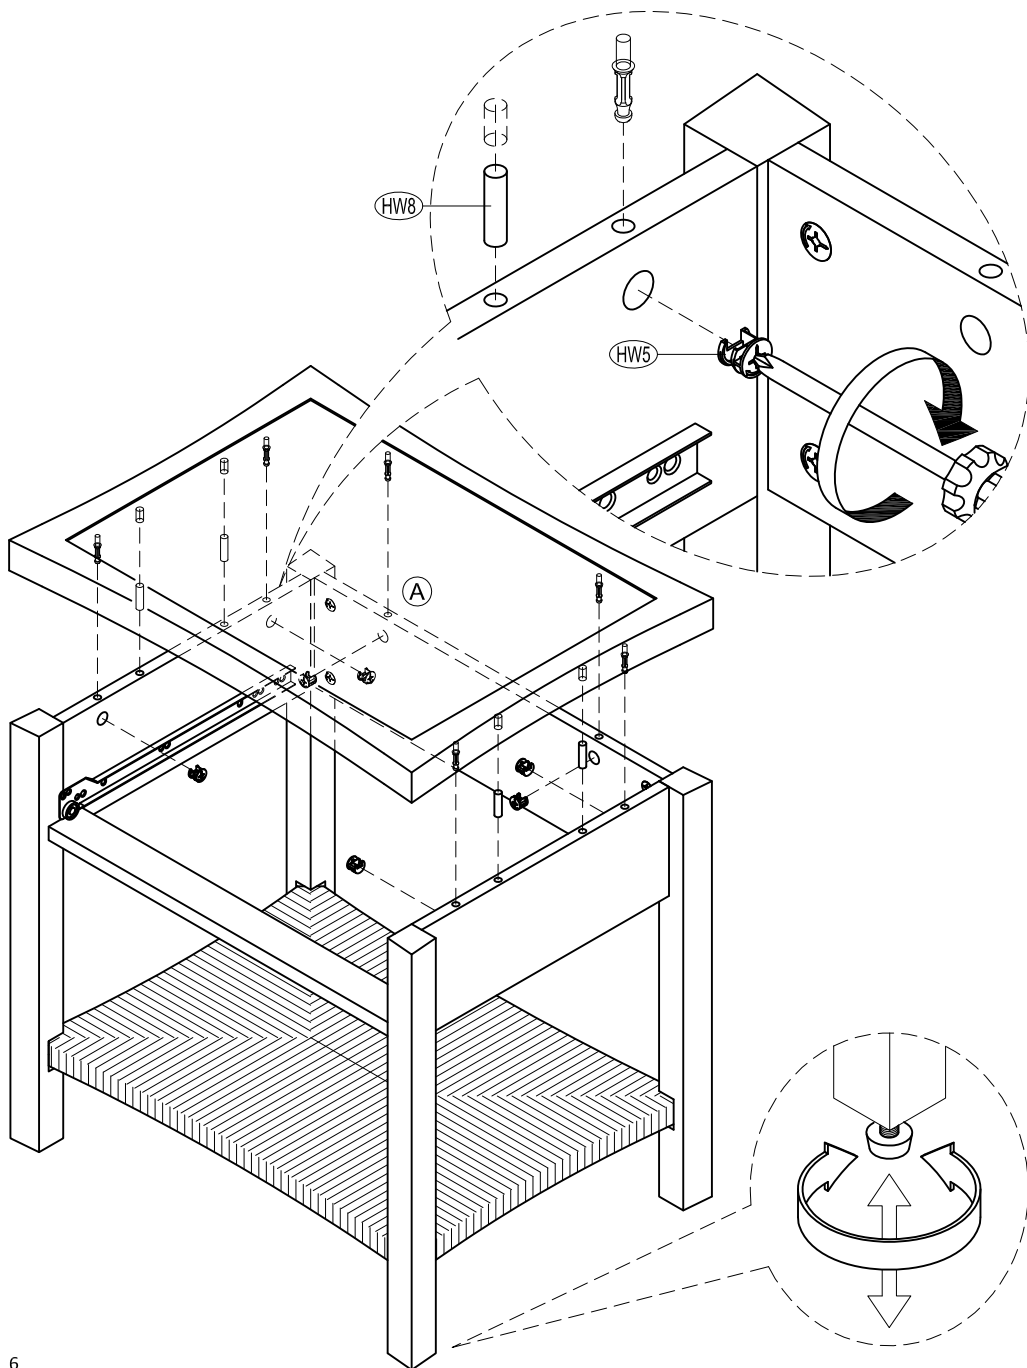


5

Attach the Handle (HW7) to the Drawer Front (G) by screwing in the Machine Screw (HW6). Attach the Drawer Back (J) to the Drawer Left (H) and Drawer Right (I) by using a flat head screwdriver to screw in the Flat Head Screws (HW2). Slide the Drawer Base (K) into the groove. Attach the Drawer Front (G) to the Drawer Left (H) and Drawer Right (I) by using a flat head screwdriver to screw in the Flat Head Screws (HW2).

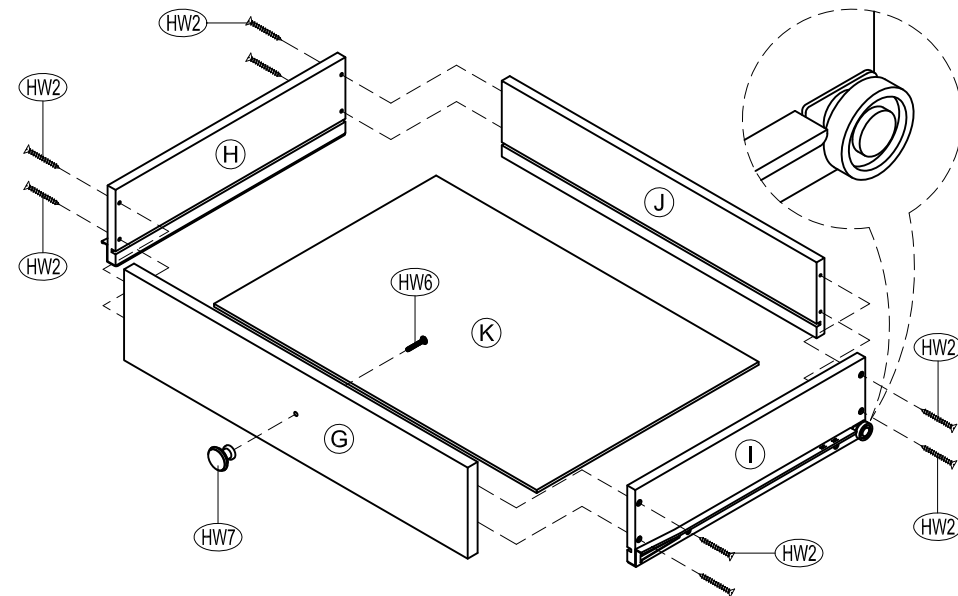


6

Slightly loosen the 2 screws that were pre-installed on the back of the Drawer Front.

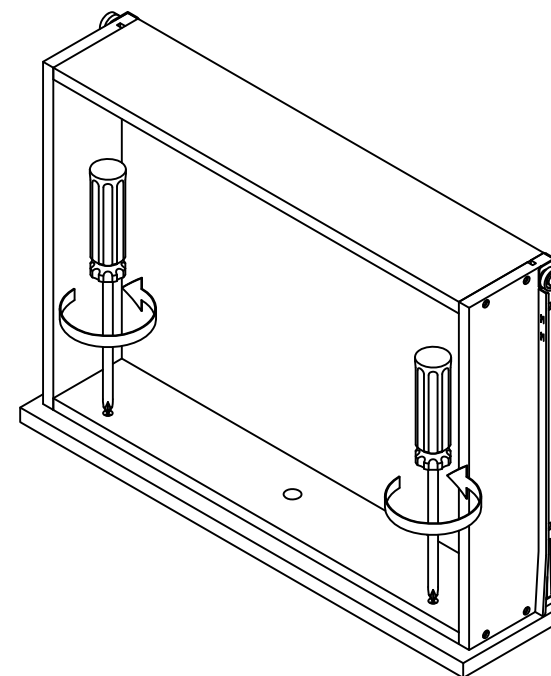


7

Insert the assembled drawer into the assembled table.

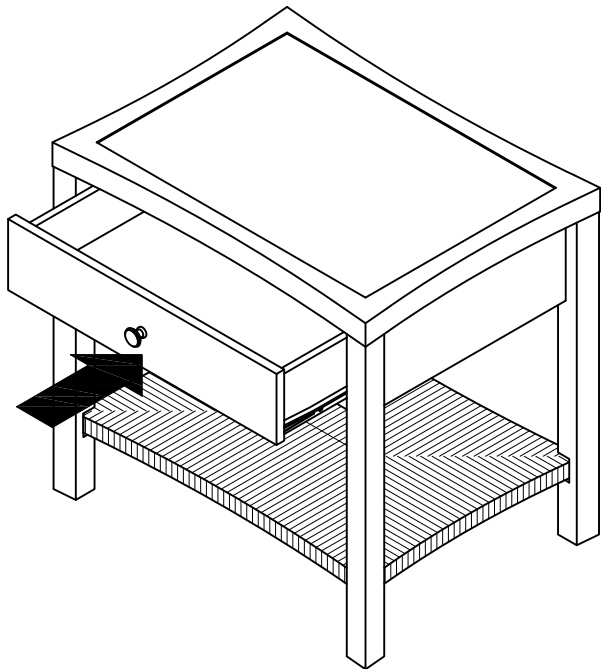


8

Adjust the front of the drawer left and right and up and down until the drawer gaps are proportional.

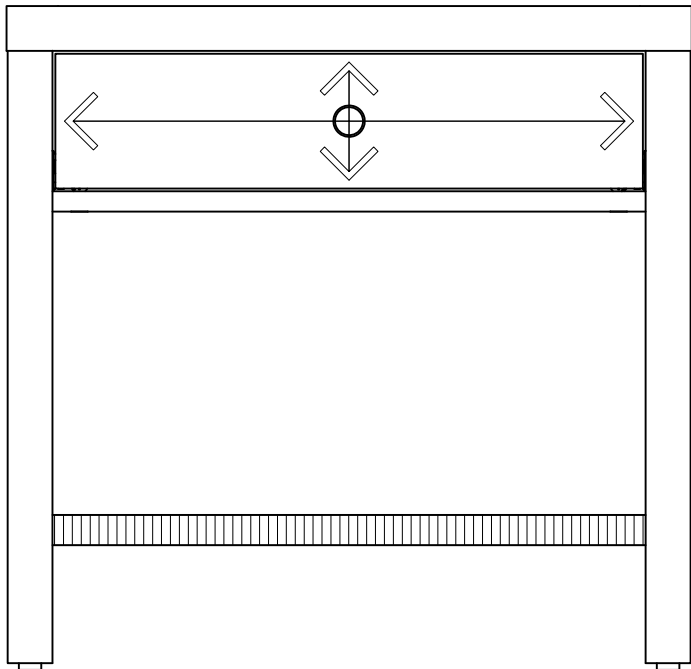


9

Pull the drawer open slowly.

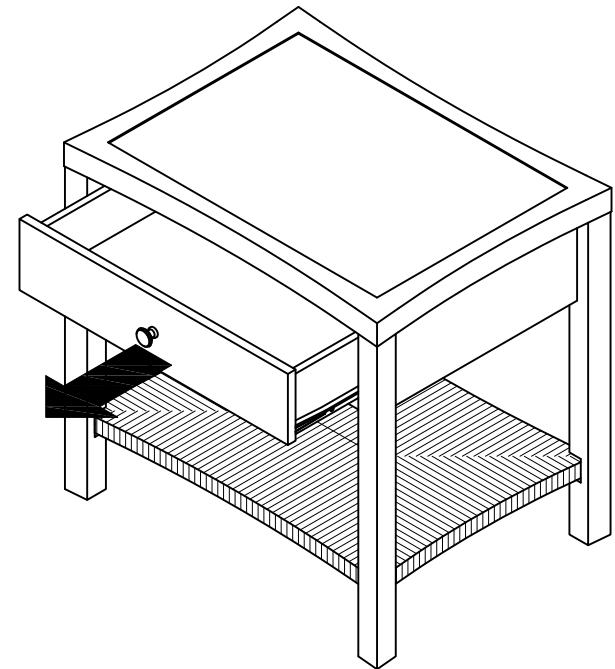


10

Tighten the 2 screws on the back of the drawer front.

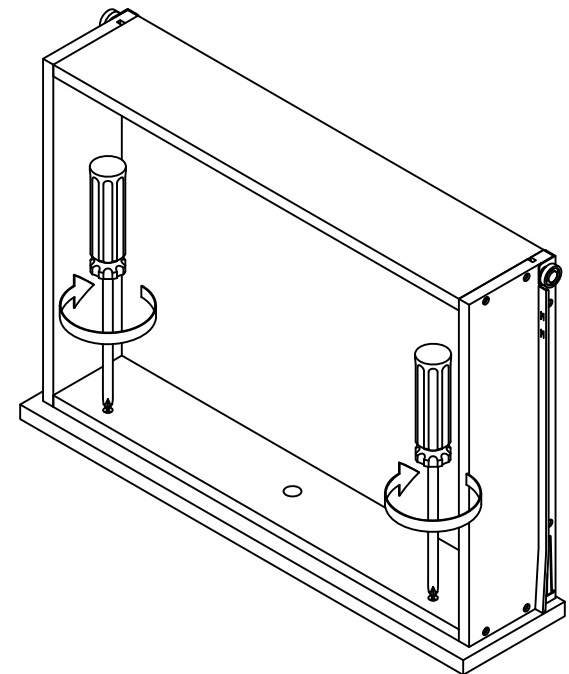

11

Make sure the front drawer panel does not move while you use the screwdriver to screw in the Flat Head Screws (HW3) below the drawer, on the back of the front drawer panel as shown.

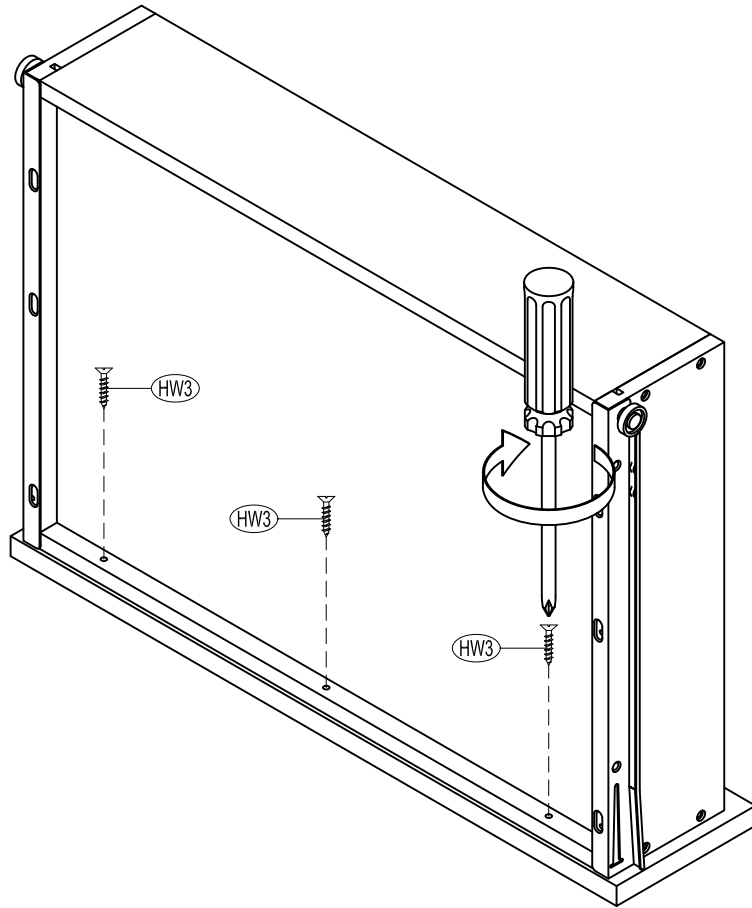

12

Slide the drawer into the table. The product is now ready for use. Place the table in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

