


CARMELO HEMP WRAPPED BENCH

DESIGN# SFV2121

Assembly Instructions

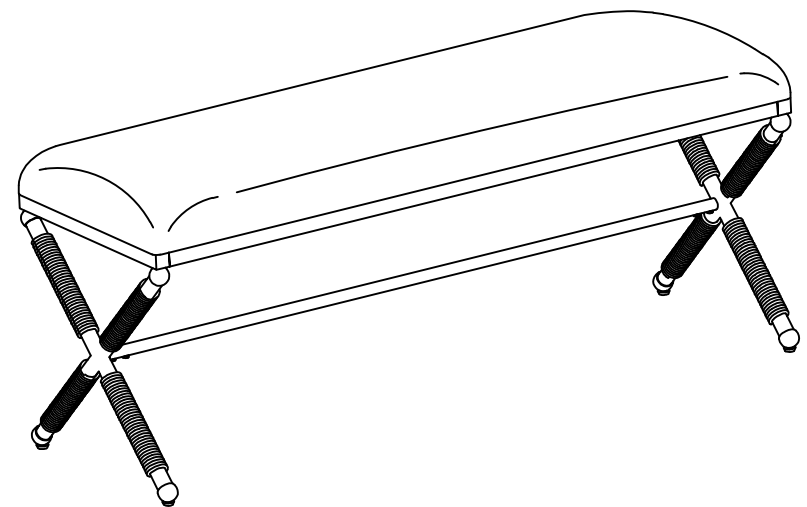

Need help?
Feel free to contact us via email or call
if you have any specific questions!

contact us:
cs@safavieh.com
866-422-9070


SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home


Everything we make is incredibly simple to set up, including your new bench. You won't need any additional tools.

Parts List	Hardware List
A X 1 Seat Cushion	HW1 x 12 Hex Socket Bolt 1/4"-20 x 0.625"
B X 2 Side Frame	HW2 x 8 Wood Screw $\phi 4 \times 18 \text{mm}$
C X 2 Square Connecting Tube	HW3 x 1 Allen Key M4
D X 1 Circular Connecting Tube	

1
Insert the protrusions on the insides of both side frames (B) into the 2 square connecting tubes (C) and the circular connecting tube (D). Align the screw holes on the protrusions to the screw holes on the tubes (B&C). Use the Allen key (HW3) to screw in the 12 Hex socket bolts (HW1).

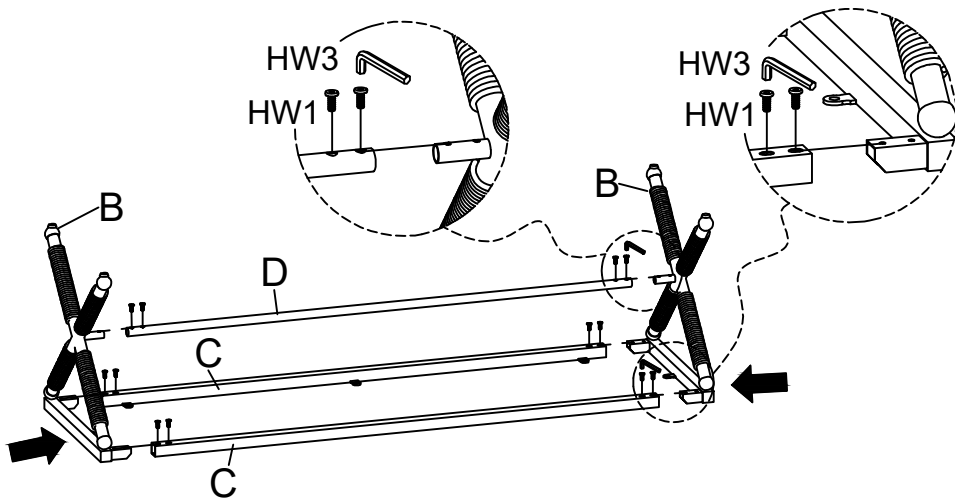

2
Place the seat cushion (A) upside down on a soft surface. Align the tabs on the assembled base to the wood on the bottom of the seat cushion (A). Use a Philips head screwdriver (not included) to screw in the 8 wood screws (HW2).

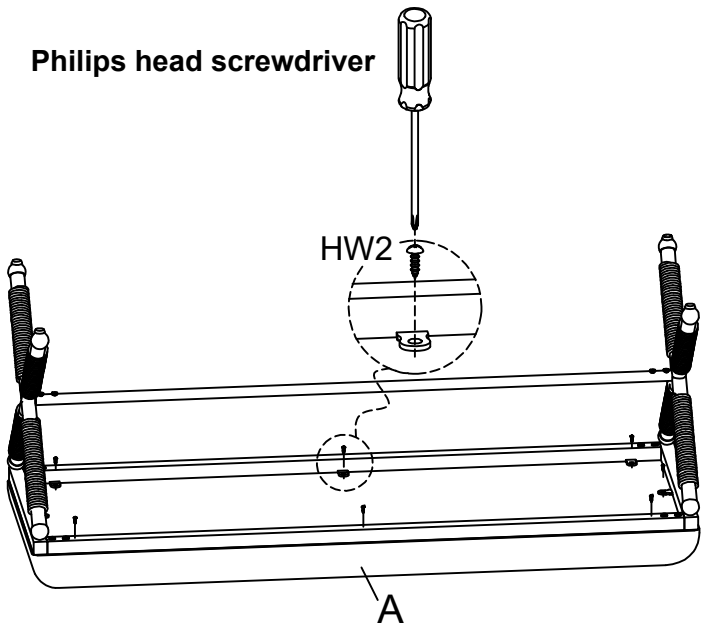

3
Turn the bench upright. Place the bench in the place where you will use it. Adjust the levelers on the bottom of the legs as needed to make the bench level. We'd love to see it - just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

