


CARMELO HEMP WRAPPED OTTOMAN

DESIGN # SFV2122

Assembly Instructions

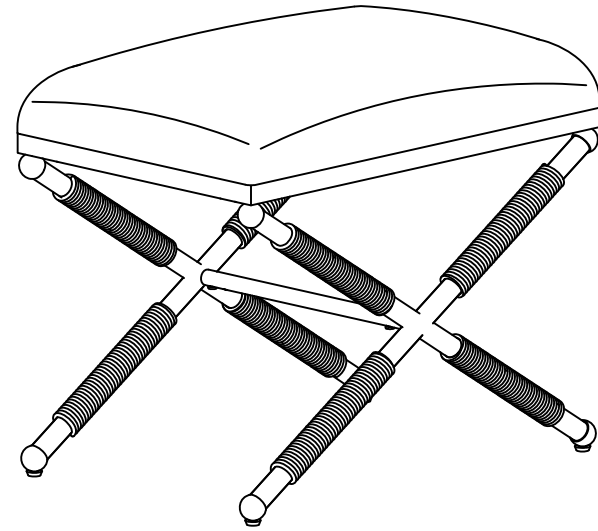

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com

866-422-9070

SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home


Every thing we make is incredibly simple to set up, including your new Ottoman. You won't need any addition tools.

Parts List


A x 1
Seat Cushion




B x 2
Side Frame



C x 1
Circular connecting
Tube



D x 4
Top Frame

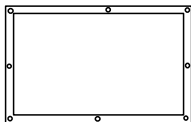

Hardware List

HW1 X4
Allen Bolt
M5 x 12mm



HW2 X4
Wood Screw
Ø4 x 18mm



HW3 X1
Allen Key




HW4 x 2
Allen Bolt
M5 X 6mm




1

Align the screw holes on the Side Frame (B) to the screw holes on the circular connecting tube (C). Use the Allen key (HW3) to screw in the Allen Bolts (HW4). Fully tighten the bolts.

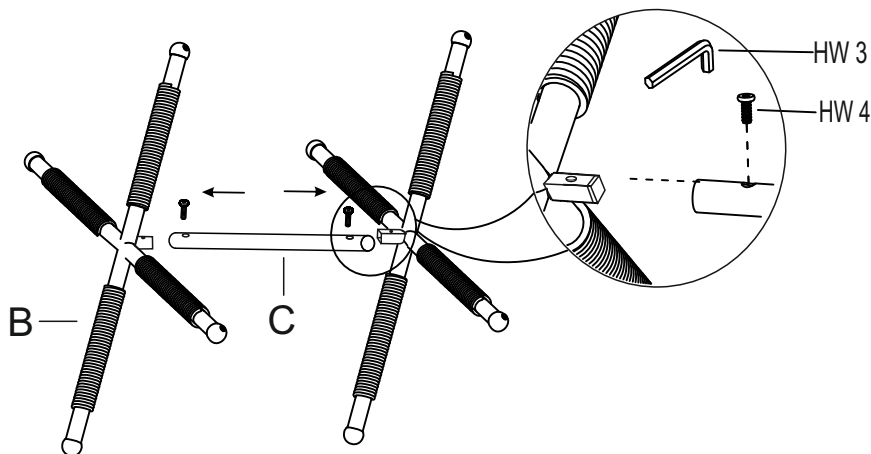

2

Attach the top frame (D) to the Side frame (B). Use the Allen key (HW3) to screw in the Allen Bolts (HW1). Do not fully tighten the bolts.

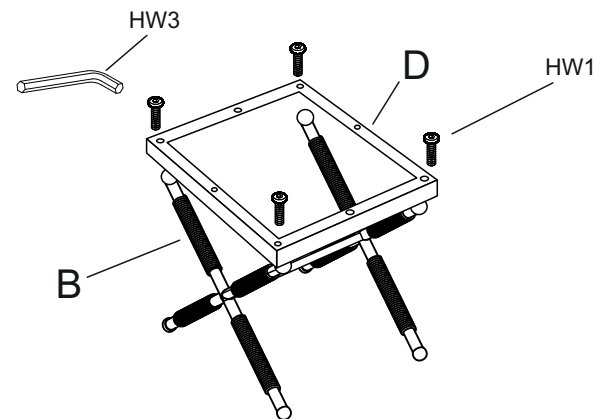

3

Place the Seat Cushion (A) upside down on a soft clean surface. Align the screw holes on the Seat Cushion (A) to the screw holes on the Top Frame (D). Use the Screw driver (not included) to screw in the Wood Screw (HW2). Place the Ottoman in the place where you will use it. We'd love to see it - just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

