


JAYLESSA WOOD 3 DOOR SIDEBOARD

DESIGN#SFV2185

Assembly Instructions

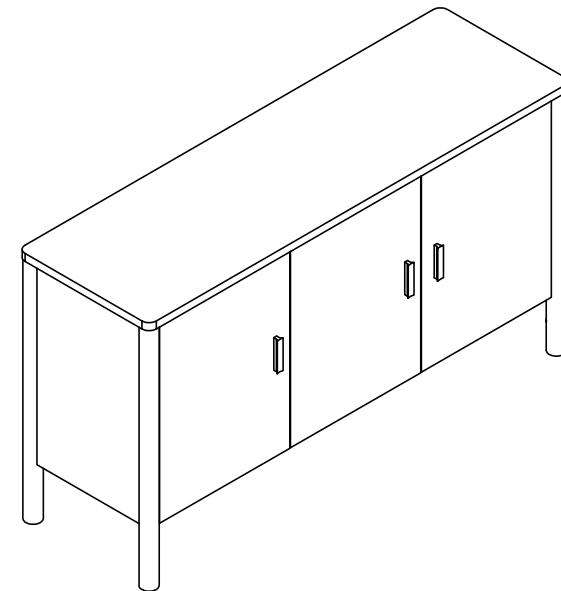

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com

866-422-9070

SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home


Everything we make is incredibly simple to set up, including your new sideboard. You won't need any additional tools.

Parts List

A x 1
Cabinet



B x 4
Leg



C x 1
Support Leg



Hardware List

HW1 x 8
Hex Socket Bolt 1/4"-20 x 1.5"



HW2 x 1
Allen Key M4




HW3 x 2
Anti-Tip Hardware



1

Attach the legs (B) to the cabinet (A) by using the Allen key (HW2) to screw in the hex socket bolts (HW1) as shown. Screw the support leg (C) into the bottom of the cabinet (A).

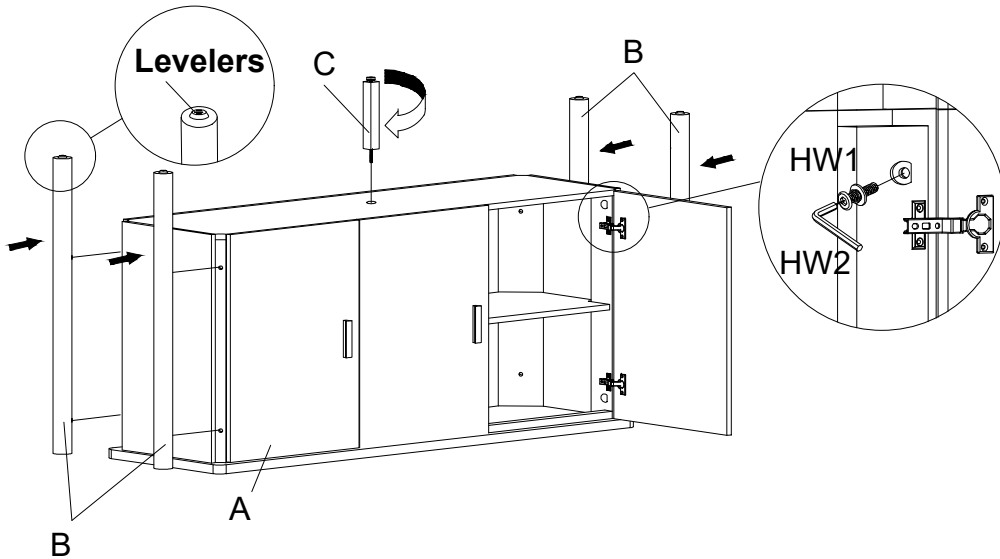

2

Turn the sideboard upright. Use the levelers on the bottom of the legs to adjust the sideboard as needed. Place the sideboard in the position where you will use it. Follow the installation instructions of the anti-tip hardware (HW3) to attach the sideboard to the wall. We'd love to see it -- just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

