

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY	CARTON CALL
A	FRAME		2X	1 OF 2
B	ACRYLIC		4X	1 OF 2
C	GLASS		1X	2 OF 2
HW 1	SOCKET SCREW x M8 x15mm		16X	1 OF 2
HW 2	ALLEN KEY (5#)		1X	1 OF 2
HW 3	RUBBER MAT (Dia 16mmX3mm)		4X	1 OF 2

SAFAVIEH

COUTURE

Model#SFV2526-42

Product Dimensions:42"L x 42"D x 30" H

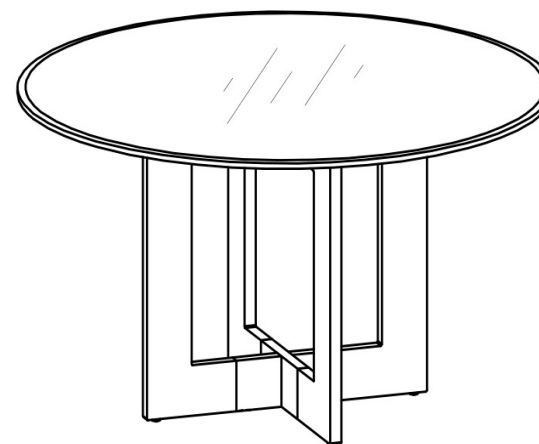

Weight Capacity-110LBS


Warning:Do not stand on Table

Warning:Do not over torque bolts

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

Step 1

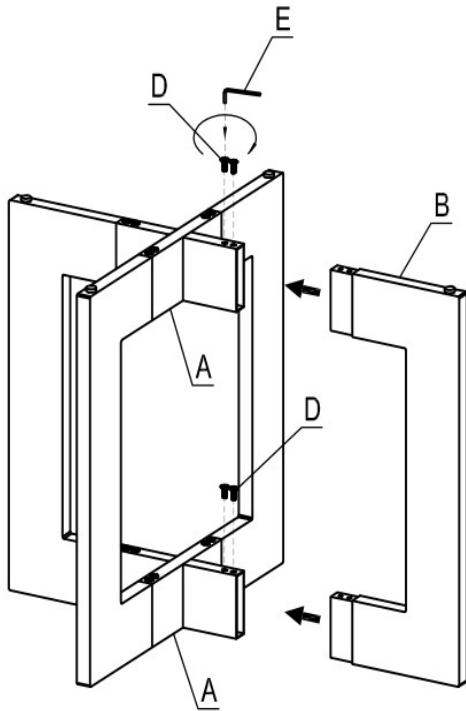

Place the acrylic legs (B) into the frame (A) one leg at a time. Attach the legs to the frame with the socket screws (HW1).

Step 2

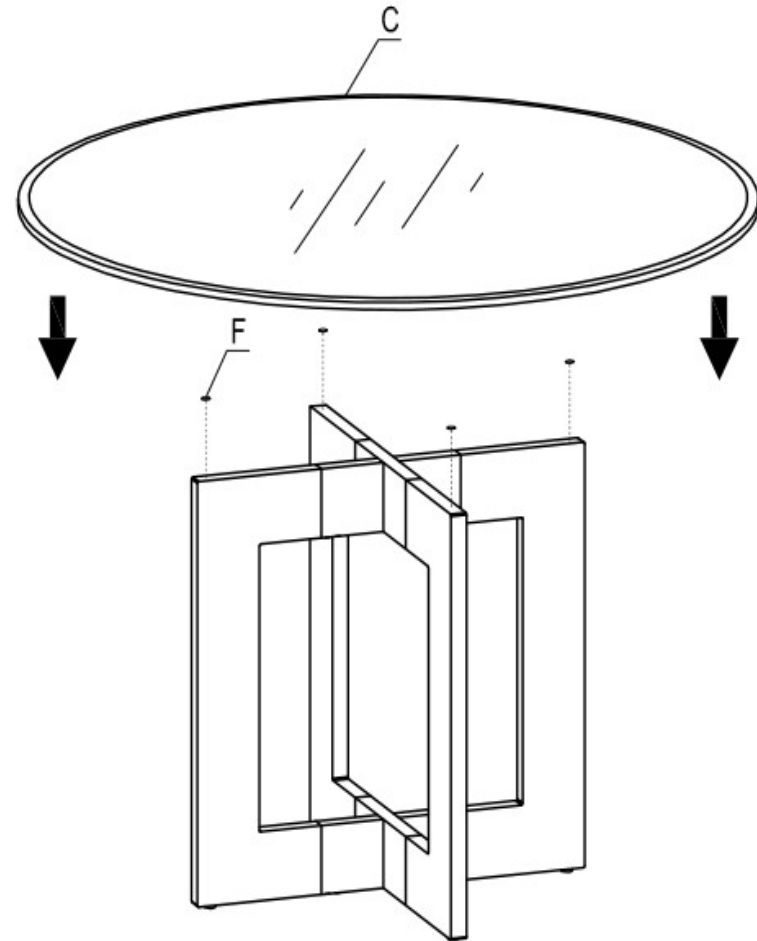

Place the rubber mats (HW3) into the holes. Place the glass on top.