


LORELLA WOOD 60" DESK

DESIGN# SFV4141

Assembly Instructions

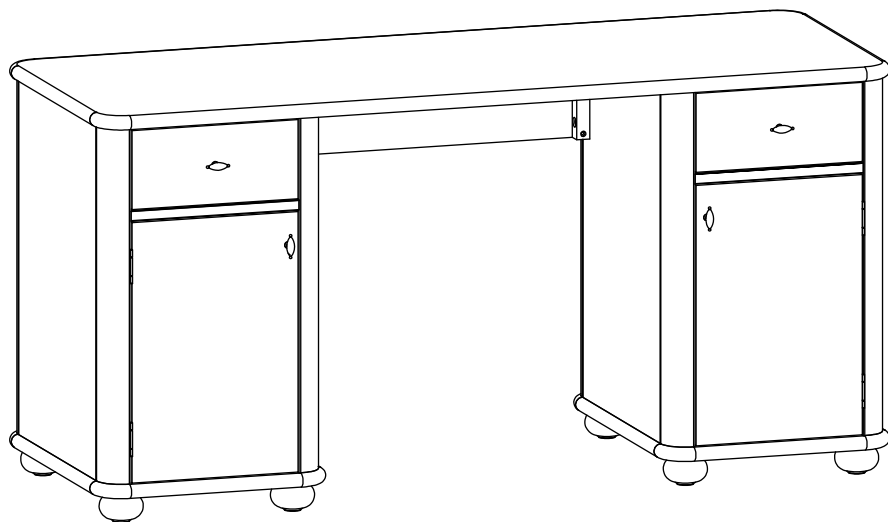


SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home


Everything we make is incredibly simple to set up, including your new desk. You won't need any additional tools.

Parts List

A x 1
Top




B x 1
Left Pedestal

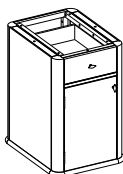


C x 1
Right Pedestal




D x 1
Modesty Panel



E x 2
Shelf




F x 8
Bun Foot



Hardware List

HW1 x 16
Socket Bolts 6x1.0x30mm




HW2 x 16
Split Lock Washer 6mm




HW3 x 16
Flat Washer 6mm



HW4 x 8
Wooden Dowel Ø10x30mm



HW5 x 8
Shelf Pin



HW6 x 8
Protective Felt Pad




HW7 x 1
Allen Key




1

Remove the Left and Right Pedestals (B&C) from the boxes and then remove the drawers from the pedestals.

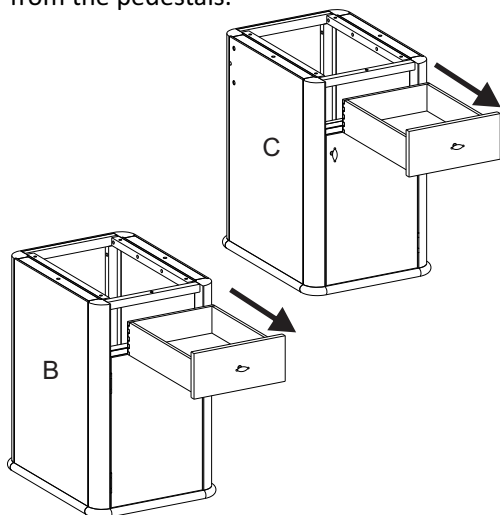**2**


Lay the Left and Right Pedestals (B&C) on their backs on a soft and clean surface. Screw in the Bun Feet (F) into the pedestals in a clockwise direction.

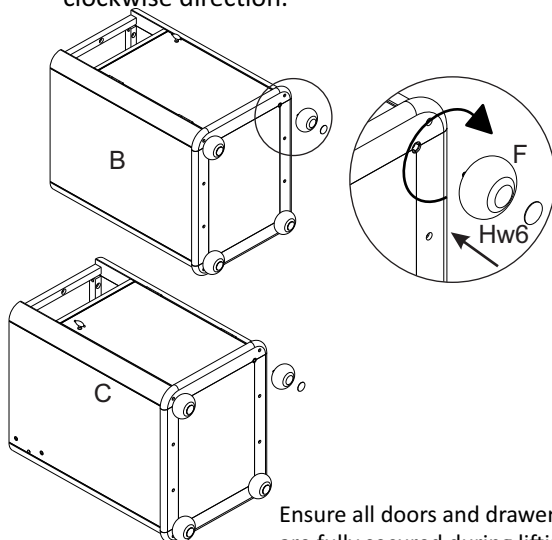

Ensure all doors and drawers are fully secured during lifting.


3

Insert the Wooden Dowels (HW4) into the 2 ends of the Modesty Panel (D). Insert the other ends of the Wooden Dowels (HW4) into the dowel holes on the Left & Right Pedestals (B&C) as shown below. Place the Split Lock Washer (HW2) and the Flat Washer (HW3) on the Socket Bolts (HW1) in the order shown below. Use the Allen Key (HW7) to screw in the bolts in the 4 bolt holes shown below. Wait until all bolts are inserted to fully tighten the bolts.

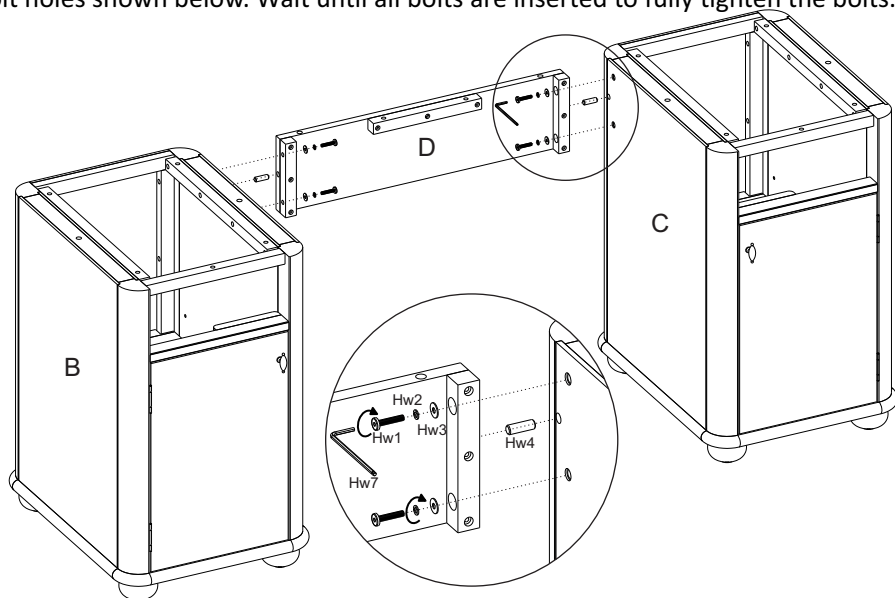


4


Insert the Wooden Dowels (HW4) into the 4 dowel holes on the Left & Right Pedestal's (B&C) tops and into the 2 dowel holes on the top of the Modesty Panel (D). Align the dowel holes underneath the Top (A) with the dowels and place the Top (A) onto them. Place the Split Lock Washer (HW2) and the Flat Washer (HW3) on the Socket Bolts (HW1) in the order shown below. Use the Allen Key (HW7) to screw in the bolts into all the bolt holes shown below to attach the Top (A) to the assembled base. Wait until all bolts are inserted to fully tighten the bolts.

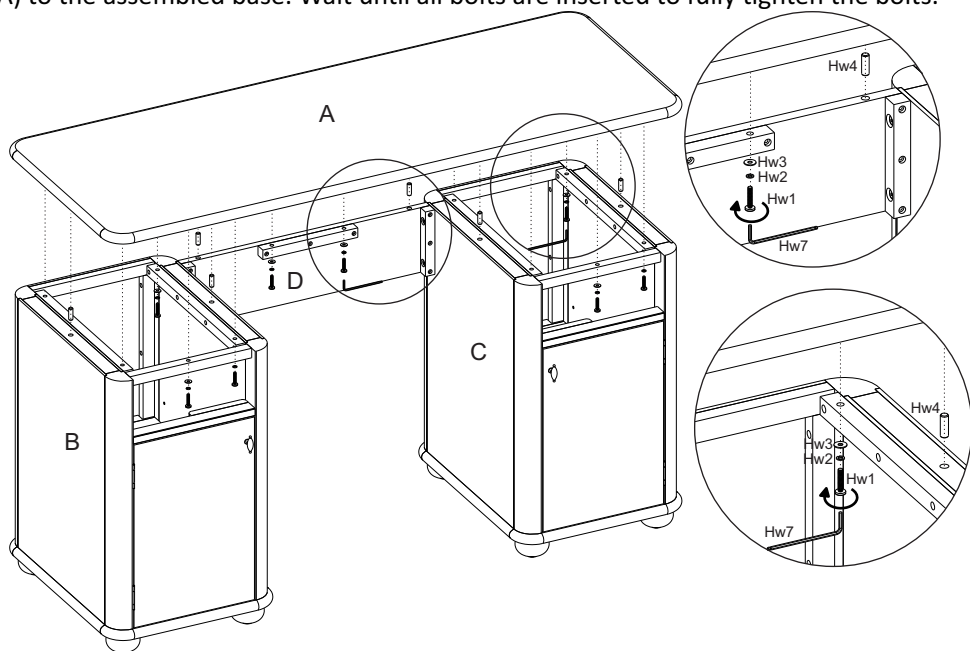**5**

Insert the Shelf Pins (HW5) into the holes inside the Left & Right Pedestals (B&C). Make sure they are placed at the same height to keep the shelf straight. Place the Shelf (E) onto the Shelf Pins (HW5).

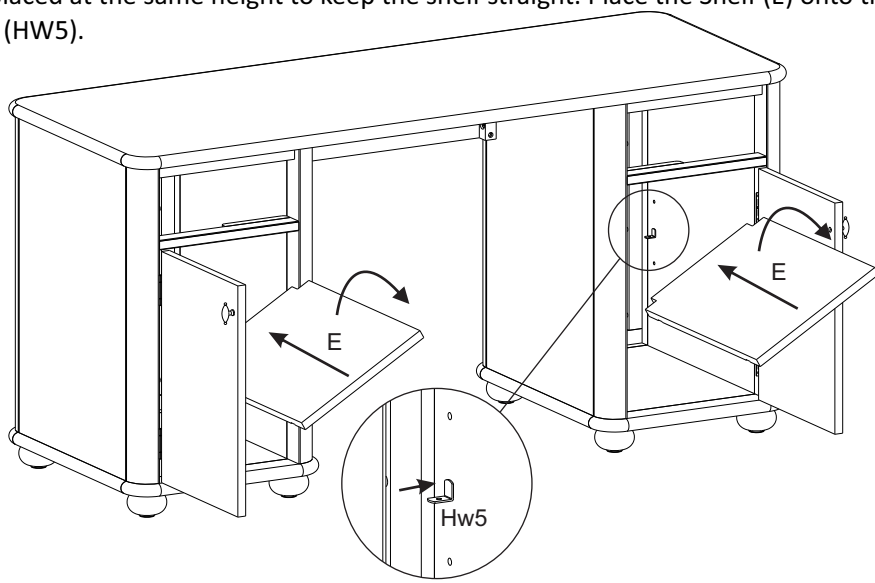


Insert the 2 drawers back into the Pedestals

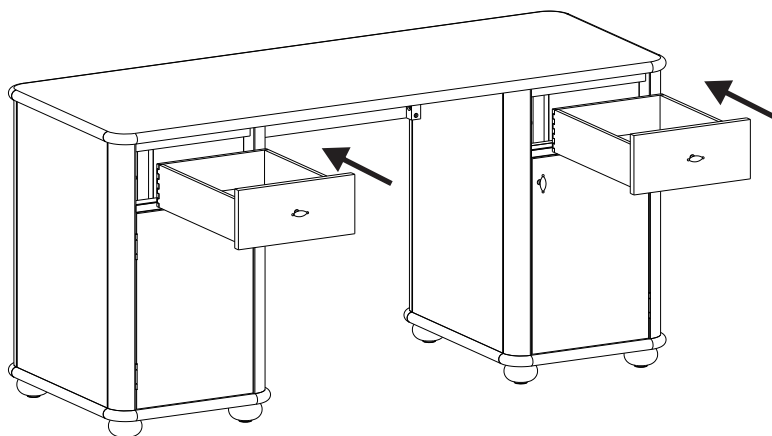

Place the desk in the place you will use it. We'd love to see it - just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

@safavieh

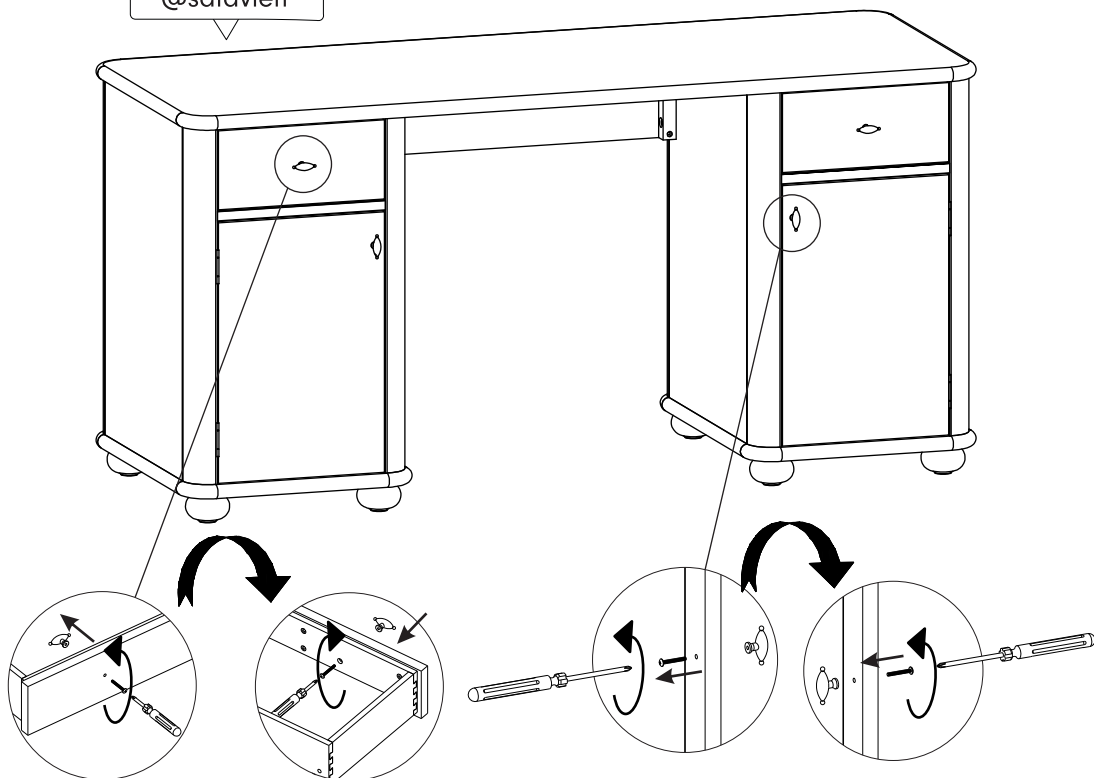

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com

866-422-9070