

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

- * Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
- * The use of steam or water-based cleaners may cause excessive shrinking or staining.

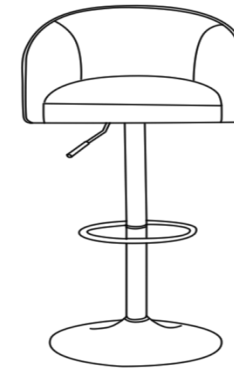
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat		1X
B	Chassis		1X
C	Pedal		1X
D	Air Bolt Pole		1X
HW1	Split Lock Washer(M8)		4X
HW2	Flat Washer(M8)		4X
HW3	Socket Screws 8 *1.25*30MM		4X
HW4	Allen Key		1X

SAFAVIEH COUTURE

Model#: SFV4710

Dimensions:21.3"*21.3"*35.4"~43.7"



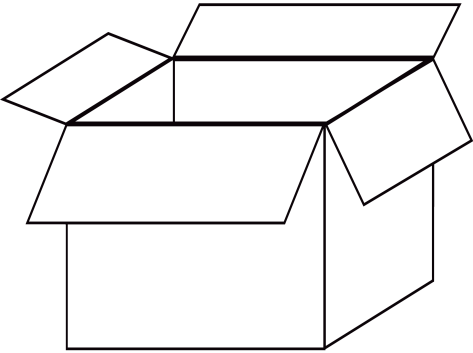
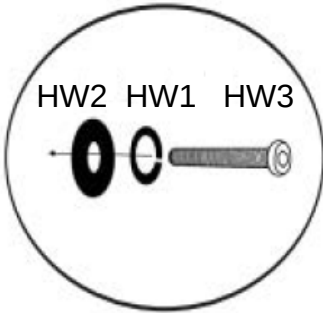
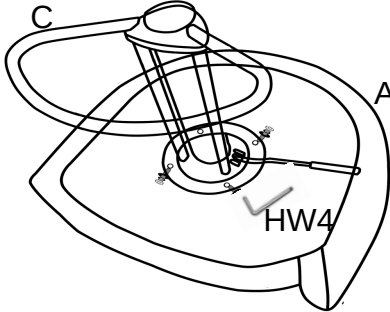
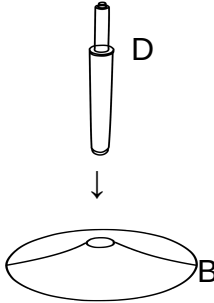

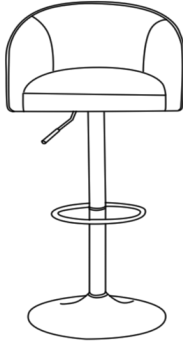
Weight Capacity: 275 lbs

Warning: Do not stand on Chair

Warning: Do not over torque bolts

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

		
STEP1 OPEN THE CARTON BOX AND TAKE OUT BASE AND HARDWARE	STEP2 PUT THE WASHERS ON THE BOLT IN THE ORDER SHOWN IN THE PICTURE	STEP3 INSERT THE PEDAL AND SCREW IN THE BOLTS. REPEAT THE SAME STEPS FOR THE OTHER THREE.
		
STEP4 PUT THE AIR BOLT POLE INTO THE CHASSIS WOLE, IT WILL CONNECT FIRMLY ONCE SOMEONE SITS AFTER FINISHED	STEP5 PUT THE FINISHED PERT OF STEP3 AND STEP4 TOGETHER, IT WILL CONNECT FIRMLY ONCE SOMEONE SITS AFTER FINISHED	STEP6 FINISHED.