


CASSIETTE WOOD COFFEE TABLE

DESIGN # SFV8303A

Assembly Instructions

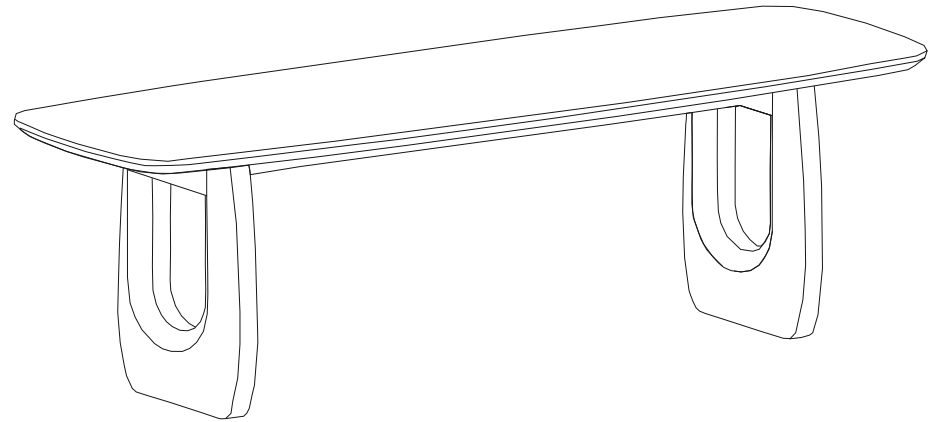

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com


866-422-9070

SAFAVIEH
C O U T U R E


Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up, including your new bar cart. You won't need any additional tools.


1. Place the legs (B) upright. Align the holes on the plate (D) to the holes on the legs (B).

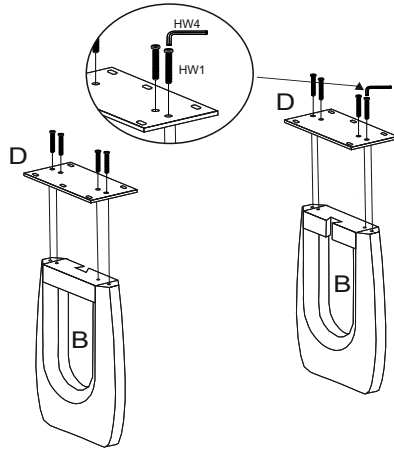


2. Attach the plate (D) to the legs (B) by using the Allen Key (HW4) to screw in the Allen Bolts (HW1). Fully tighten.

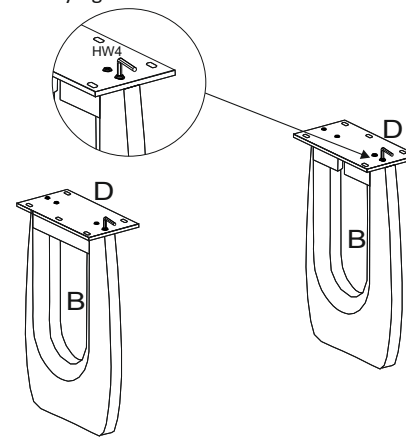


3. Turn the assembled legs upside down. Align the holes on the support bar (C) to the holes on the legs as shown.

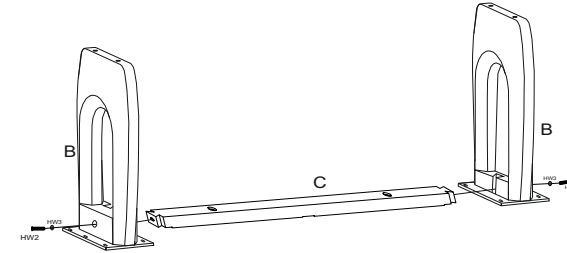


4. Attach the support bar (C) to the assembled legs by placing the Flat Washers (HW3) onto the Allen Bolts (HW2) and using the Allen Key (HW4) to screw in the Bolts. Fully tighten.

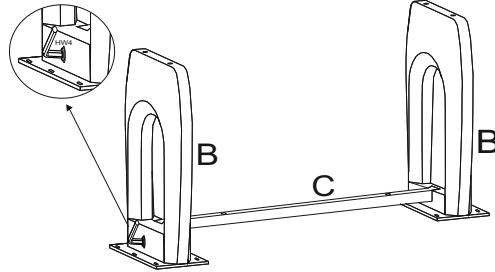


5. Place the top (A) upside down on a soft surface. Align the holes on the plates on the assembled legs to the holes on the top (A).

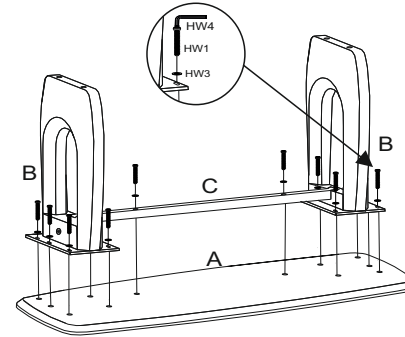

6. Attach the assembled legs to the top (A) by placing the Flat Washers (HW3) onto the Allen Bolts (HW1) and using the Allen Key (HW4) to screw in the Bolts. Fully tighten.

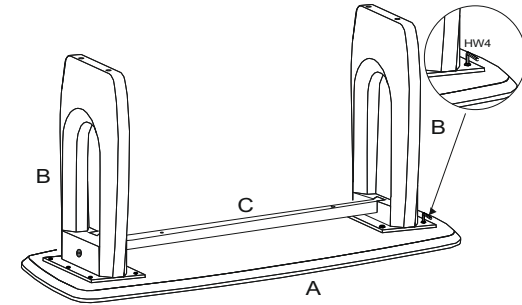


7. Attach the assembled support to the top (A) by placing the Flat Washers (HW3) onto the Allen Bolts (HW2) and using the Allen Key (HW4) to screw in the Bolts. Fully tighten.

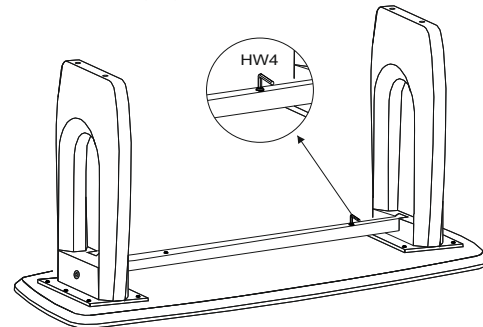

8. Turn the table upright. Your product is now ready for use.

we'd love to see it — just tag us
(we're @safavieh) and use the hashtag
#safavieh on Instagram!

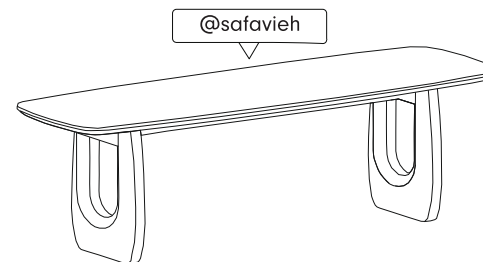

Parts & hardware

A x 1

Top



B x 2

Leg




C x 1

Support



D x 2

Plate




HW1 x18

Allen Bolt (20x8mm)



HW2 x 4

Allen Bolt (50x8mm)



HW3 x 14

Flat Washer (20x8mm)



HW4 x 1

Allen Key (5mm)

