
BERNARDI MARBLE TOP CONSOLE TABLE

DESIGN# SFV9745

Assembly Instructions

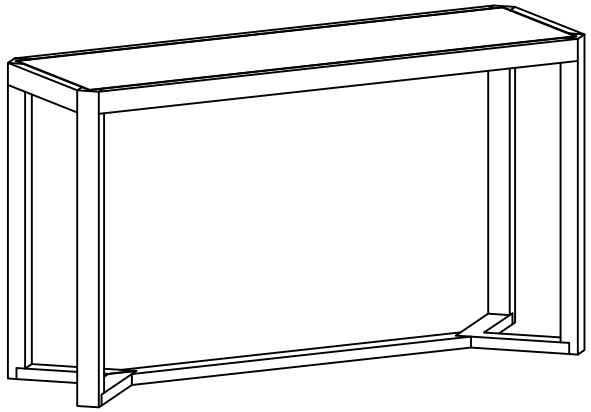

SAFAVIEH
COUTURE

Need help?
Feel free to contact us via email or call if you have any specific questions!


Contact us:
cs@safavieh.com
866-422-9070

Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up, including your new coffee table.

Parts List

A X 1
Marble Top



B X 4
Vertical Support



C X 1
Top Wooden Frame



D X 1
Bottom Wooden Frame



Hardware List

HW1 X 1
ALLEN KEY 5mm



HW2 X 4
JCB BOLT 8X40mm



HW3 X 8
FLAT WASHER 8X25mm



HW4 X 4
SH BOLT 8X60mm



HW5 X 1
ALLEN KEY 6mm



HW6 X 2
WALL CLIP



HW7 X 2
ZIP TIE



HW8 X 2
SCREW (4X35mm)




HW9 X 2
SCREW PLUG




1

Place the Top Wooden Frame (C) upside down on a flat, clean and soft surface. Place the Flat Washers (HW3) on the SH Bolts (HW4). Align the holes on the Vertical Supports (B) to the holes on the bottom of the Top Wooden Frame (C). Use the Allen Key (HW5) to screw in the Bolts to attach the Vertical Supports (B) to the Top Frame (C). Repeat for the rest of the Vertical Supports (B).

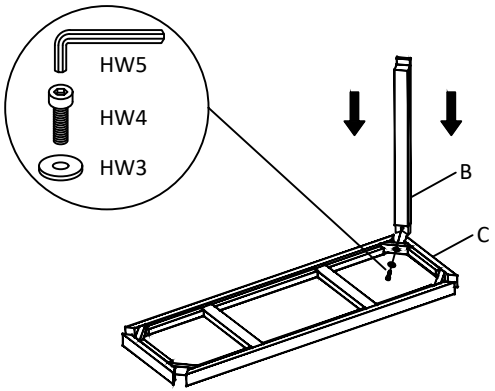


2

Align the screw holes on the Bottom Wooden Frame (D) to the screw holes on the other end of the Vertical Supports (B). Place the Flat Washers (HW3) on the JCB Bolts (HW2). Use the Allen Key (HW1) to screw in the JCB Bolts (HW2) with the Washers (HW3) as shown.

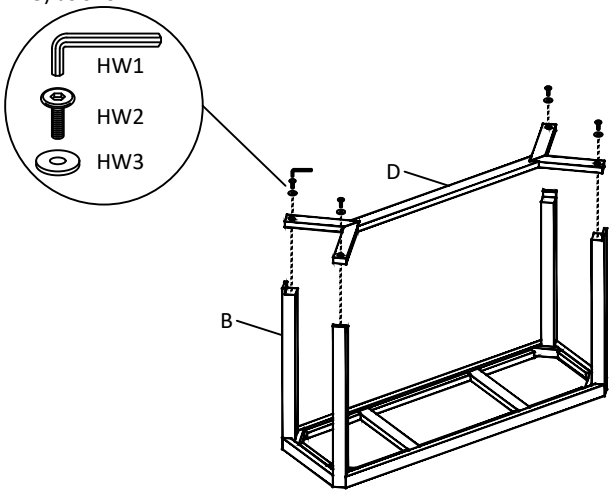

3

Turn the assembled base upright. Place the assembled base at your desired location and gently slide the Marble Top (A) into place as shown.

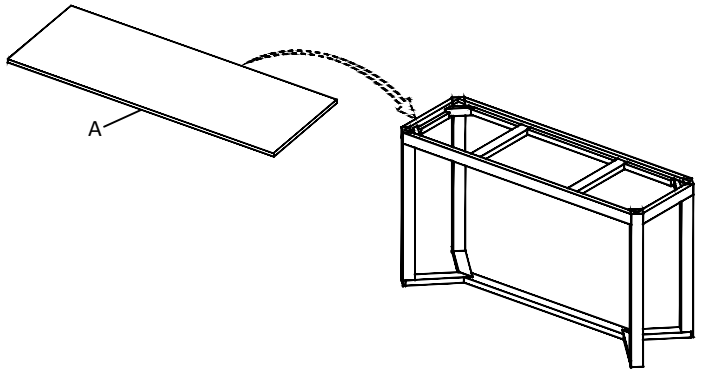

4

Screw the Wall Clip (HW6) to the wall by using a Philips Head Screwdriver to screw in the Screws (HW8) and the Screw Plugs (HW9) as shown below. Use the Zip Tie (HW7) to attach the product to the Wall Clip on the wall. We'd love to see it - just tag us (We're @safavieh) and use the hashtag #safavieh on Instagram.

