
SAINT LUCIA REEDED TEAK WOOD SWIVEL PATIO CHAIR

DESIGN # CPT1071

Assembly Instructions

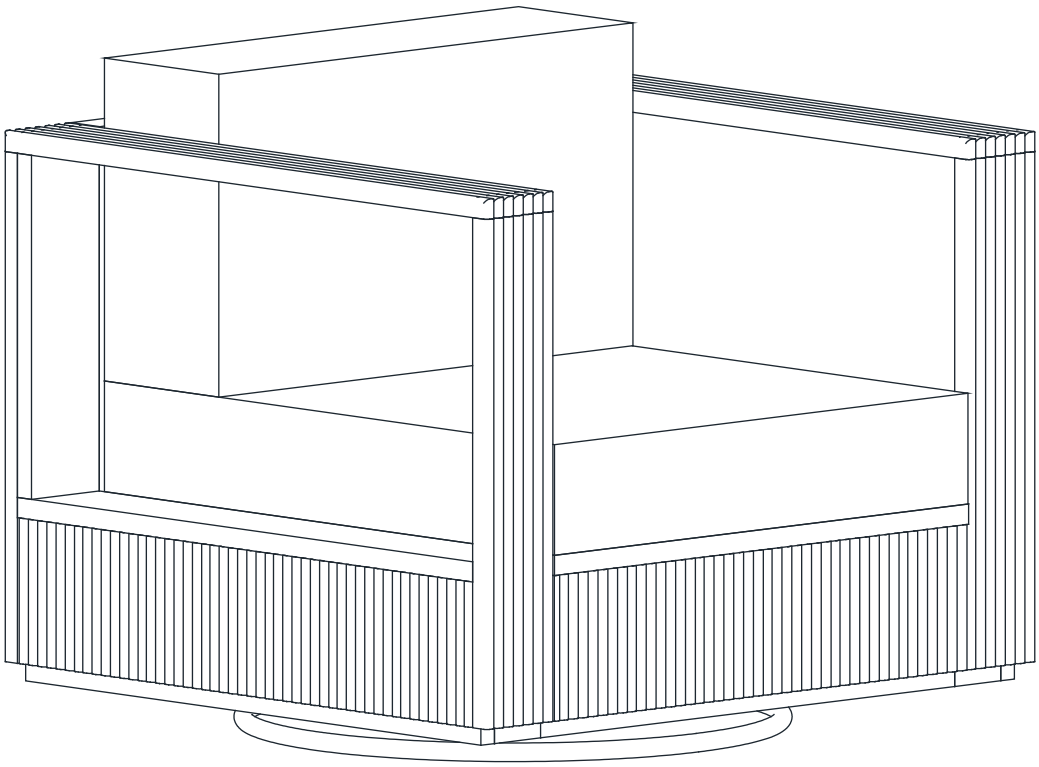


SAFAVIEH COUTURE

Thanks for bringing Safavieh Couture into Your home


Every thing we make is incredibly simple to set up, including your new chair. You won't need any additional tools.

Parts List


A x 1
Right leg Panel




B x 1
Left leg Panel




C x 1
Front panel




D x 1
Back panel




E x 1
Seat panel

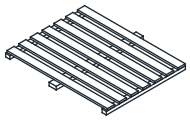


F x 1
Support Swivel 1




G x 1
Support Swivel 2

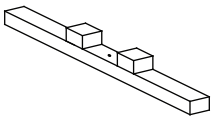

CSH1 x 1
Seat Cushion



CSH2 x 1
Back Cushion



Hardware List

HW1 x 8
Allen Bolt: M6x0.5x35 mm



HW2 x 2
Allen Screw: M6x0.5x35 mm




HW3 x 4
Allen Screw: M6x0.5x20 mm



HW4 x 5
Allen Screw: M6x0.5x50 mm



HW5 x 1
Swivel Basel




HW6 x 1
Allen key




1

Attach Front panel (C), and Back panel (D) to Right leg Panel (A) ,use Bolt (HW1) tighten with allen key (HW6).in the spots shown below.

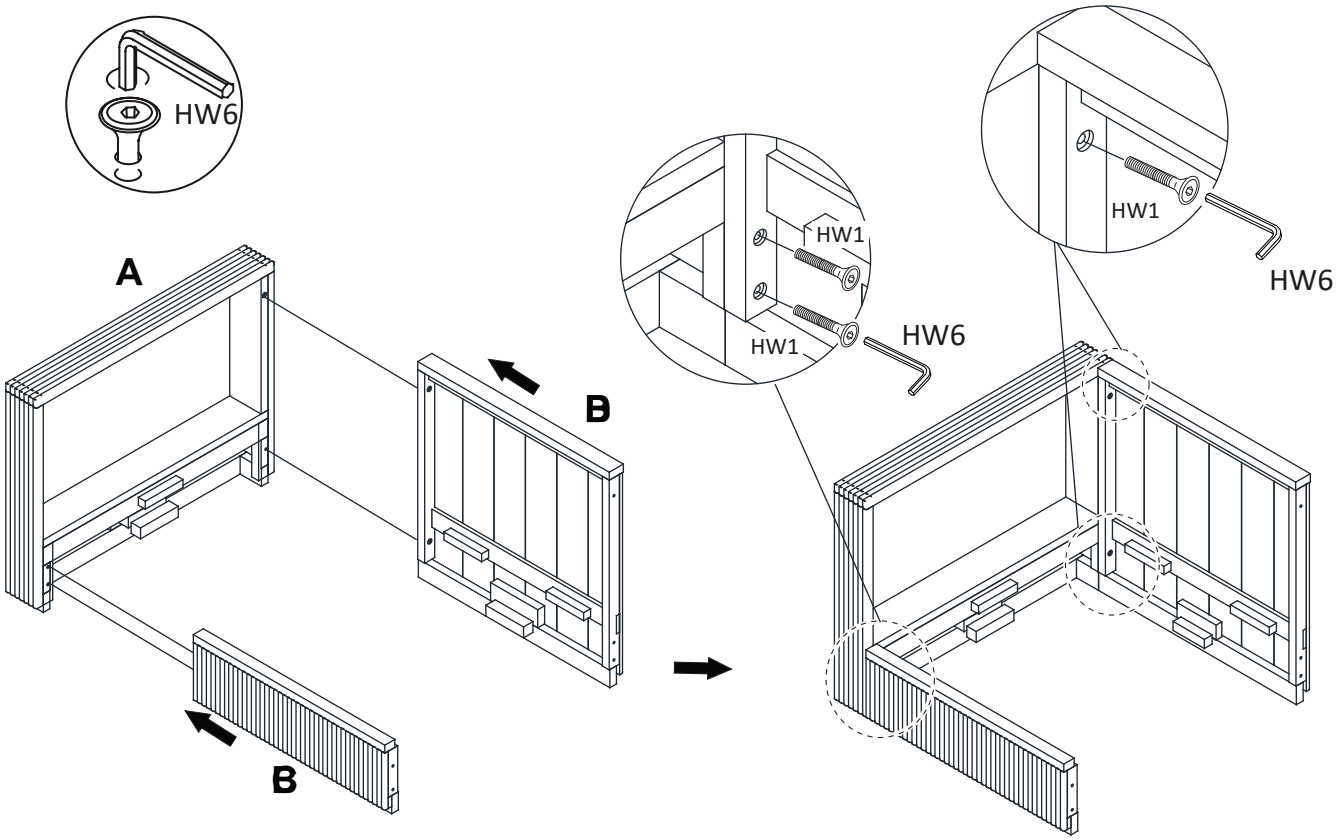


2

Attach Left leg Panel (B) to Front panel (C) and Back panel(D),use Bolt (HW1) tighten with allen key (HW6).in the spots shown below.

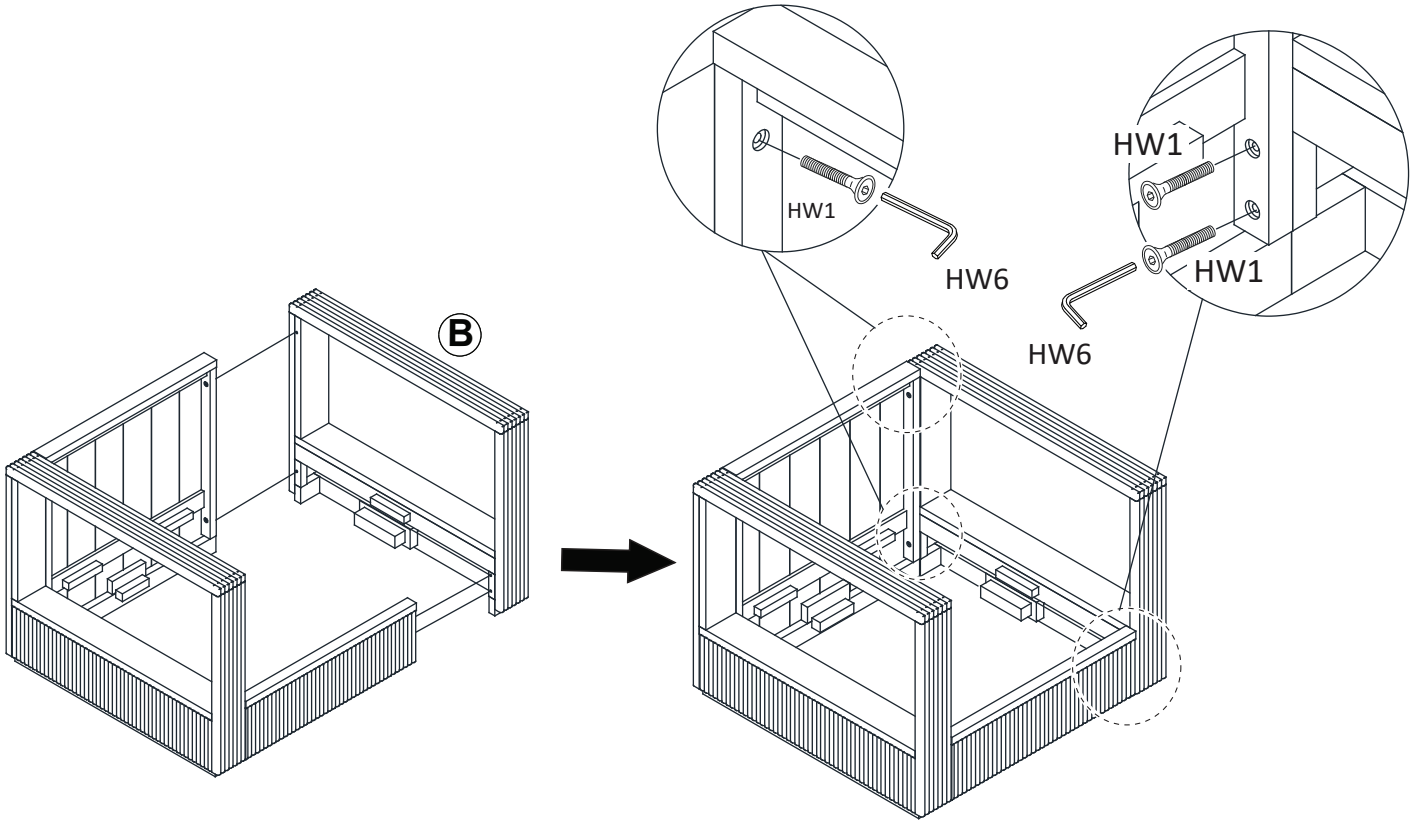


3

Attach Seat panel (E) to ArmChair .Use Screw (HW2) tighten with allen key (HW6).
in the spots shown below.

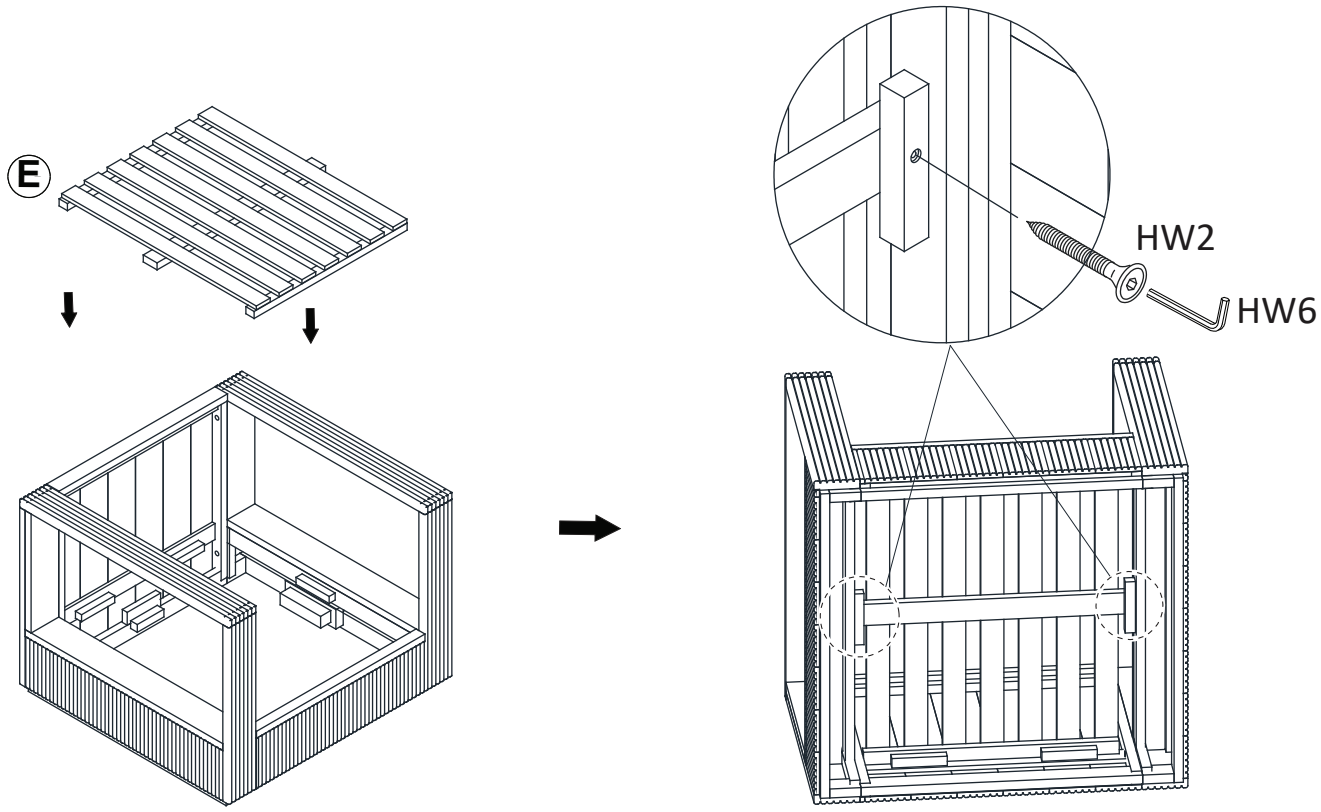


4

Attach Support Swivel 1 (F) to Support Swivel 2 (G), use Screw (HW4) tighten with allen key (HW6).
in the spots shown below.

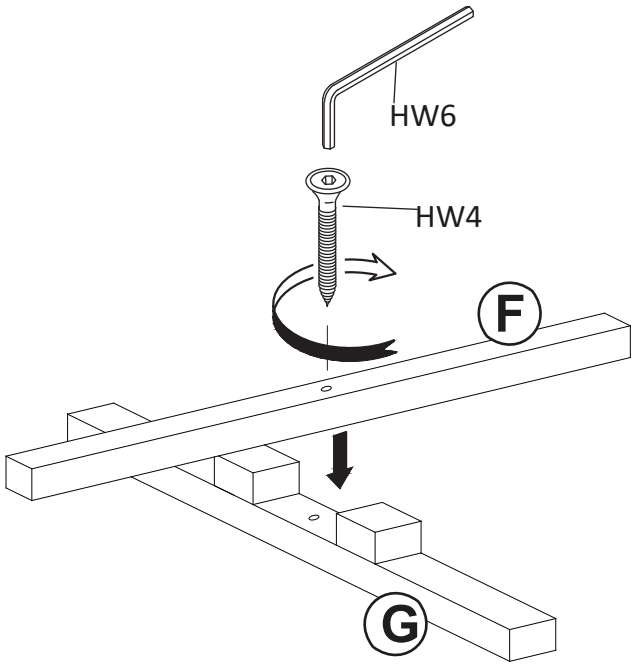


5

Upside down the assembled part in Step 3 and attach assembled part in Step 4 to the assembled part in Step 3 by using Screws (HW4) and the Allen key (HW6).

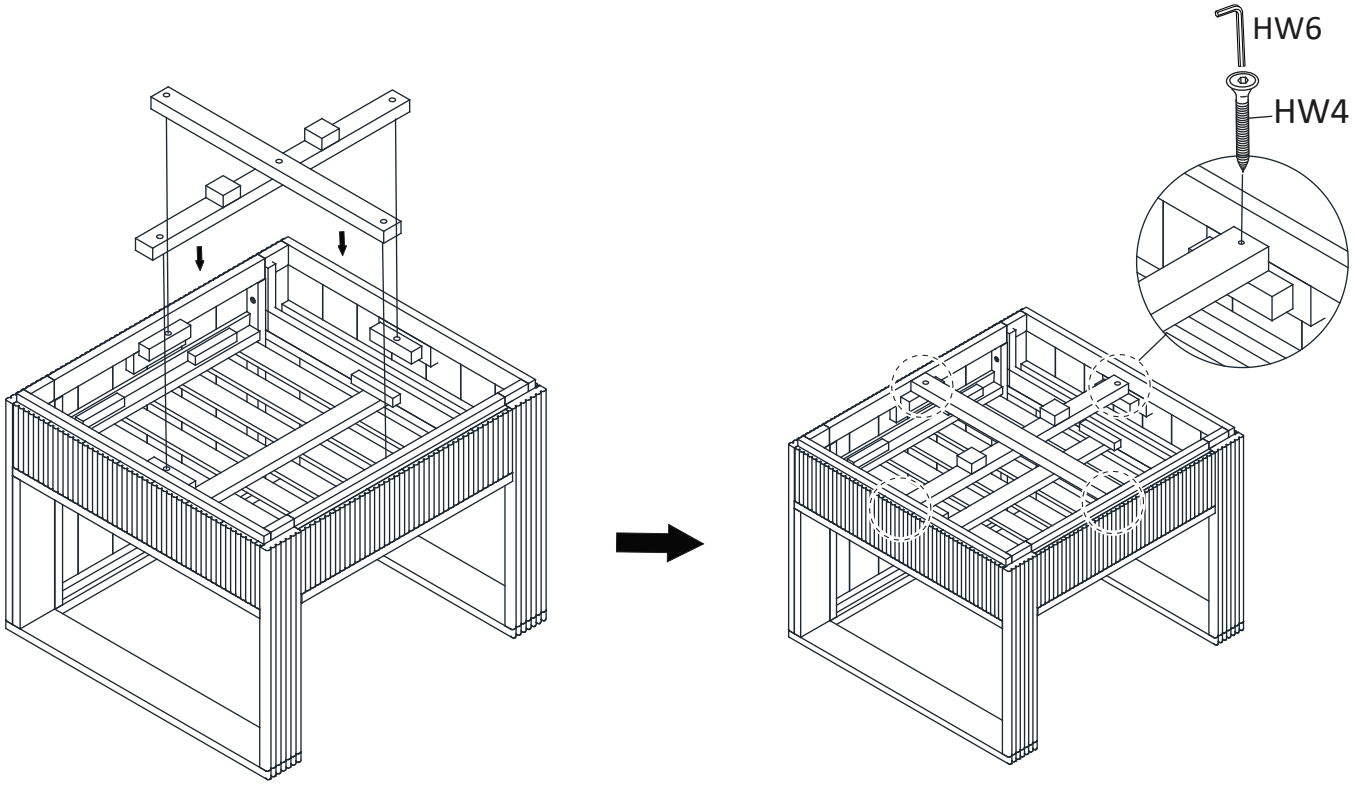


6

Attach the Swivel Base (H) to the assembled part in Step 5 by using Screws (HW3) and the Allen key (HW6)

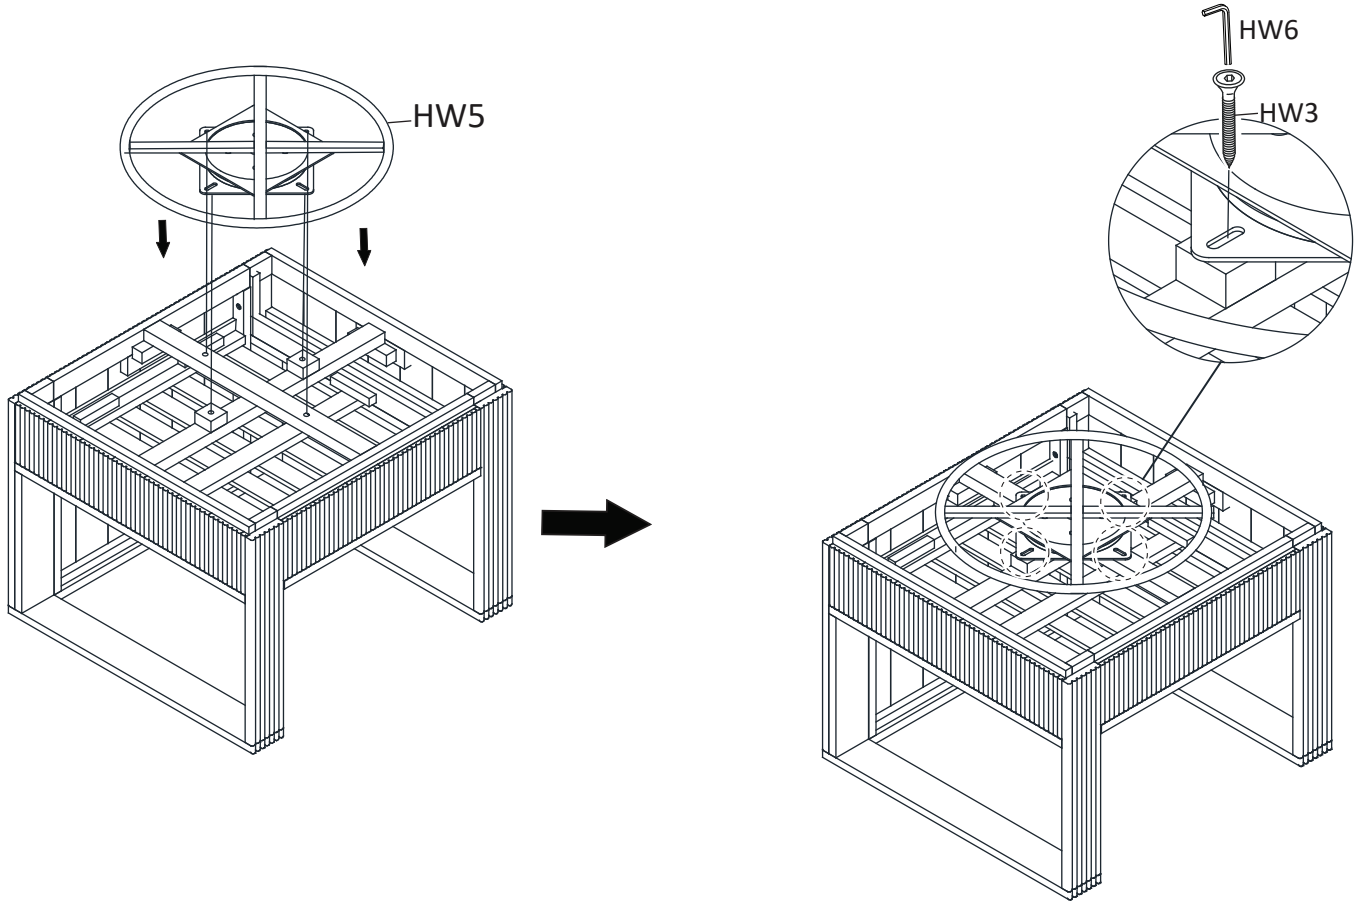


7

Attach Seat Cushion (CSH1) and Back Cushion (CSH2) in Chair.

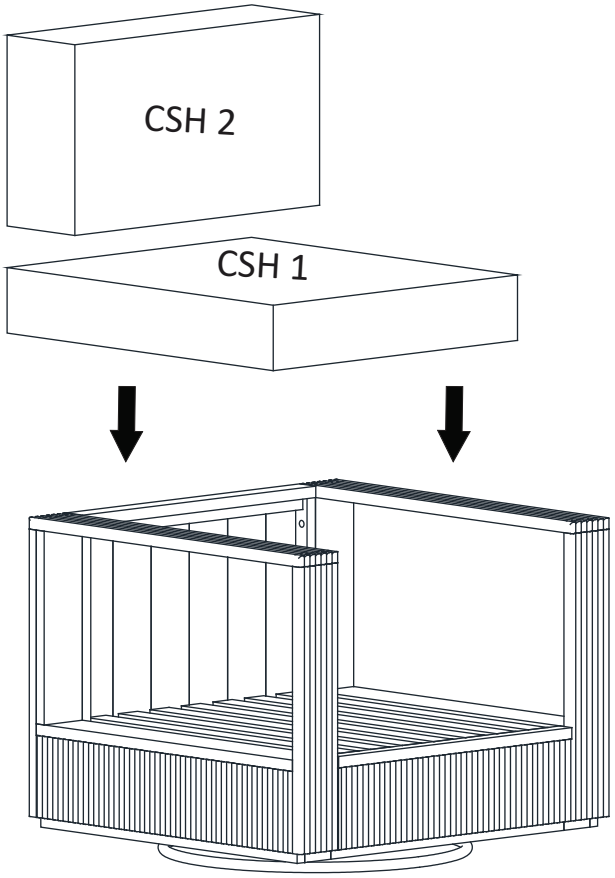

8

Place the chair in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

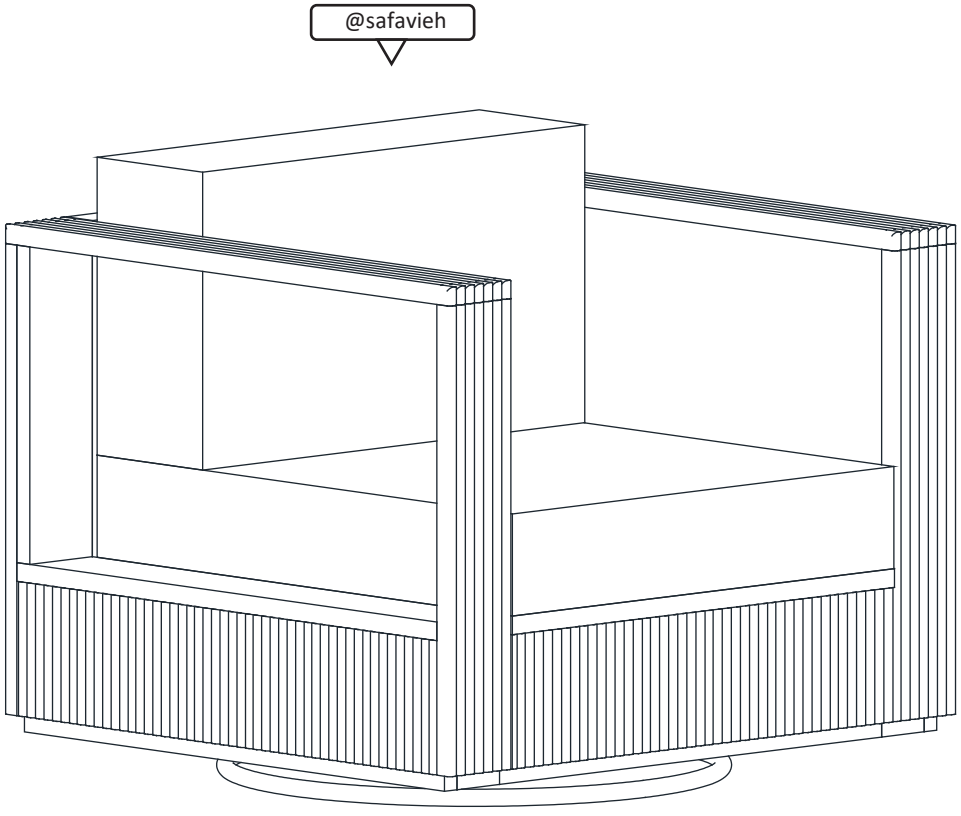

Need help?
Feel free to contact us via email or call
If you have any specfic question!

Contact us:

CS@safavieh.com
866-422-9070