
BAR CART

DESIGN # CPT2108A

Assembly Instructions

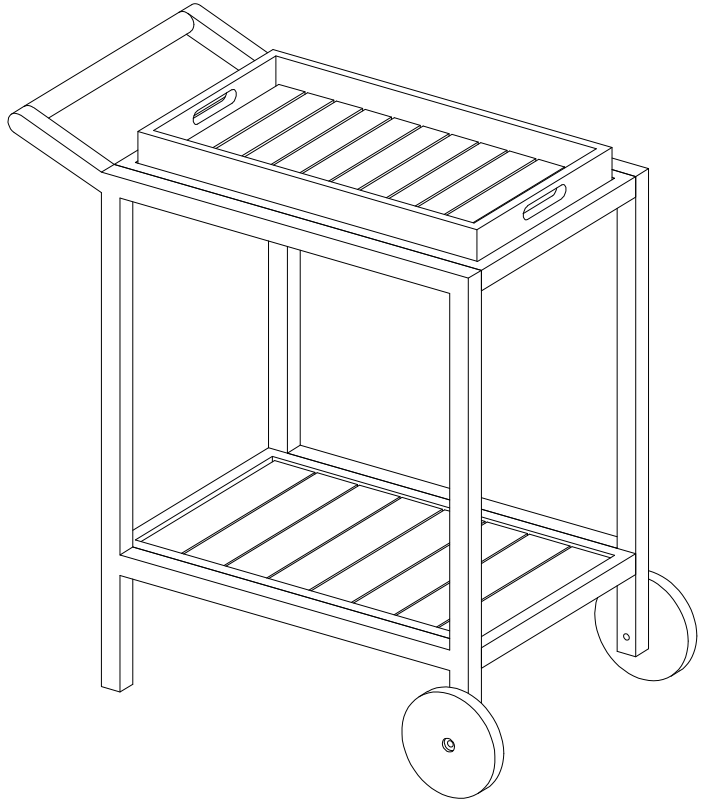

Need help?
Feel free to contact us via email or call if you have any specific questions!

contact us:
cs@safavieh.com
866-422-9070


SAFAVIEH COUTURE

Thanks for bringing Safavieh Couture into your home


Everything we make is incredibly simple to set up, including your new bar cart. You won't need any additional tools.

Parts List


A x1
LEFT LEG




B x1
RIGHT LEG



C x2
METAL TOP AND BOTTOMTRAY



D x1
WOOD TOP OR BOTTOMTRAY



E x1
AXLE

F x2
WHEEL



Hardware List

Hw1 x8
Allen bolt M6x40mm



Hw2 x2
Allen bolt M8x70mm



Hw3 x2
Allen bolt M6x70mm



Hw4 x2
Nut M8



Hw5 x2
Plastic Washer M8x10



Hw6 x2
Plastic Washer M8x2




Hw7 x4
Flat Washer M8




Hw8 x8
Flat Washer M6



Hw9 x1
Allen Key




Hw10 x1
Wrench Key




1

Assemble Metal top and bottom tray (C) into Left leg (A) by using Bolt (Hw1) and Flat washer (Hw8), tighten by Allen key (Hw9) as shown.

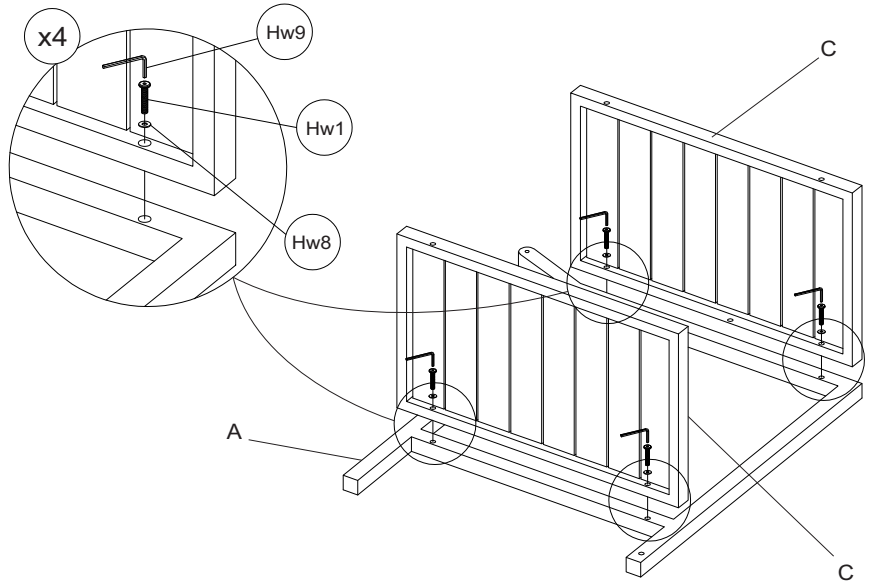


2

Attach Right leg (B) to Metal top & bottom tray (C) and Left leg (A) by using Bolt (Hw1) and Flat washer (Hw8), tighten by Allen key (Hw9) as shown.

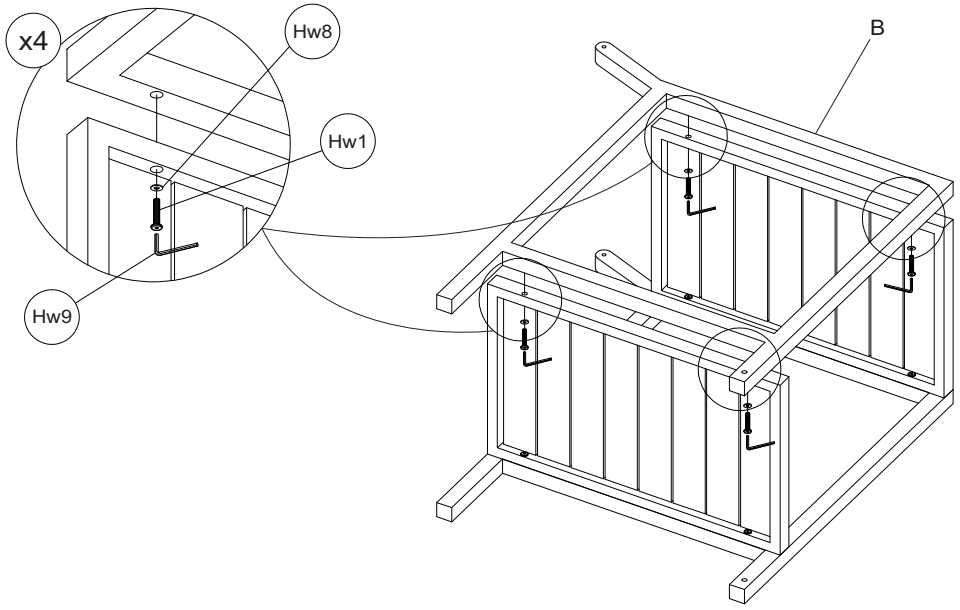


3

Connect Axle (E) with top horizontal bars of legs by using Bolt (Hw3), tighten by Allen key (Hw9) as shown.

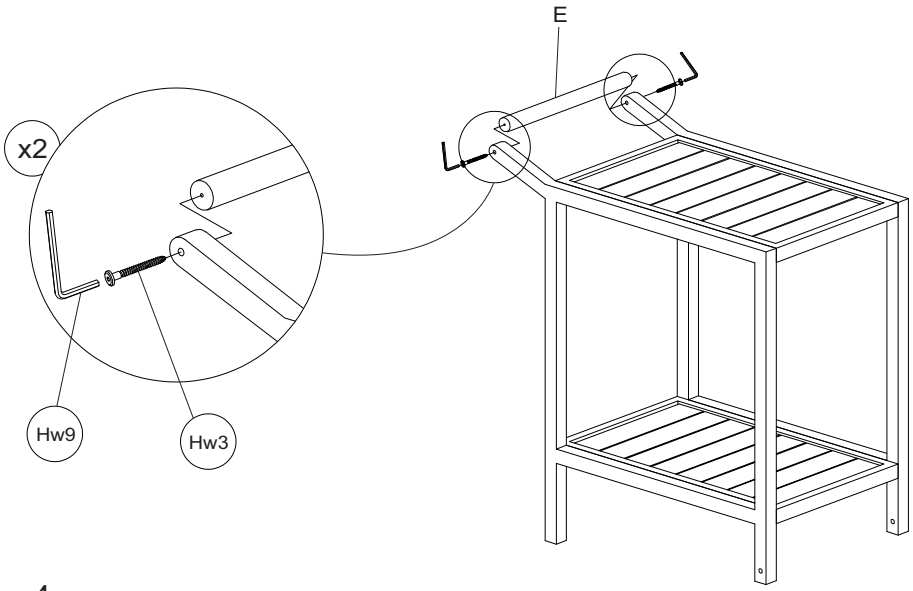

4

Attach wheel (F) to Left & Right leg (A & B) by using Bolt (Hw2), Plastic washer (Hw6),Fflat washer (Hw7), and Nut (Hw4), tighten by Allen key (Hw9) and Wrench key (Hw10) as shown.

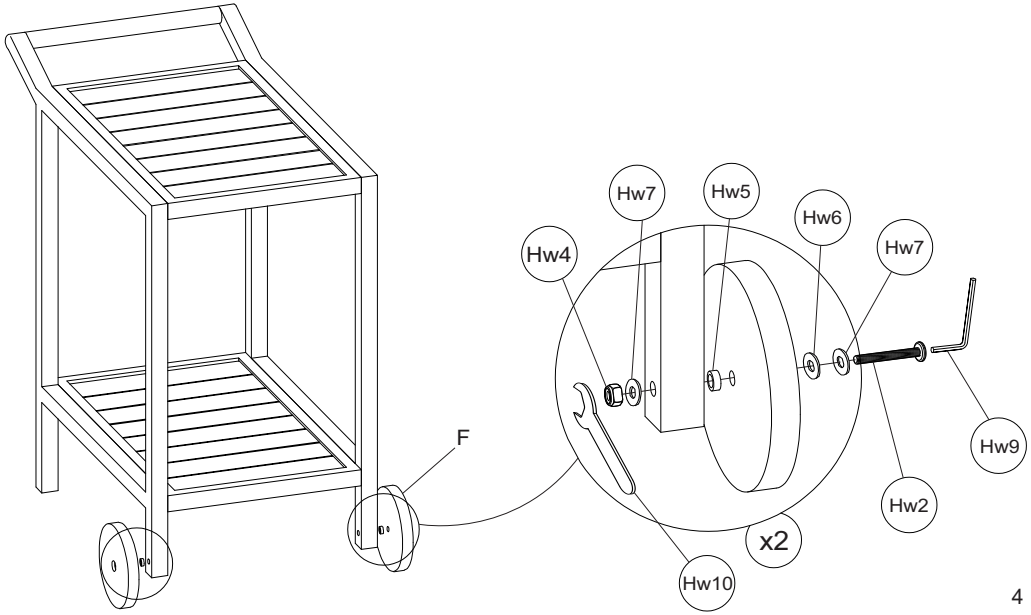

5

Put Wood top or bottom tray (D) on bar cart and place it in the position you use. We'd love to see it - just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

