
DORIANNA ALUMINUM PATIO CHAIR

DESIGN#CPT4004A

Assembly Instructions

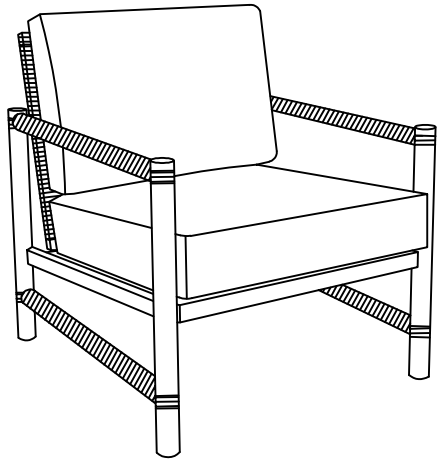

Need help?
Feel free to contact us via email or call
if you have any specific questions!

contact us:
cs@safavieh.com
866-422-9070

SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up.
You won't need any additional tools.

Parts & hardware

2 x
Armrest



1 x
Seat Board



1 x
Backrest



1 x
Allen Key



4 x
M6*35mm Bolt



2 x
M6*40mm Bolt



2 x
M6*60mm Bolt



8 x
M6 Washer



1 x
Back Cushion




1 x
Seat Cushion




1

Attach the first armrest to the seat board. Align the screw holes, secure with the bolt M6*35mm and washer, and tighten with the Allen key.

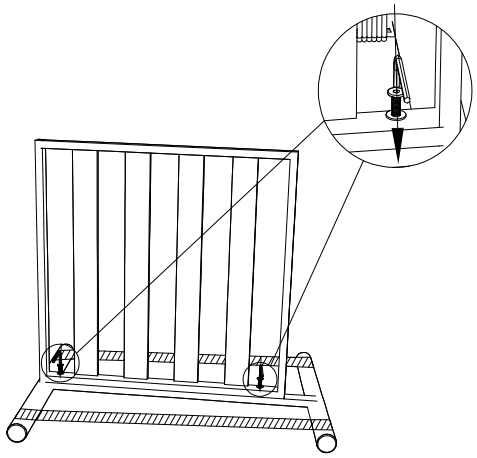


2

Attach the second armrest to the seat board. Use the same method to secure the leg and tighten the bolt with the Allen key.

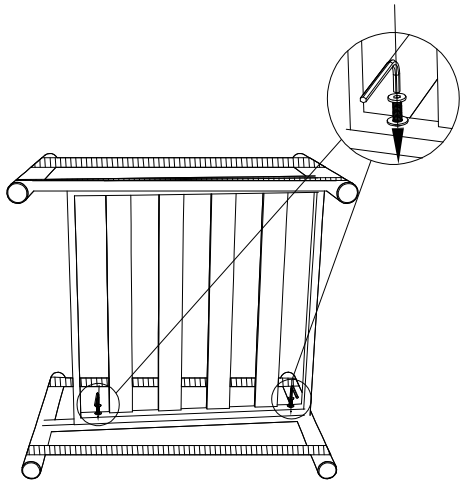


3

Attach the backrest to the seat board, Align the screw holes. Use an M6*60mm bolt and washer to fix the lower part, and an M6*40mm bolt and washer to fix the upper part. Then, use an Allen key to tighten the bolts.

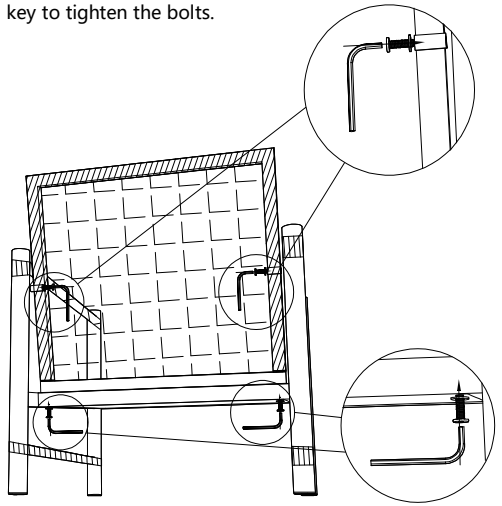

4

The hardware assembly has been completed.

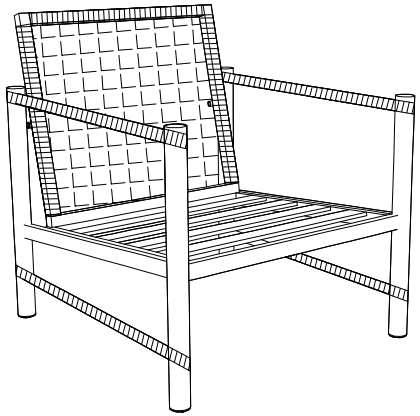

5

Place the seat cushion and back cushion in sequence.Whether you use it outdoor or indoor,we'd love to see it—just tag us（we're @safavieh）and use the hasg tag #safavieh on Instagram!

