
Need help?
Feel free to contact us via email or call
if you have any specific questions!

contact us:
cs@safavieh.com
866-422-9070

RODERICK BURL WOOD NIGHTSTAND

DESIGN # SFV1333

Assembly Instructions

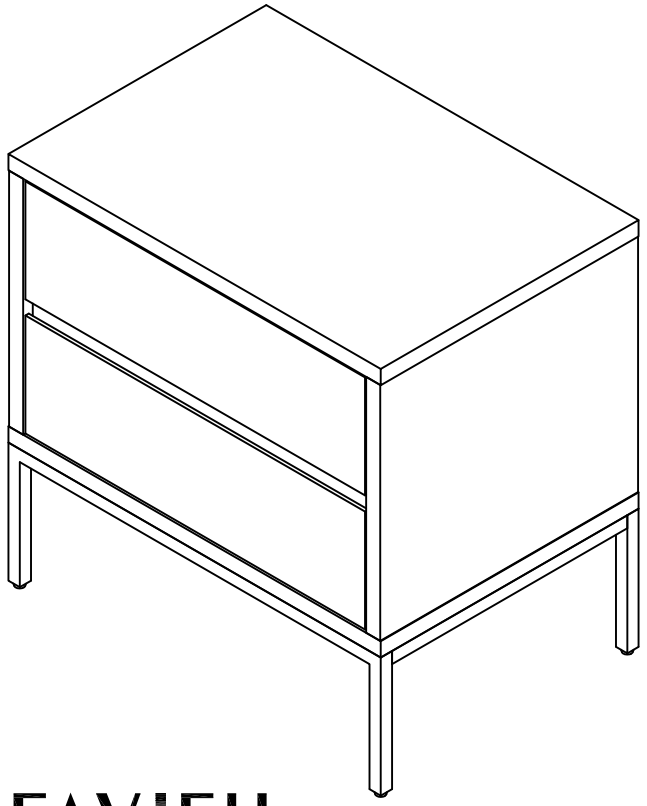


SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly simple to set up, including your new nightstand. You won't need any additional tools.

Parts List

A x 1
TOP PANEL



B x 1
LEFT PANEL



C x 1
RIGHT PANEL




D x 1
TOP RAIL




E x 1
FRONT RAIL



F x 1
BOTTOM ASSEMBLY




G x 1
BACK PANEL



H x 2
LEG FRAME



I x 2
DRAWER FRONT



J x 2
DRAWER LEFT




K x 2
DRAWER RIGHT




L x 2
DRAWER BACK

M x 2
DRAWER BASE




Hardware List


HW1 x 8
BOLT 6x1x35 mm



HW2 x 3
ROUND HEAD SCREW 4x1x32 mm



HW3 x 16
FLAT HEAD SCREW 3x1x32 mm



HW4 x 8
FLAT HEAD SCREW 3x1x19 mm



HW5 x 6
FLAT HEAD SCREW 3x1x16 mm



HW6 x 14
CAMBOLT



HW7 x 14
CAMLOCK



HW8 x 8
DOWEL



HW9 x 6
WEDGE



HW10 x 8
SPRING WASHER Ø13x1 mm




HW11 x 1
L KEY




1

Attach Cambolts (HW6) to Top, Left and Right Panels (A), (B) and (C) and Bottom Assembly (F).

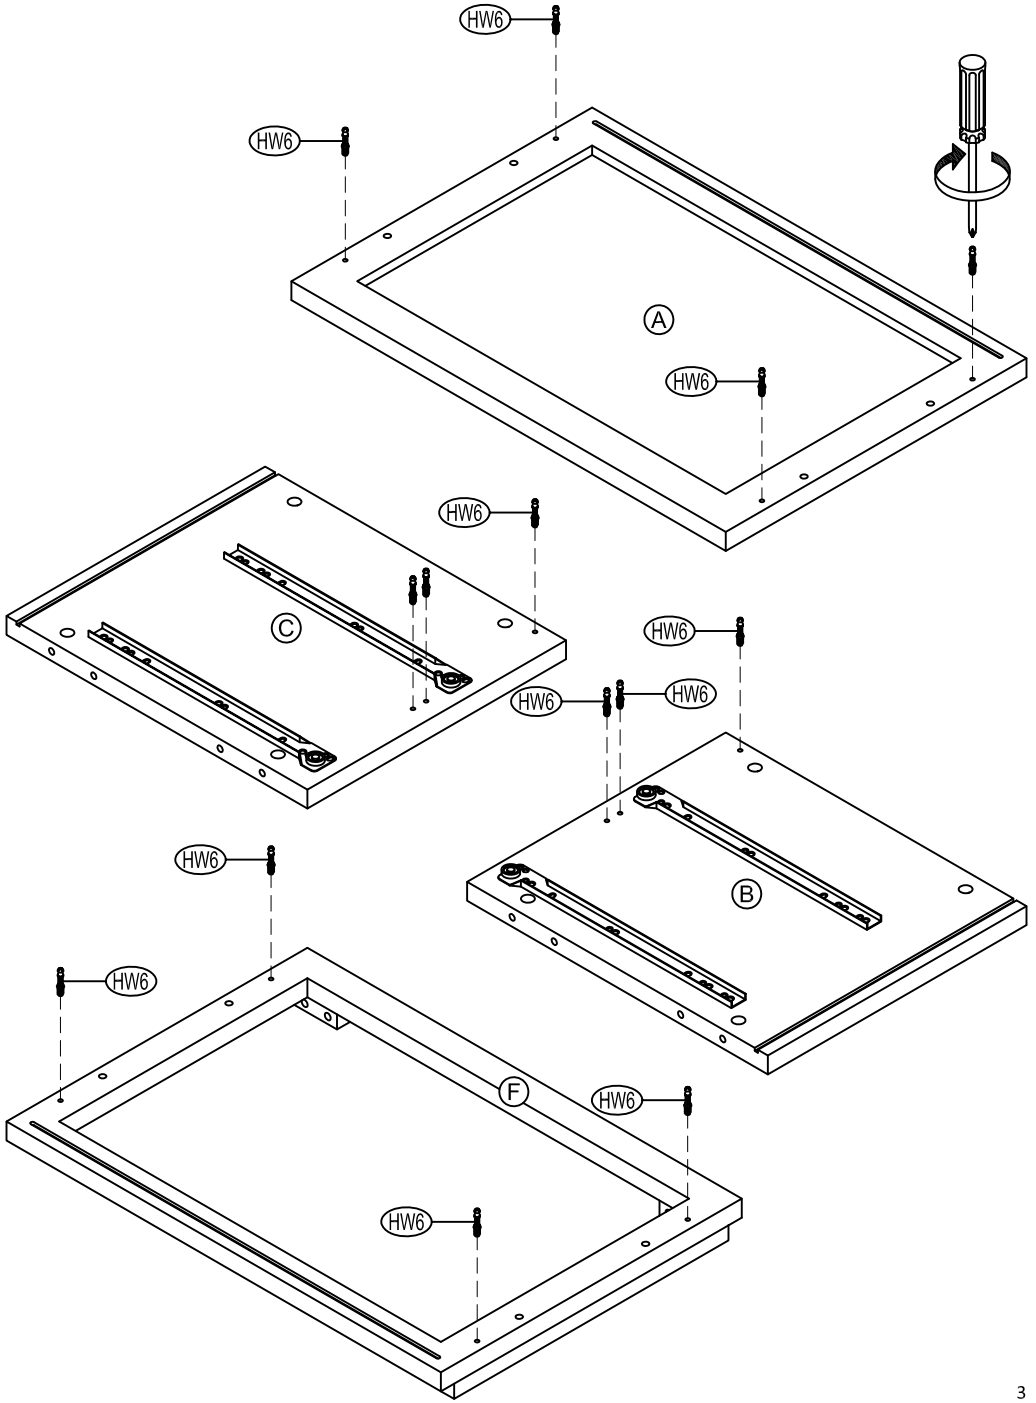


2

Attach Left and Right Panels (B) and (C) to Top and Front Rails (D) and (E) using Camlocks (HW7).

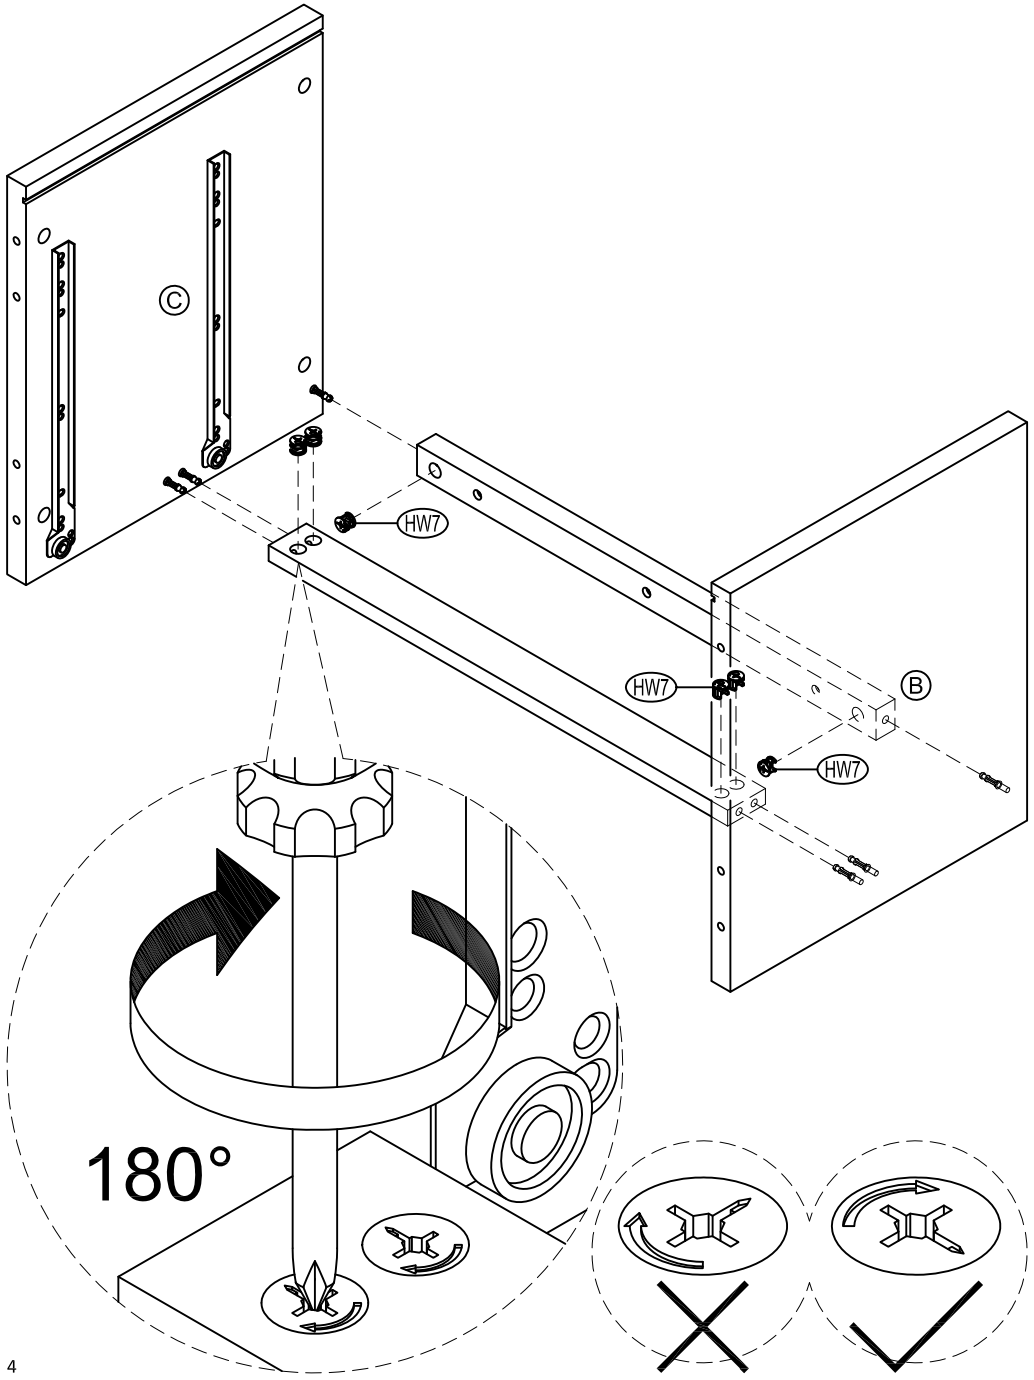


3

Attach Top Panel (A) to unit using Round Head Screws 32 mm (HW2), Camlocks (HW7) and Dowels (HW8).

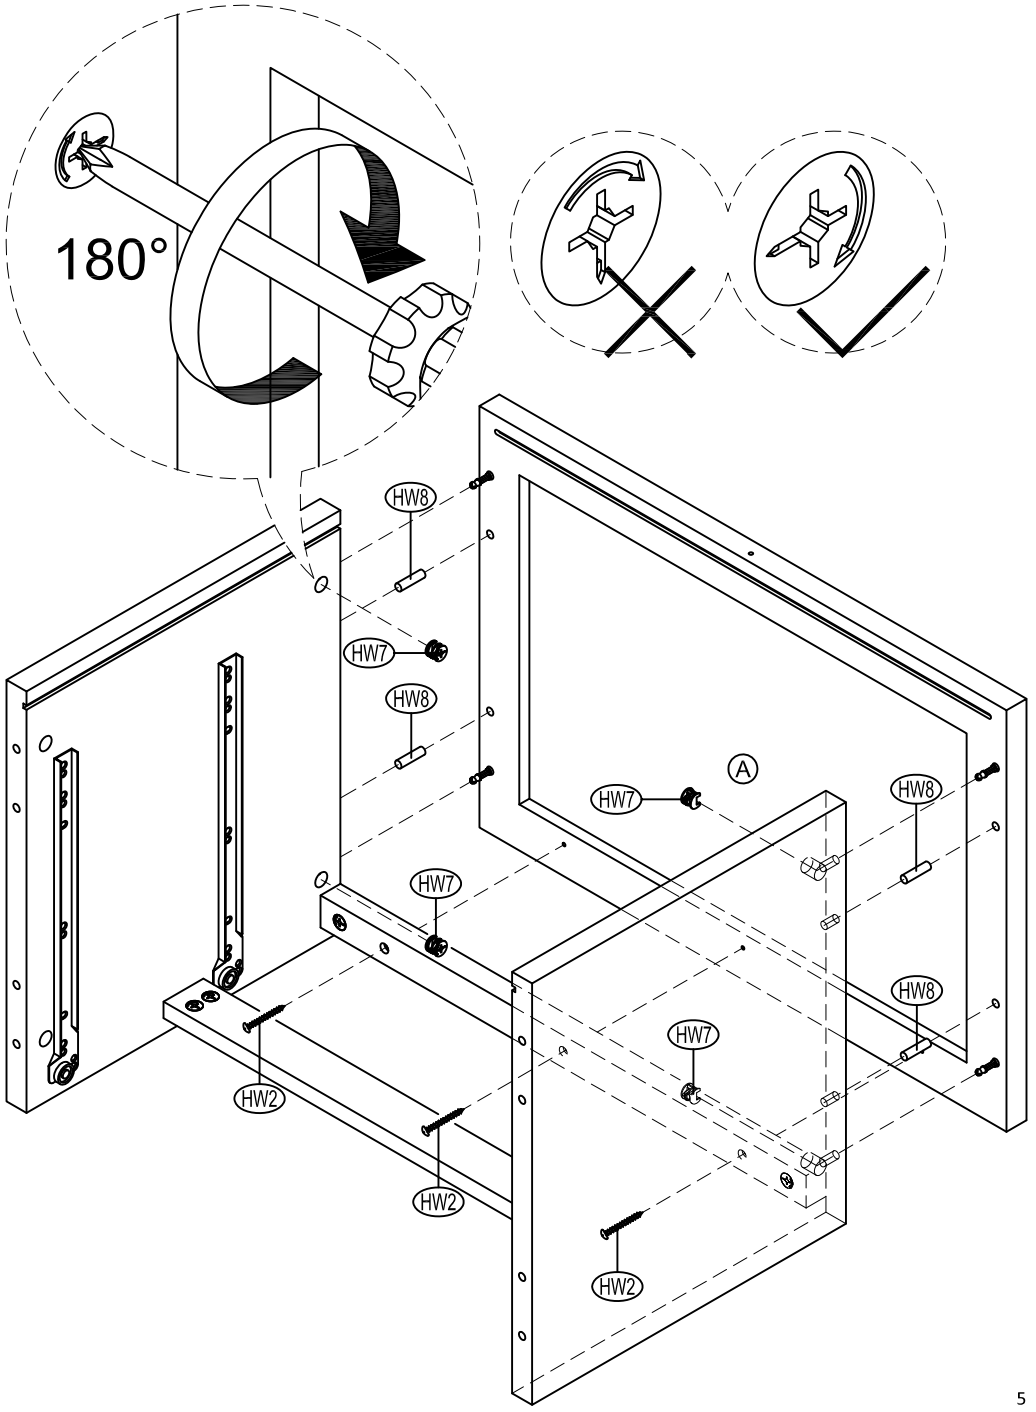


4

Slide Back Panel (G) into the groove of unit.

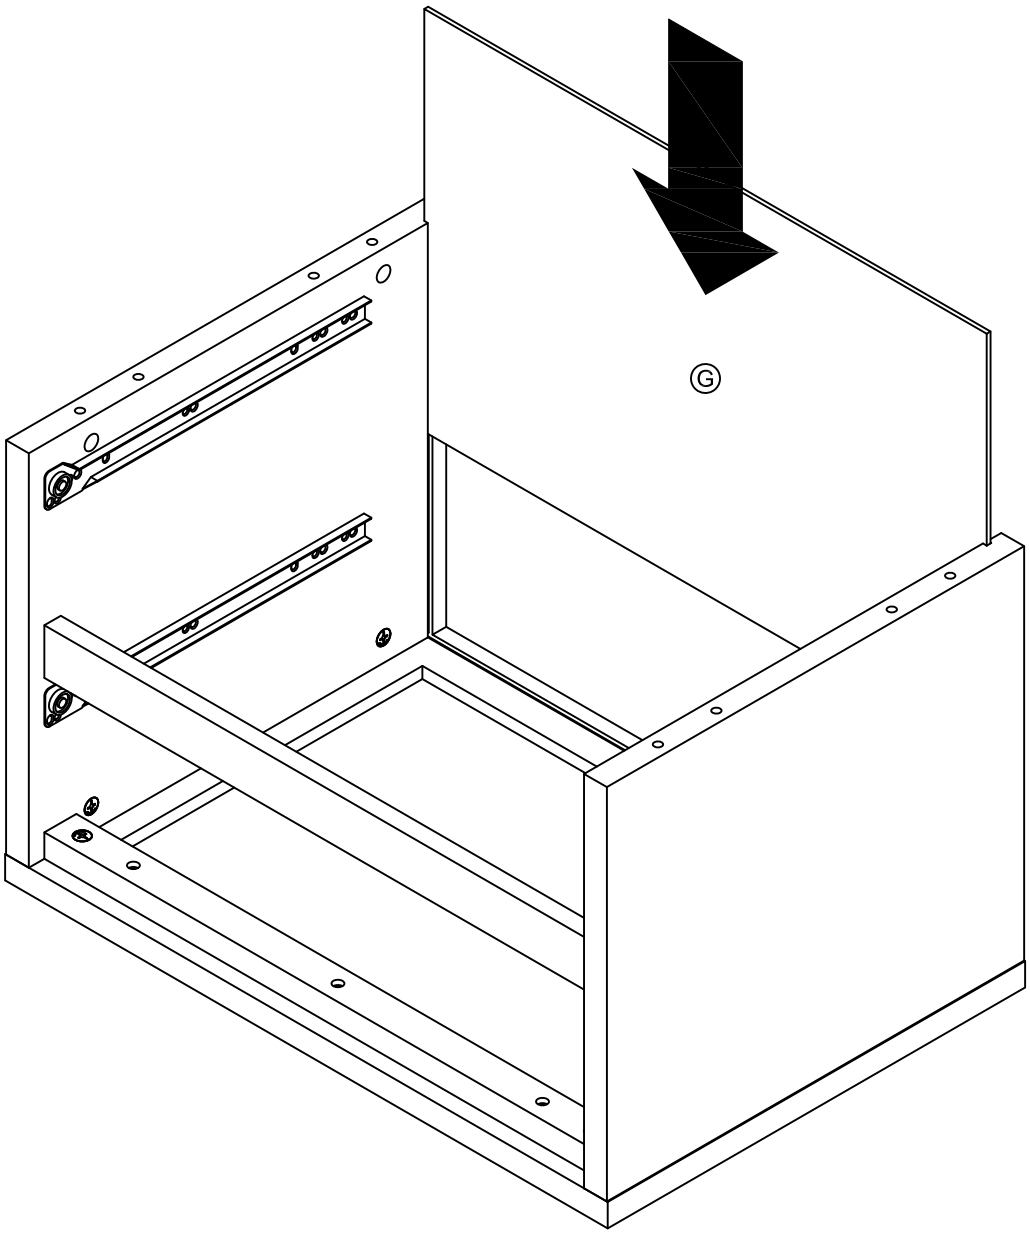


5

Attach Bottom Assembly (F) to unit using Camlocks (HW7) and Dowels (HW8).

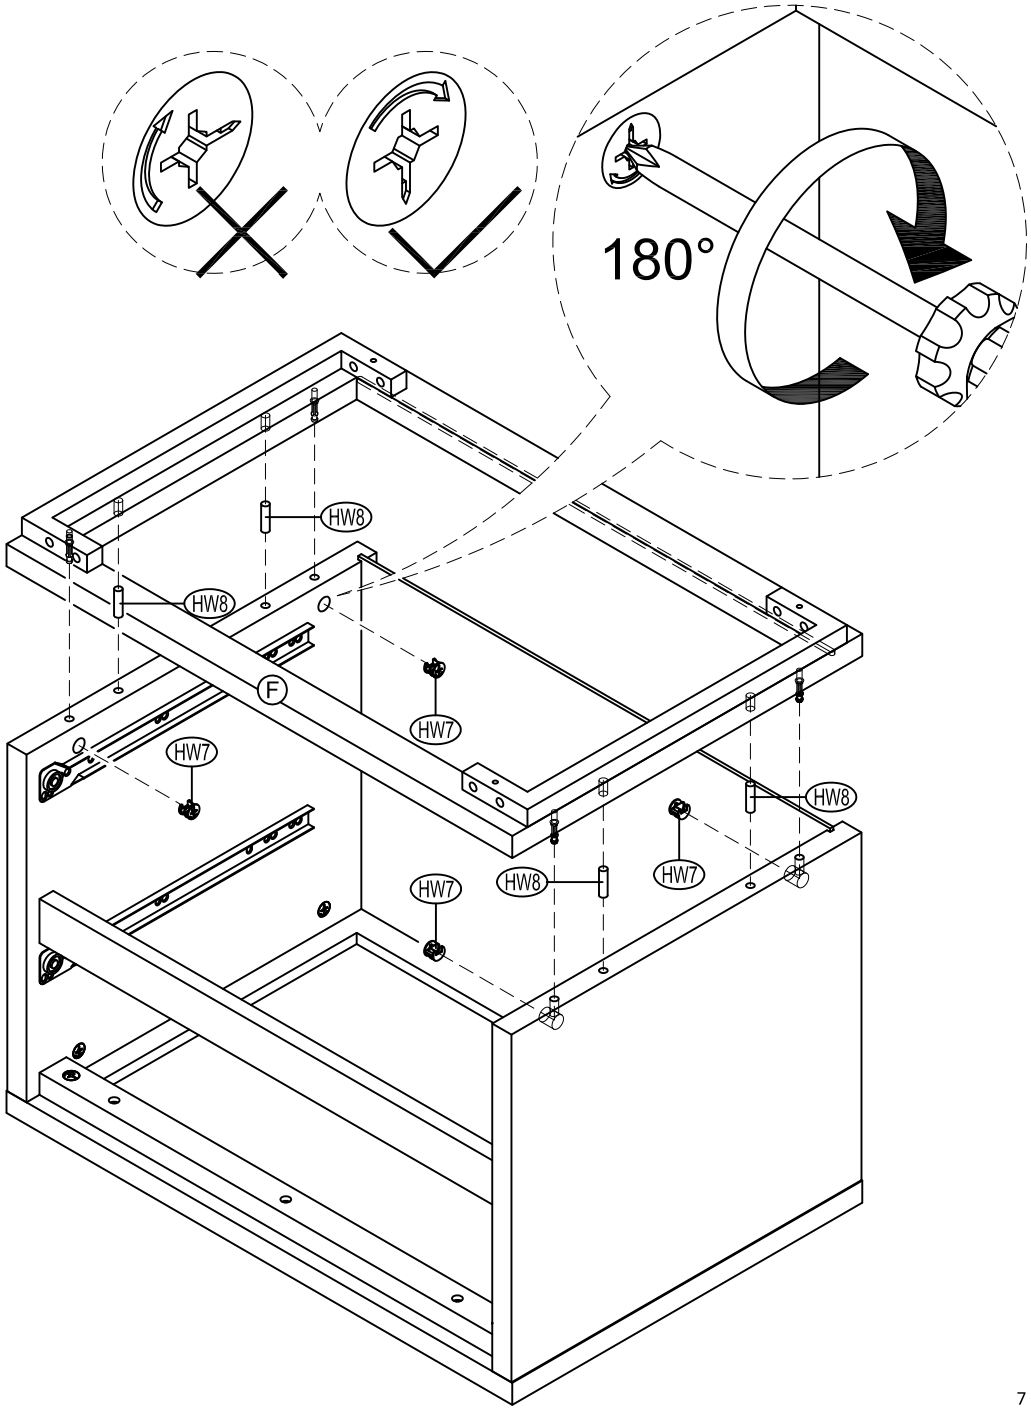


6

Attach Leg Frames (H) to unit using Bolts (HW1) and Spring Washers (HW10). Make sure all the Bolts (HW1) are properly assembled, then tighten Bolts (HW1) using L Key (HW11).

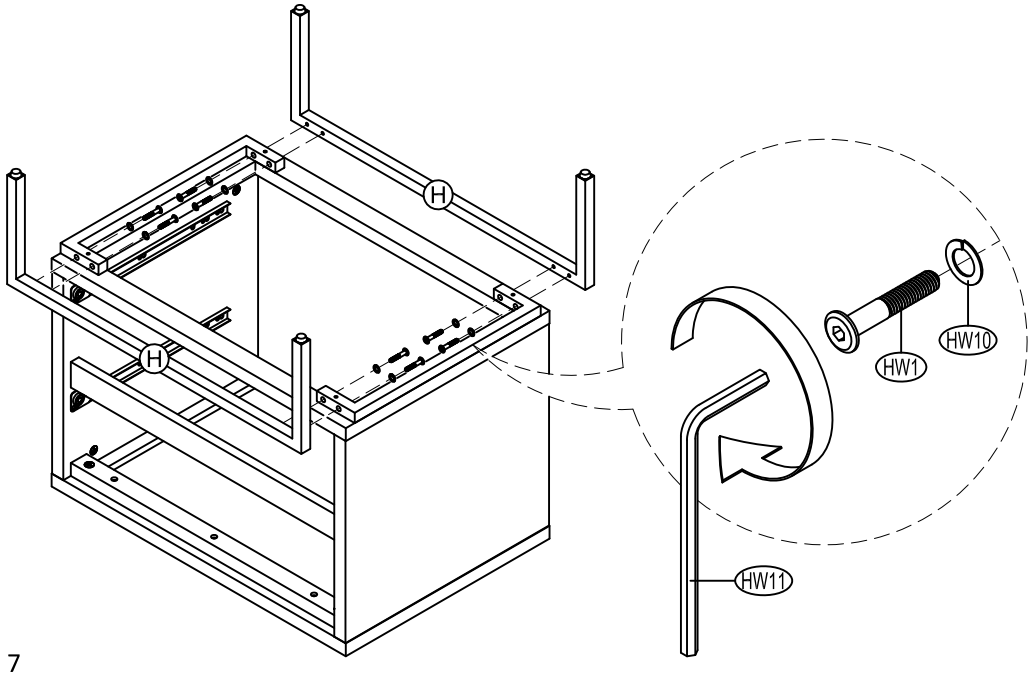


7

Attach Wedge (HW9) to the back of unit using Flat Head Screws 16 mm (HW5). Adjust the levelers on the bottom of the legs as needed.

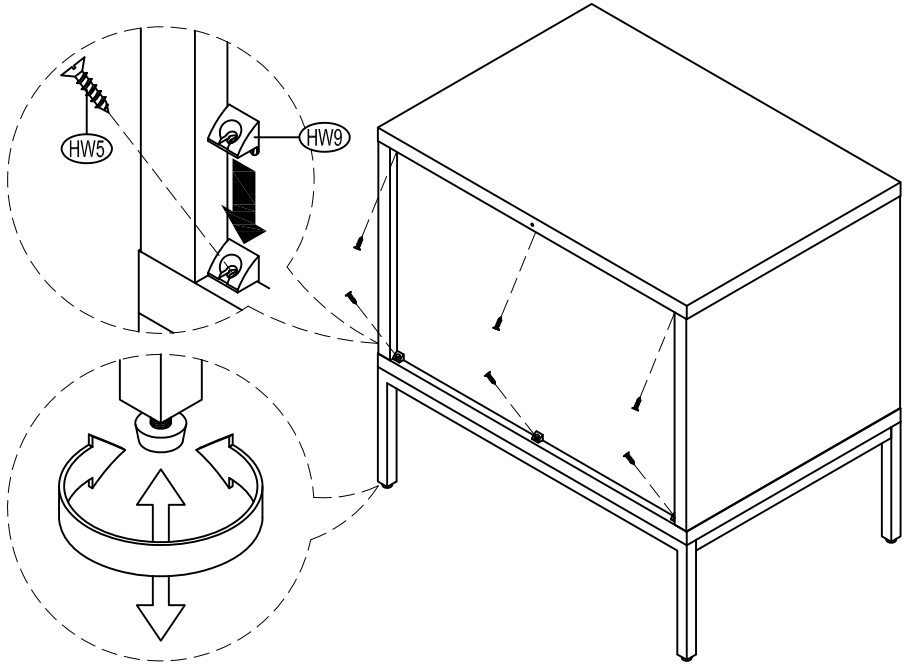


8

Attach Drawer Left and Right (J and K) to Drawer Back (L) using Flat Head Screws 32 mm (HW3).
Slide Drawer Base (M) into the groove.
Attach Drawer Front (I) to Drawer Left and Right (J and K) using Flat Head Screws 32 mm (HW3).

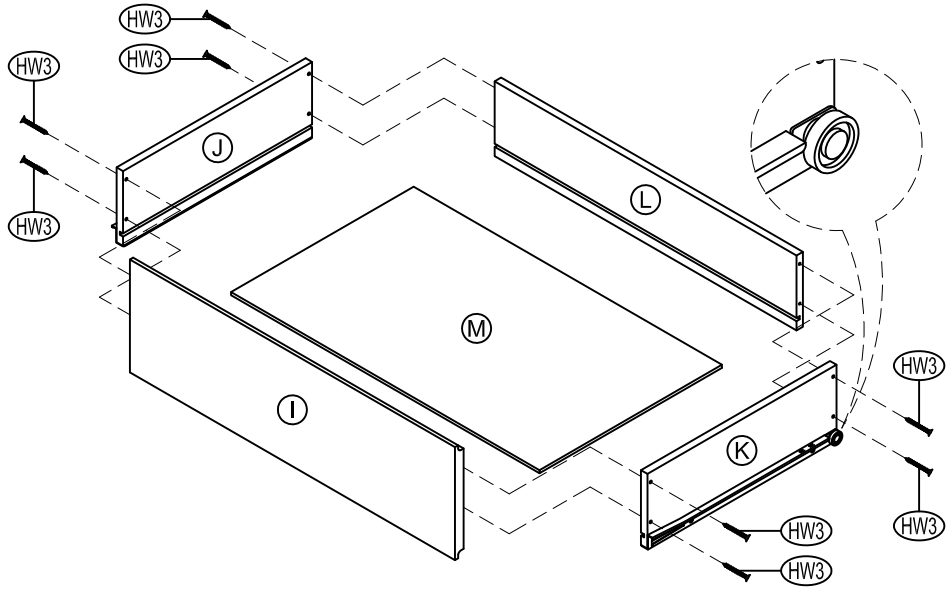


9

Loosen slightly the screws pre-installed on the back of the Drawer Fronts.

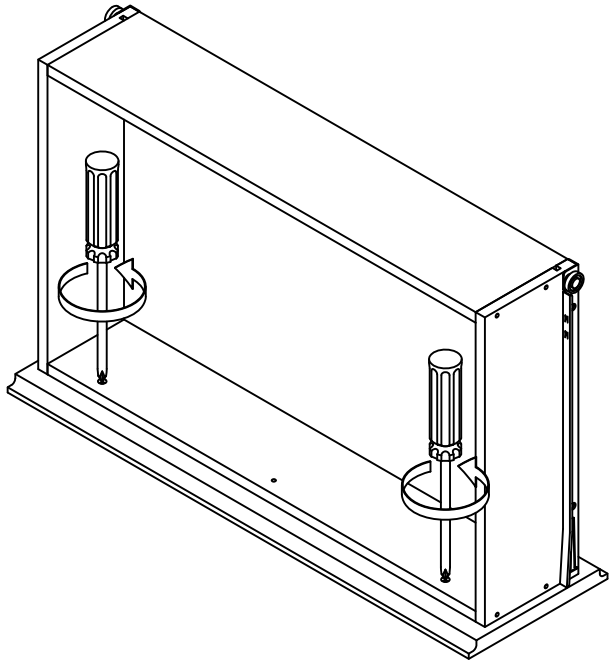


10

Insert the drawers into the unit

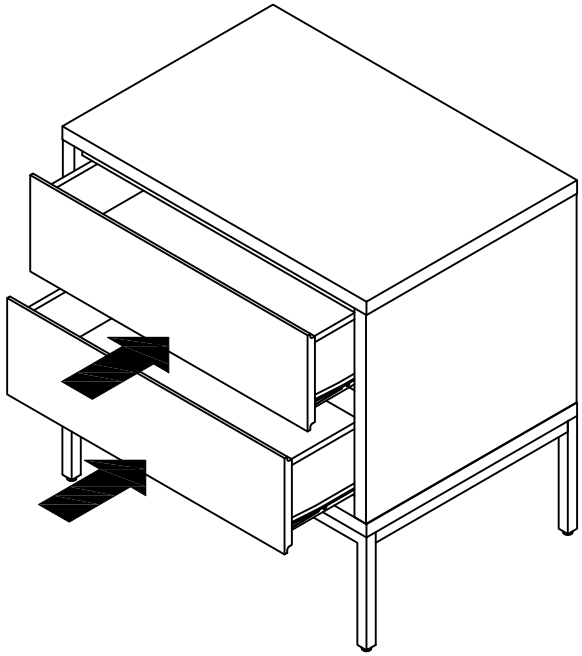


11

Adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.

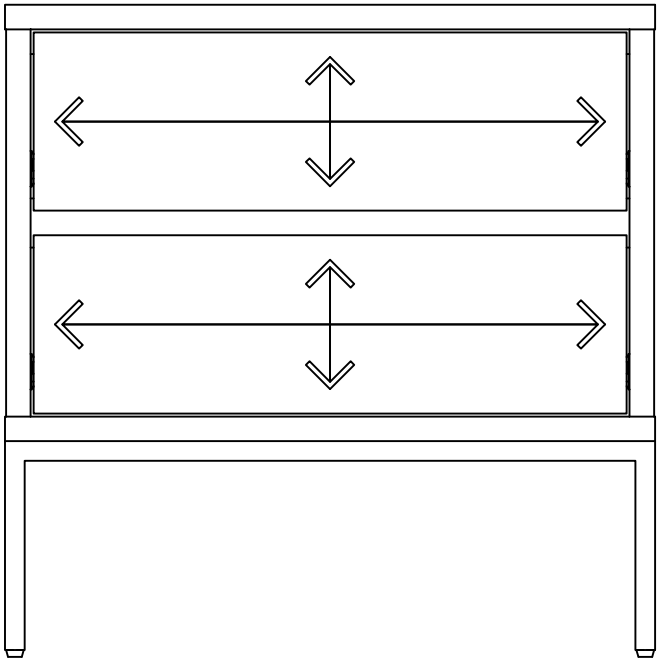

12

Pull the drawer open slowly and re-tighten the screws from step 9.
Make sure the front panel does not move and lock the drawer front panel into position with Flat Head Screws 19 mm (HW4).

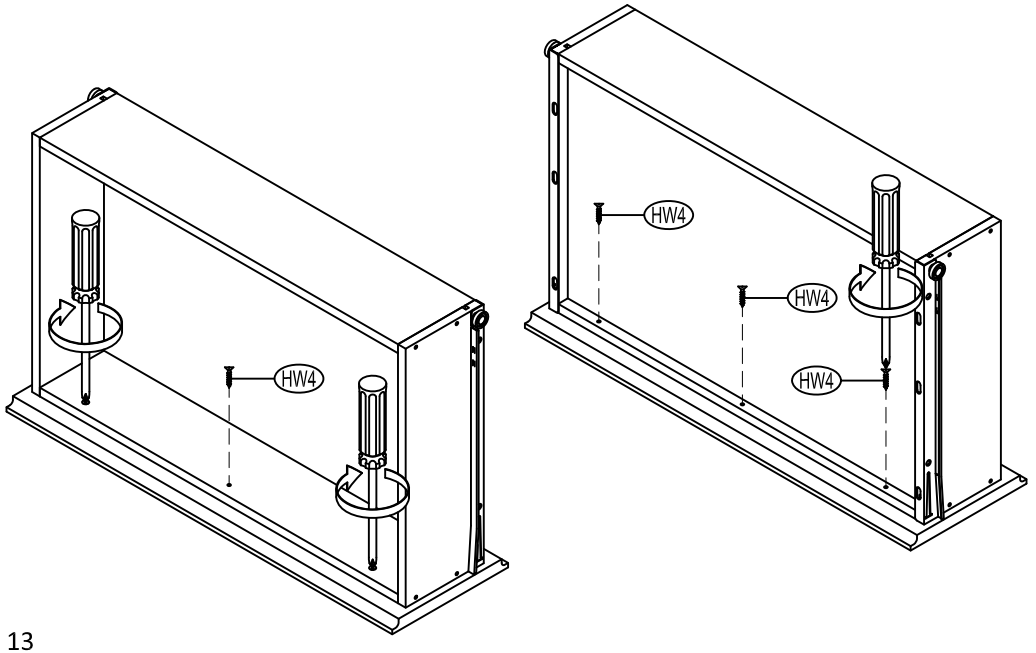

13

Insert the drawers in the nightstand. Place the nightstand in the place where you will use it. We’d love to see it – just tag us (we’re @safavieh) and use the hashtag #safavieh on Instagram!

