
TILLIE CHANNEL TUFTED KING BED

SFV1800-K

Assembly Instructions

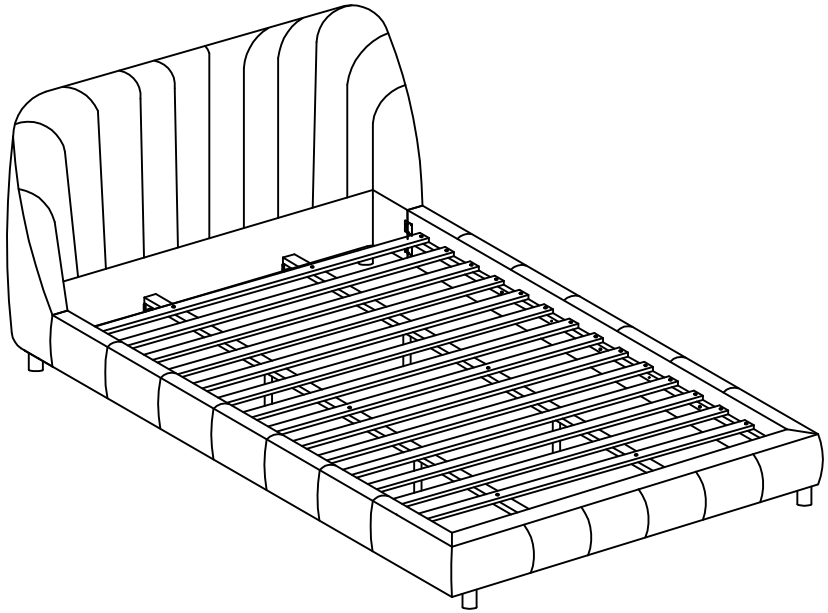

Need help?
Feel free to contact us via email or call
if you have any specific questions!
contact us:
cs@safavieh.com
866-422-9070

SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home


Every thing we make is incredibly simple to set up, including your new bed.

Parts List


A x 1
HEADBOARD




B x 1
FOOTBOARD



C x 1
SIDE RAILS (LEFT)



D x 1
SIDE RAILS (RIGHT)



E x 4
LEGS




F x 2
CENTER SUPPORT RAIL



G x 4
CENTER LEGS




H x 1
14 SLATS




Hardware List


HW1 x 4
LEVELER




HW2 x 12
JCB BOLT M8 X 20mm



HW3 x 4
JCB BOLT M6 X 40mm



HW4 x 4
JCB BOLT M6 X 50mm



HW5 x 1
ALLEN KEY 100mm



HW6 x 1
ALLEN KEY 70mm



HW7 x 4
SCREW M4 X 25mm




HW8 x 34
SCREW M4 X 32mm



1


Attach the legs (E) to the headboard (A) and footboard (B) by using the Allen Key (HW5) to screw in the JCB bolts (HW4). Screw in the JCB bolts (HW4) into the bottom of the legs (E).

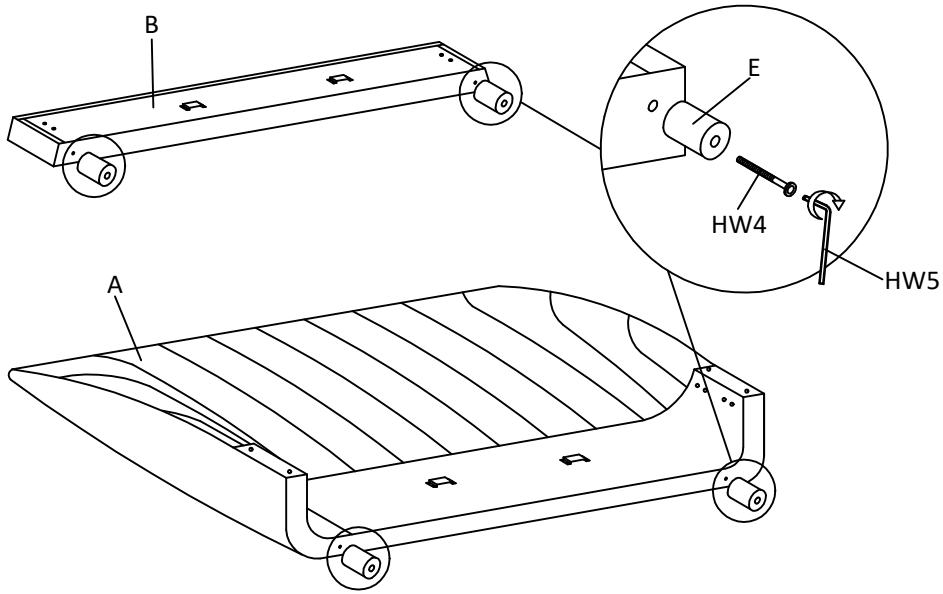

BACK VIEW


2

Use the Allen key (HW6) to screw in the JCB bolts (HW2) as shown, but don't fully tighten them. Attach the side rails (C&D) to the headboard (A) and footboard (B) by sliding the metal brackets on the siderails (C&D) onto the bolts (HW2).

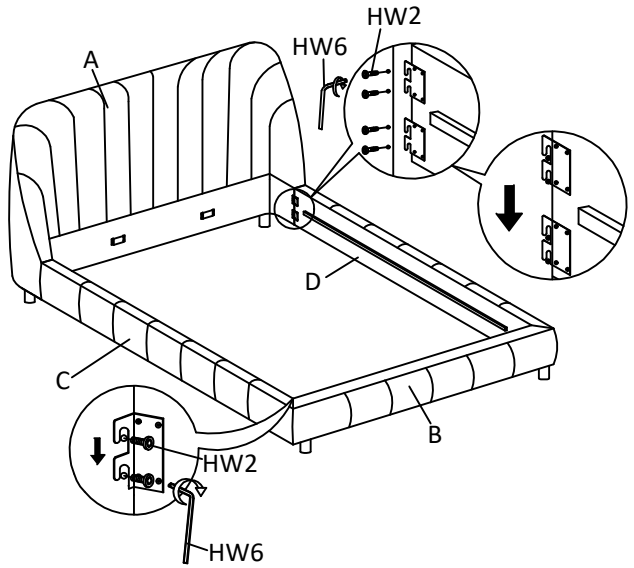

3


Attach the center support legs (G) to the center support rail (F) by using the Allen key (HW5) to screw in the bolts (HW3) as shown.

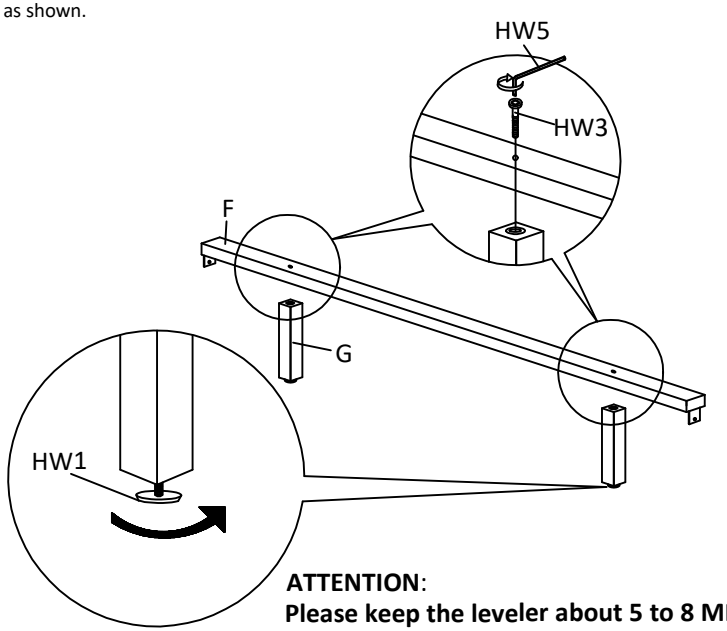

ATTENTION:
Please keep the leveler about 5 to 8 MM away from the floor.

4


Attach the assembled center support rails to the headboard (A) and footboard (B) by using a Philips Head screwdriver (not included) to screw in the screws (HW7) as shown.

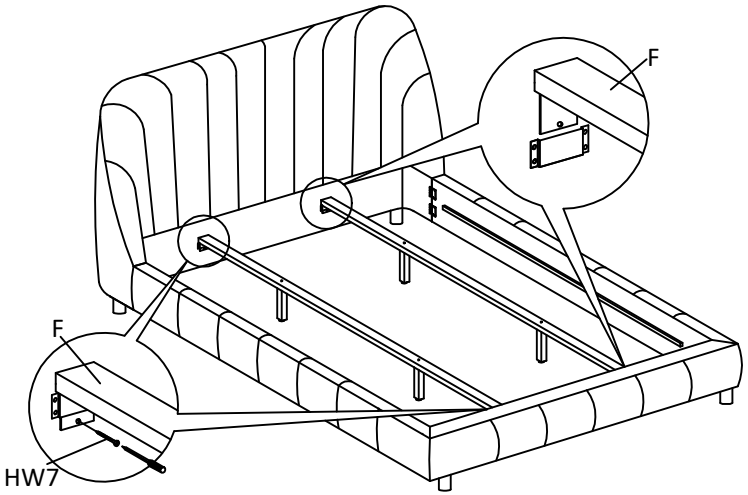

ATTENTION : Please ensure that (HW7) screw are being attached as the AI shows to avoid the base collapsing.


5

Use the Allen key (HW6) to fully tighten the bolts (HW2) in the 4 corners. Attach the slats (H) to the center support rails and the siderails by using a Philips head screwdriver (not included) to screw in the 34 screws (HW8) in the spots shown below. Adjust the levelers as needed to make the bed level.

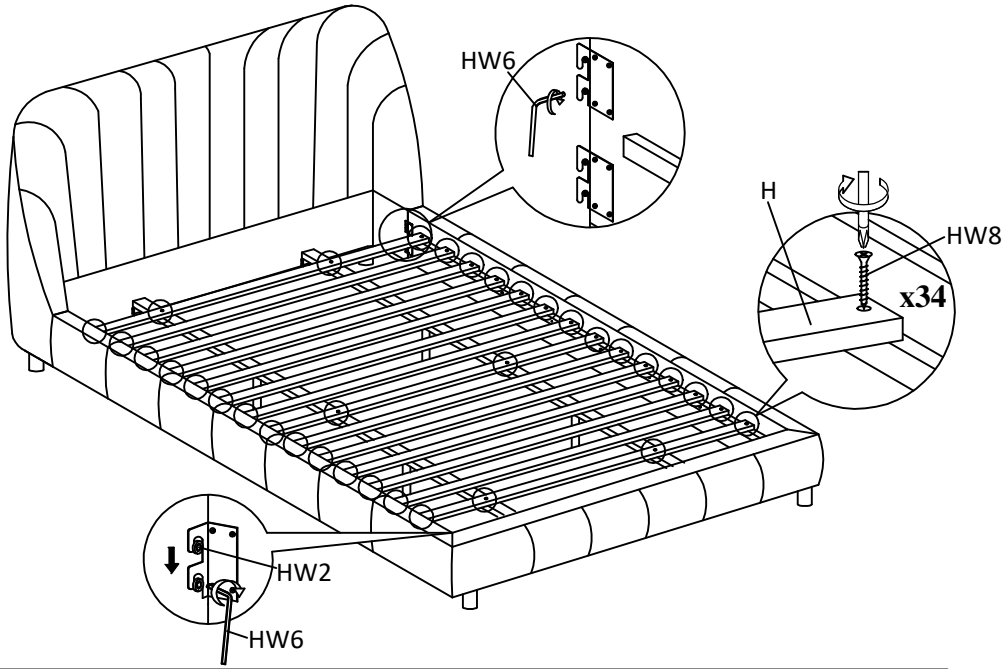

6


Place the bed in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use hashtag #safavieh on Instagram!

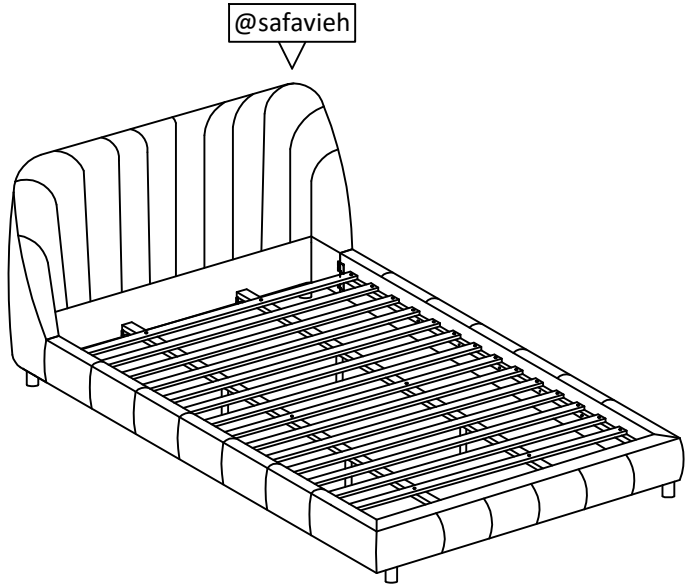

TILLIE CHANNEL TUFTED QUEEN BED

SFV1800-Q

Assembly Instructions

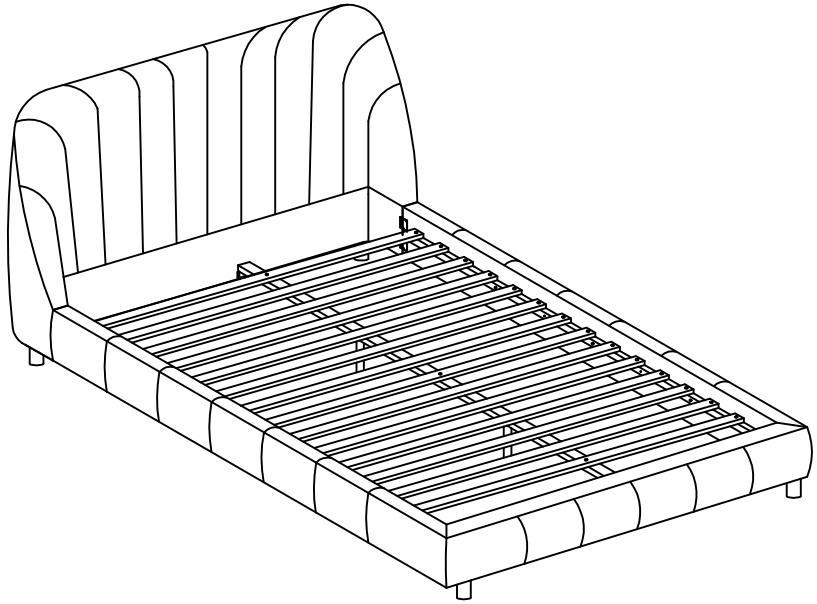

Need help?
Feel free to contact us via email or call
if you have any specific questions!
contact us:
cs@safavieh.com
866-422-9070

SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home


Every thing we make is incredibly simple to set up, including your new bed.

Parts List


A x 1
HEADBOARD




B x 1
FOOTBOARD



C x 1
SIDE RAILS (LEFT)



D x 1
SIDE RAILS (RIGHT)



E x 4
LEGS




F x 1
CENTER SUPPORT RAIL



G x 2
CENTER LEGS




H x 1
14 SLATS




Hardware List


HW1 x 2
LEVELER




HW2 x 12
JCB BOLT M8 X 20mm



HW3 x 2
JCB BOLT M6 X 40mm



HW4 x 4
JCB BOLT M6 X 50mm



HW5 x 1
ALLEN KEY 100mm



HW6 x 1
ALLEN KEY 70mm



HW7 x 2
SCREW M4 X 25mm




HW8 x 31
SCREW M4 X 32mm



1


Attach the legs (E) to the headboard (A) and footboard (B) by using the Allen Key (HW5) to screw in the JCB bolts (HW4). Screw in the JCB bolts (HW4) into the bottom of the legs (E).

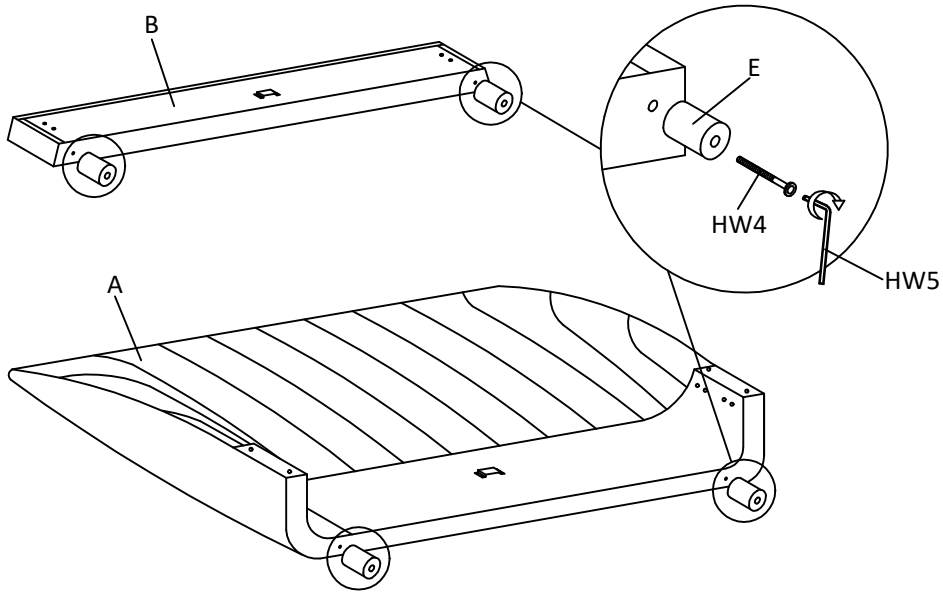

BACK VIEW


2

Use the Allen key (HW6) to screw in the JCB bolts (HW2) as shown, but don't fully tighten them. Attach the side rails (C&D) to the headboard (A) and footboard (B) by sliding the metal brackets on the siderails (C&D) onto the bolts (HW2).

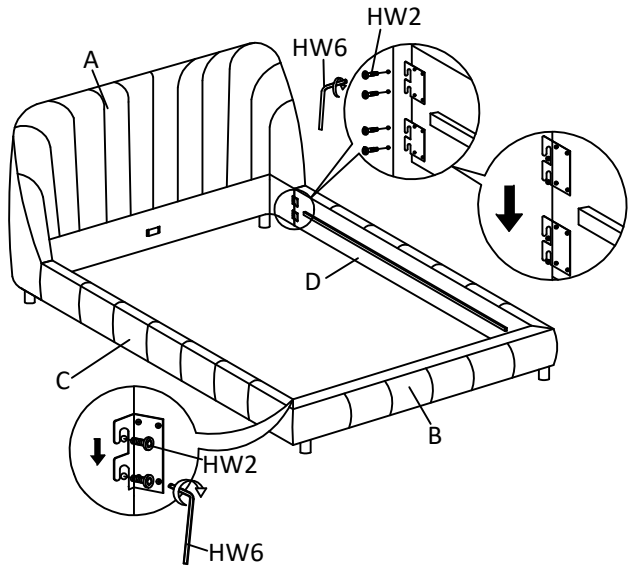

3


Attach the center support legs (G) to the center support rail (F) by using the Allen key (HW5) to screw in the bolts (HW3) as shown.

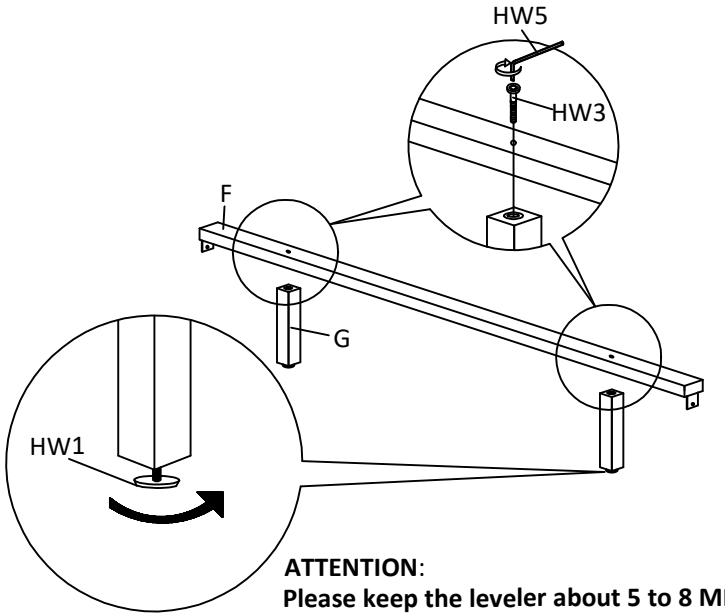

ATTENTION:
Please keep the leveler about 5 to 8 MM away from the floor.

4


Attach the assembled center support rails to the headboard (A) and footboard (B) by using a Philips Head screwdriver (not included) to screw in the screws (HW7) as shown.

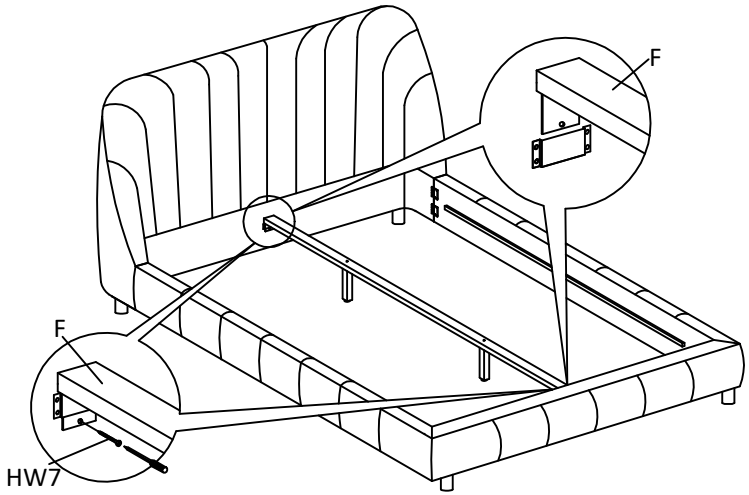

ATTENTION : Please ensure that (HW7) screw are being attached as the AI shows to avoid the base collapsing.

5

Use the Allen key (HW6) to fully tighten the bolts (HW2) in the 4 corners. Attach the slats (H) to the center support rails and the siderails by using a Philips head screwdriver (not included) to screw in the 31 screws (HW8) in the spots shown below. Adjust the levelers as needed to make the bed level.

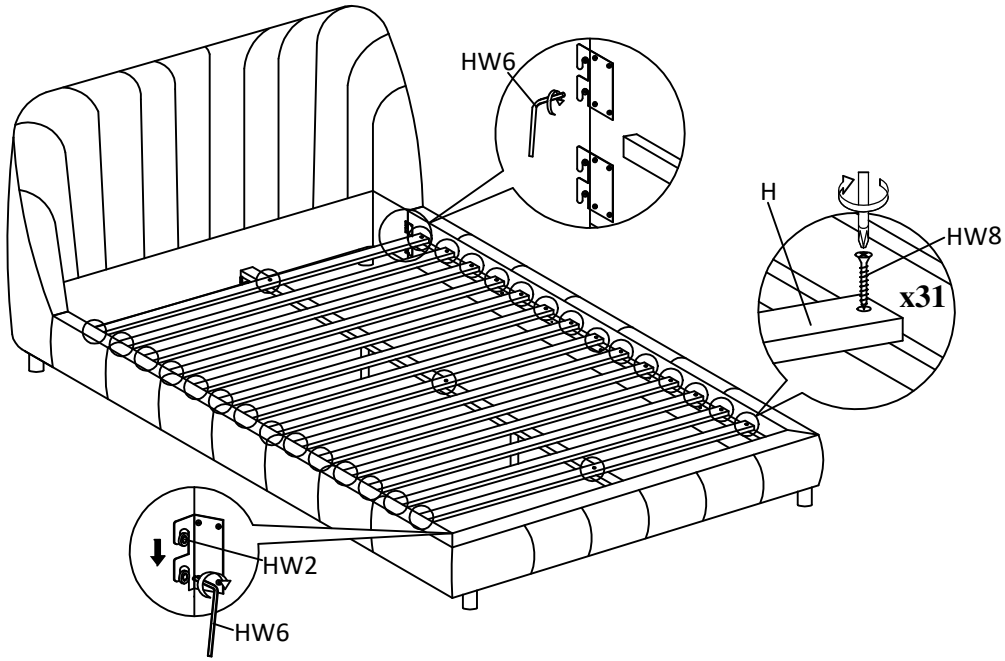

6

Place the bed in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use hashtag #safavieh on Instagram!

