
ORION 6 DRAWER WOOD DRESSER

DESIGN# SFV2247

Assembly Instructions

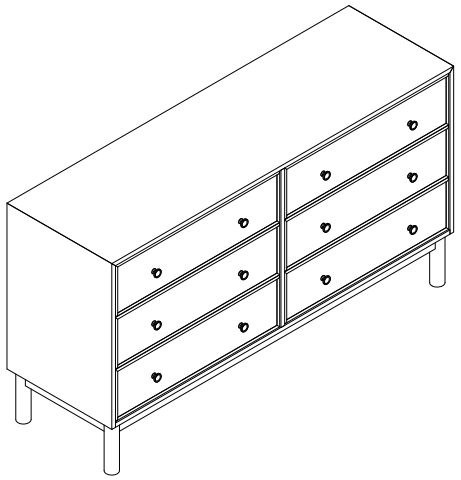

Need help?
Feel free to contact us via email or call
if you have any specific questions!

contact us:
cs@safavieh.com
866-422-9070


SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up, including your new dresser. You won't need any additional tools.

Parts List

A X 1
Cabinet



B X 4
Legs




C X 1
Mid leg



Hardware List

HW1 x 8
Hex Socket Bolt $\frac{5}{16}$"-18 x 2"



HW2 x 1
Allen Key $\frac{5}{32}$"




HW3 x 2
Anti-Tip Hardware



1

Place the Cabinet (A) upside down on a soft and clean surface. Align the screw holes on the Cabinet (A) to the screw holes on the Legs (B) as shown below. Attach the Legs (B) to the Cabinet (A) by using the Allen Key (HW2) to screw in the Hex Socket Bolts (HW1). Screw in the Mid Leg (C) in a clock wise direction into the screw hole in the center of the Cabinet (A).

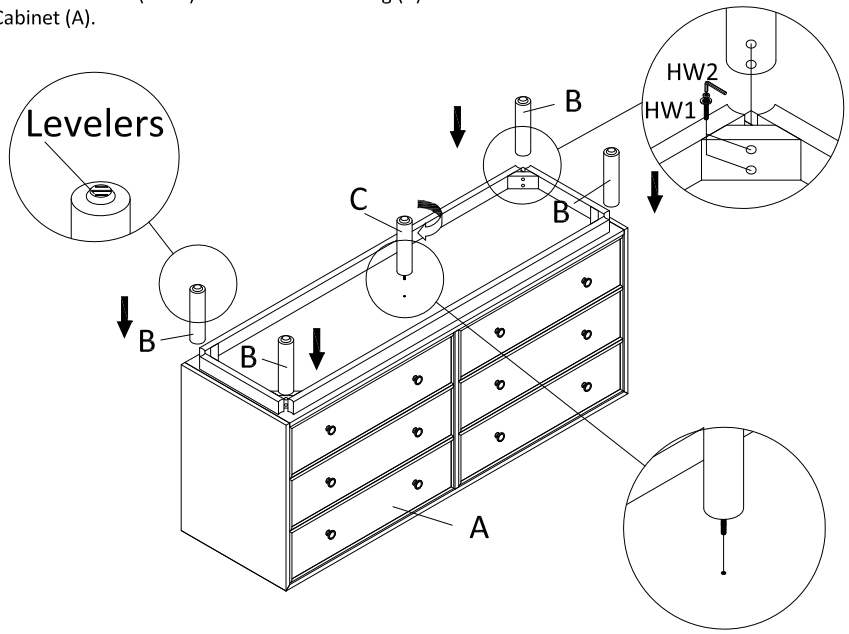

2

Turn the Dresser upright. Place the Dresser in the place where you will use it. Follow the installation instructions of the 2*Anti-Tip Hardware (HW3) to attach the product to the wall. Adjust the levelers on the bottom of the legs as needed to make the Dresser level. We'd love to see it - just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

