NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 45 minutes.
* Tools Required for Assembly (included): Allen Key, Spanner; (Not included): Phillips Screwdriver.

CARE AND MAINTENANCE

* Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
* The use of steam or water-based cleaners may cause excessive shrinking or staining.

SAFAVIEH
COUTURE

Item ID: SFV4112-K
Product Dimensions: 92 1/3”W x 89 3/4”D x 43 1/3”H

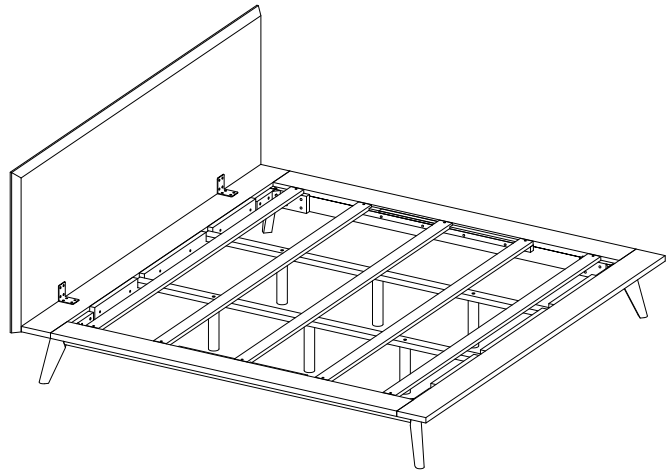

⚠WARNING⚠

Weight capacity: 800lbs
Warning: DO NOT STAND ON BED
Warning: DO NOT OVER TORQUE BOLTS


Part List and Hardware List

PIECE	DESCRIPTION	QUANTITY	CARTON CALL
A	HEADBOARD	1X	1 of 3
B	BOTTOM FRAME	1X	2 of 3
C	FOOTBOARD	1X	2 of 3
D	SIDE RAILS	2X	3 of 3
E	CORNER BLOCK	4X	3 of 3
F	LEGS	4X	3 of 3
G	CENTRE SUPPORT RAIL	2X	3 of 3
H	CENTRER LEGS	6X	3 of 3
I	SLATS	5X	3 of 3


PIECE	DESCRIPTION	QUANTITY	CARTON CALL
HW1	Wooden dowel Ø10mm	6X	3 of 3
HW2	Metal thread 8x0.5x70mm	4X	3 of 3
HW3	Semicircle washer 7x15x30mm	4X	3 of 3
HW4	Spring washer 8mm	44X	3 of 3
HW5	Nut 8mm	4X	3 of 3
HW6	Spanner	1X	3 of 3
HW7	Metal palte	2X	3 of 3
HW8	Support bar	6X	3 of 3
HW9	Medium cross bolt (1) 8x0.5x40mm	30X	3 of 3
HW10	Spring washer (black) 8mm	46X	3 of 3
HW11	Flat washer (black) 8mm	46X	3 of 3
HW12	Small cross bolt (1) 8x0.5x20mm	16X	3 of 3
HW13	Medium cross bolt (2) 8x0.5x50mm	32X	3 of 3
HW14	Flat washer 8mm	40X	3 of 3
HW15	Big cross bolt 8x0.5x100mm	8X	3 of 3
HW16	Screw 4x0.5x30mm	10X	3 of 3
HW17	Small cross bolt 6x0.5x40mm	6X	3 of 3
HW18	Allen key	1X	3 of 3

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 45 minutes.
* Tools Required for Assembly (included): Allen Key, Spanner; (Not included): Phillips Screwdriver.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

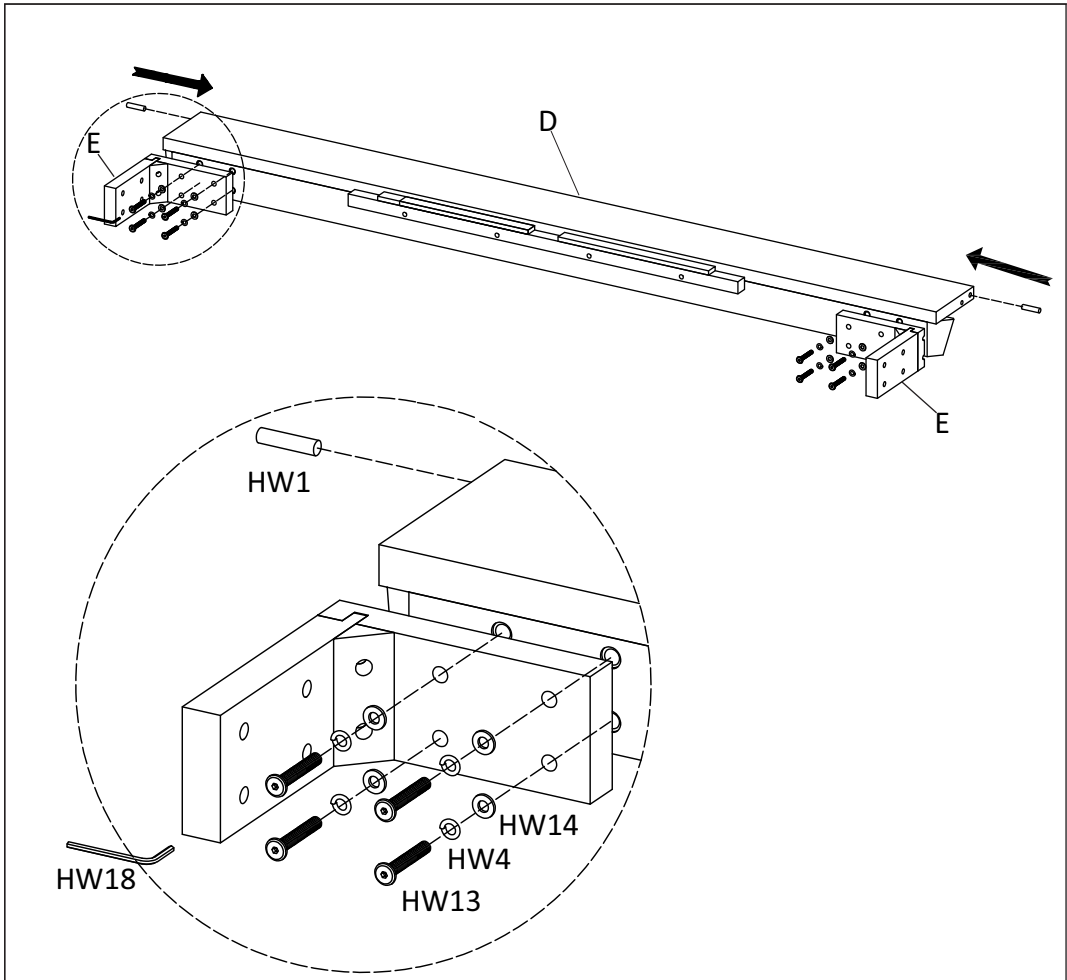


STEP 1: Assemble wooden dowel (HW1) in the side rail (D).
Atach corner block (E) and side rail (D) by medium cross bolt (HW13), spring washer (HW4) and Flat washer (HW14).

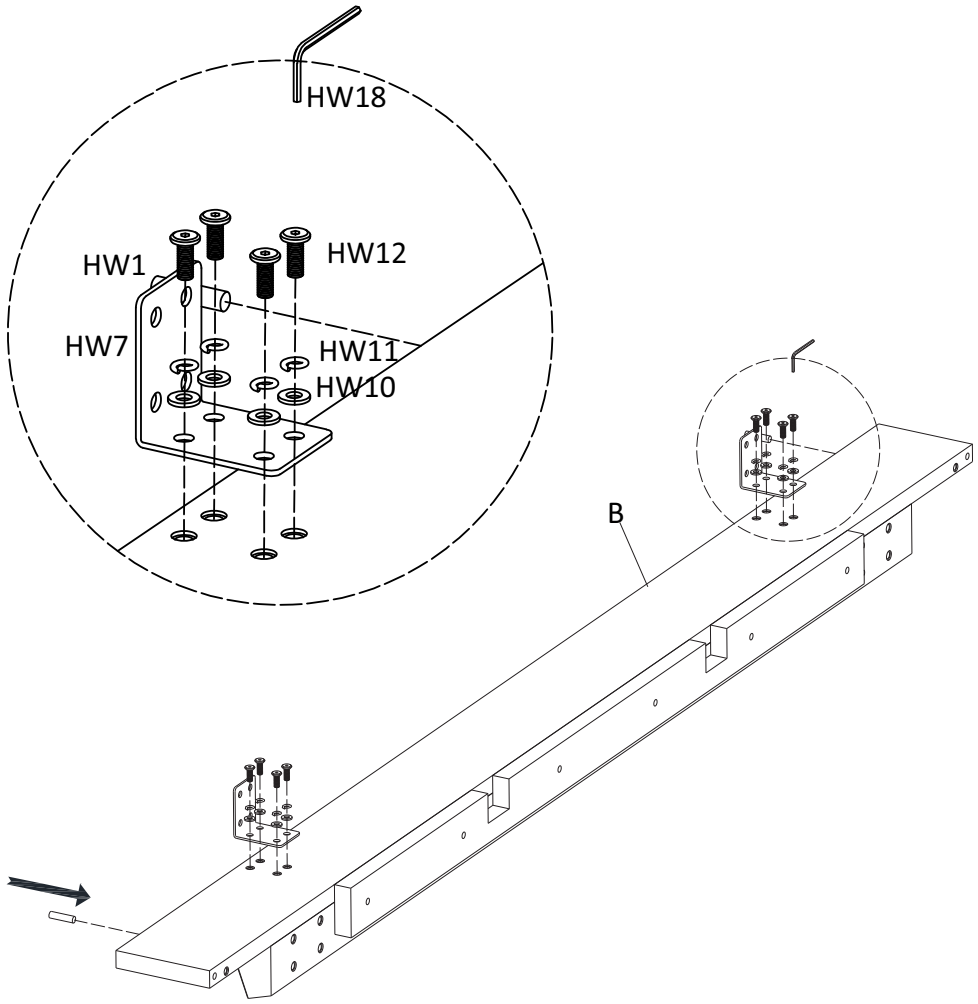


STEP 2: Attach Metal palte (HW7) and bottom frame (B) by small cross bolt (HW12), spring washer (HW10) and Flat washer (HW11) as shown.

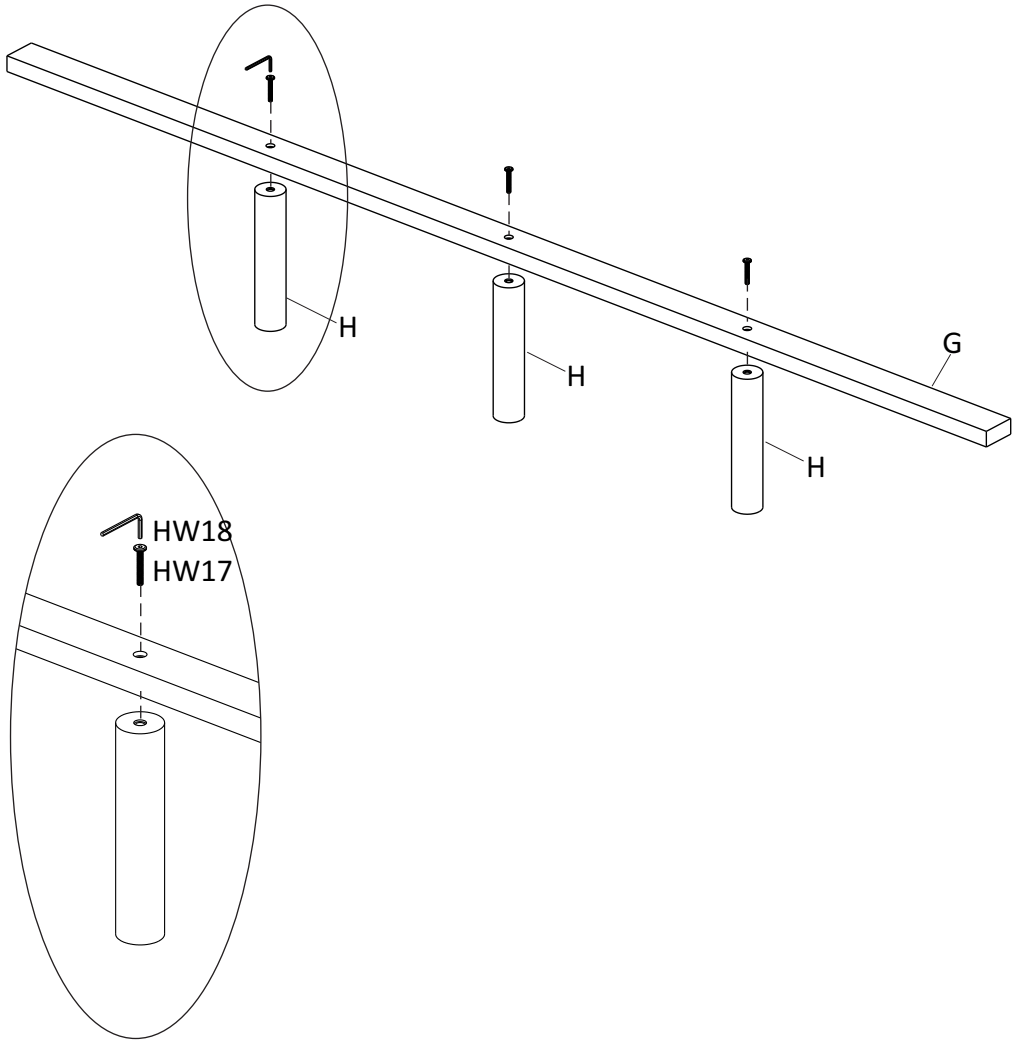


STEP 3: Attach centre support rail (F) and centre legs (G) by cross bolt (HW8) as shown.

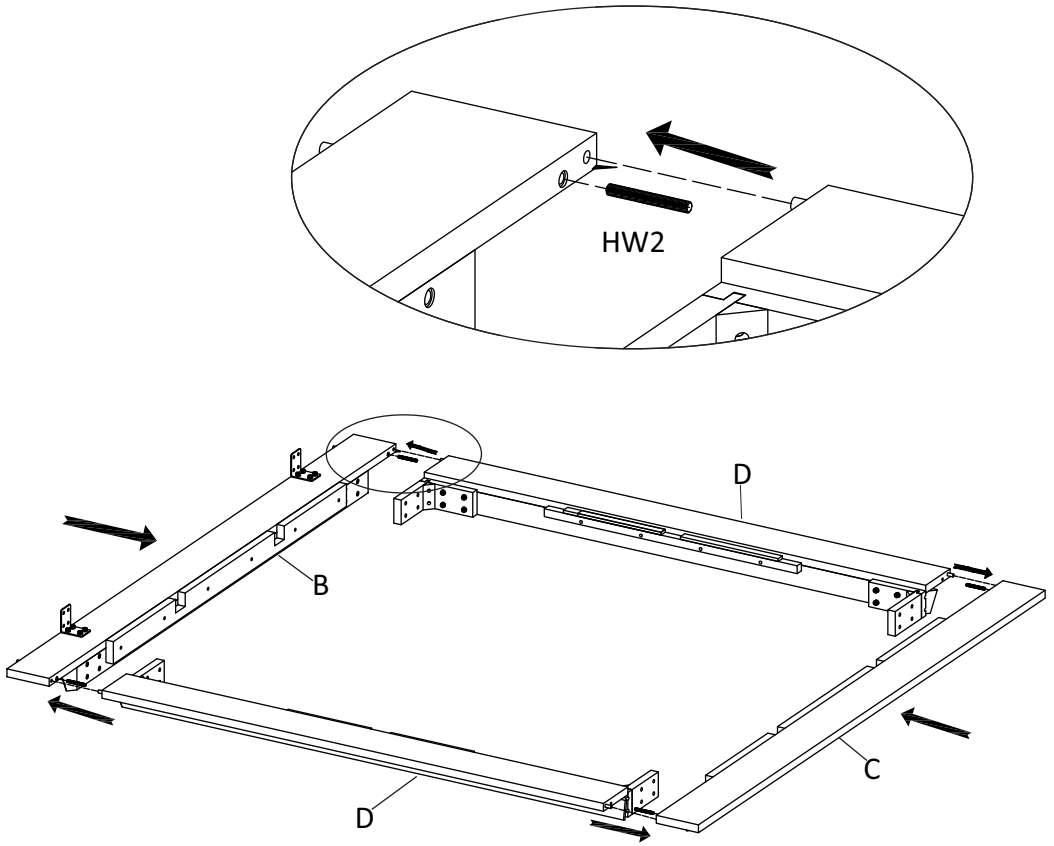


STEP 4: Attach bottom frame (B), footboard (C) and side rail (D) by metal thread (HW2) as shown.

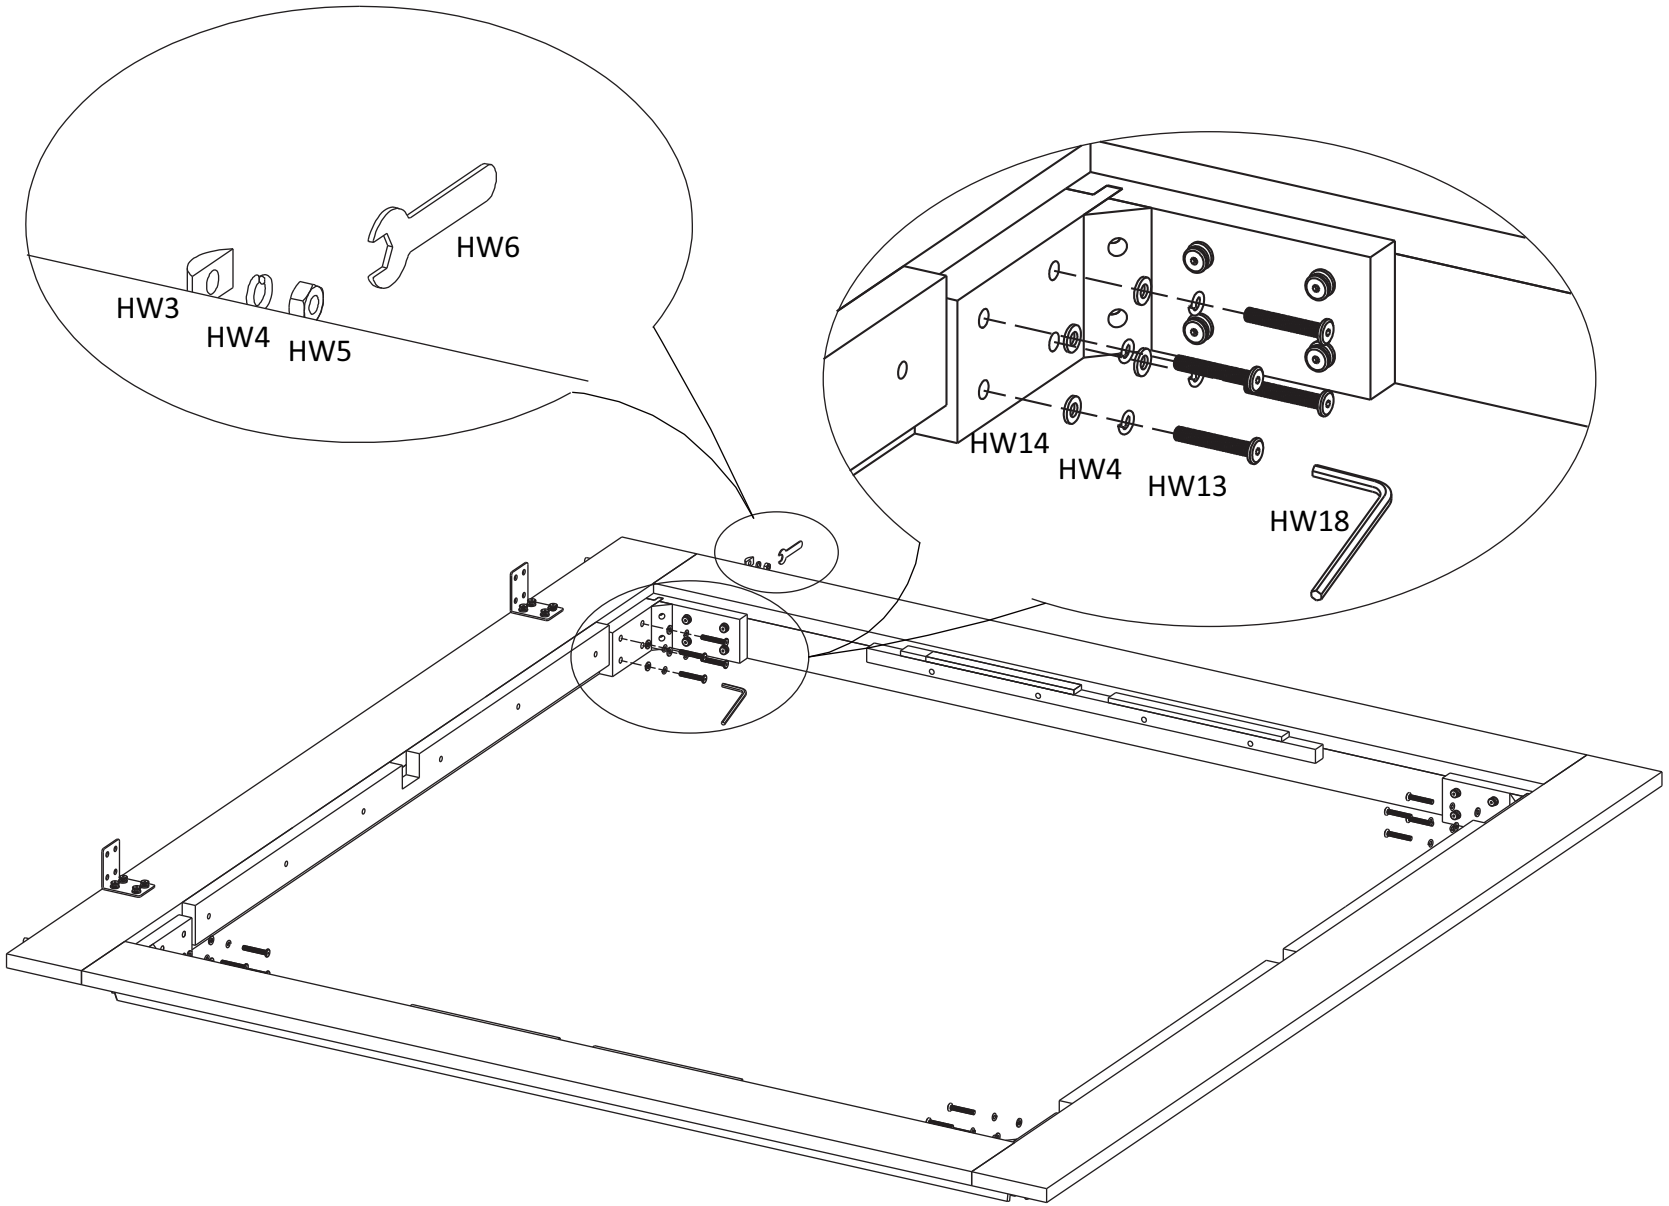


STEP 5: Assemble Semicircle washer (HW3), spring washer (HW4) and nut (HW5) in the structure in Step 4
Assemble medium cross bolt (Hw13), spring washer (HW4) and Flat washer (HW14) in the structure in Step 4 as show.

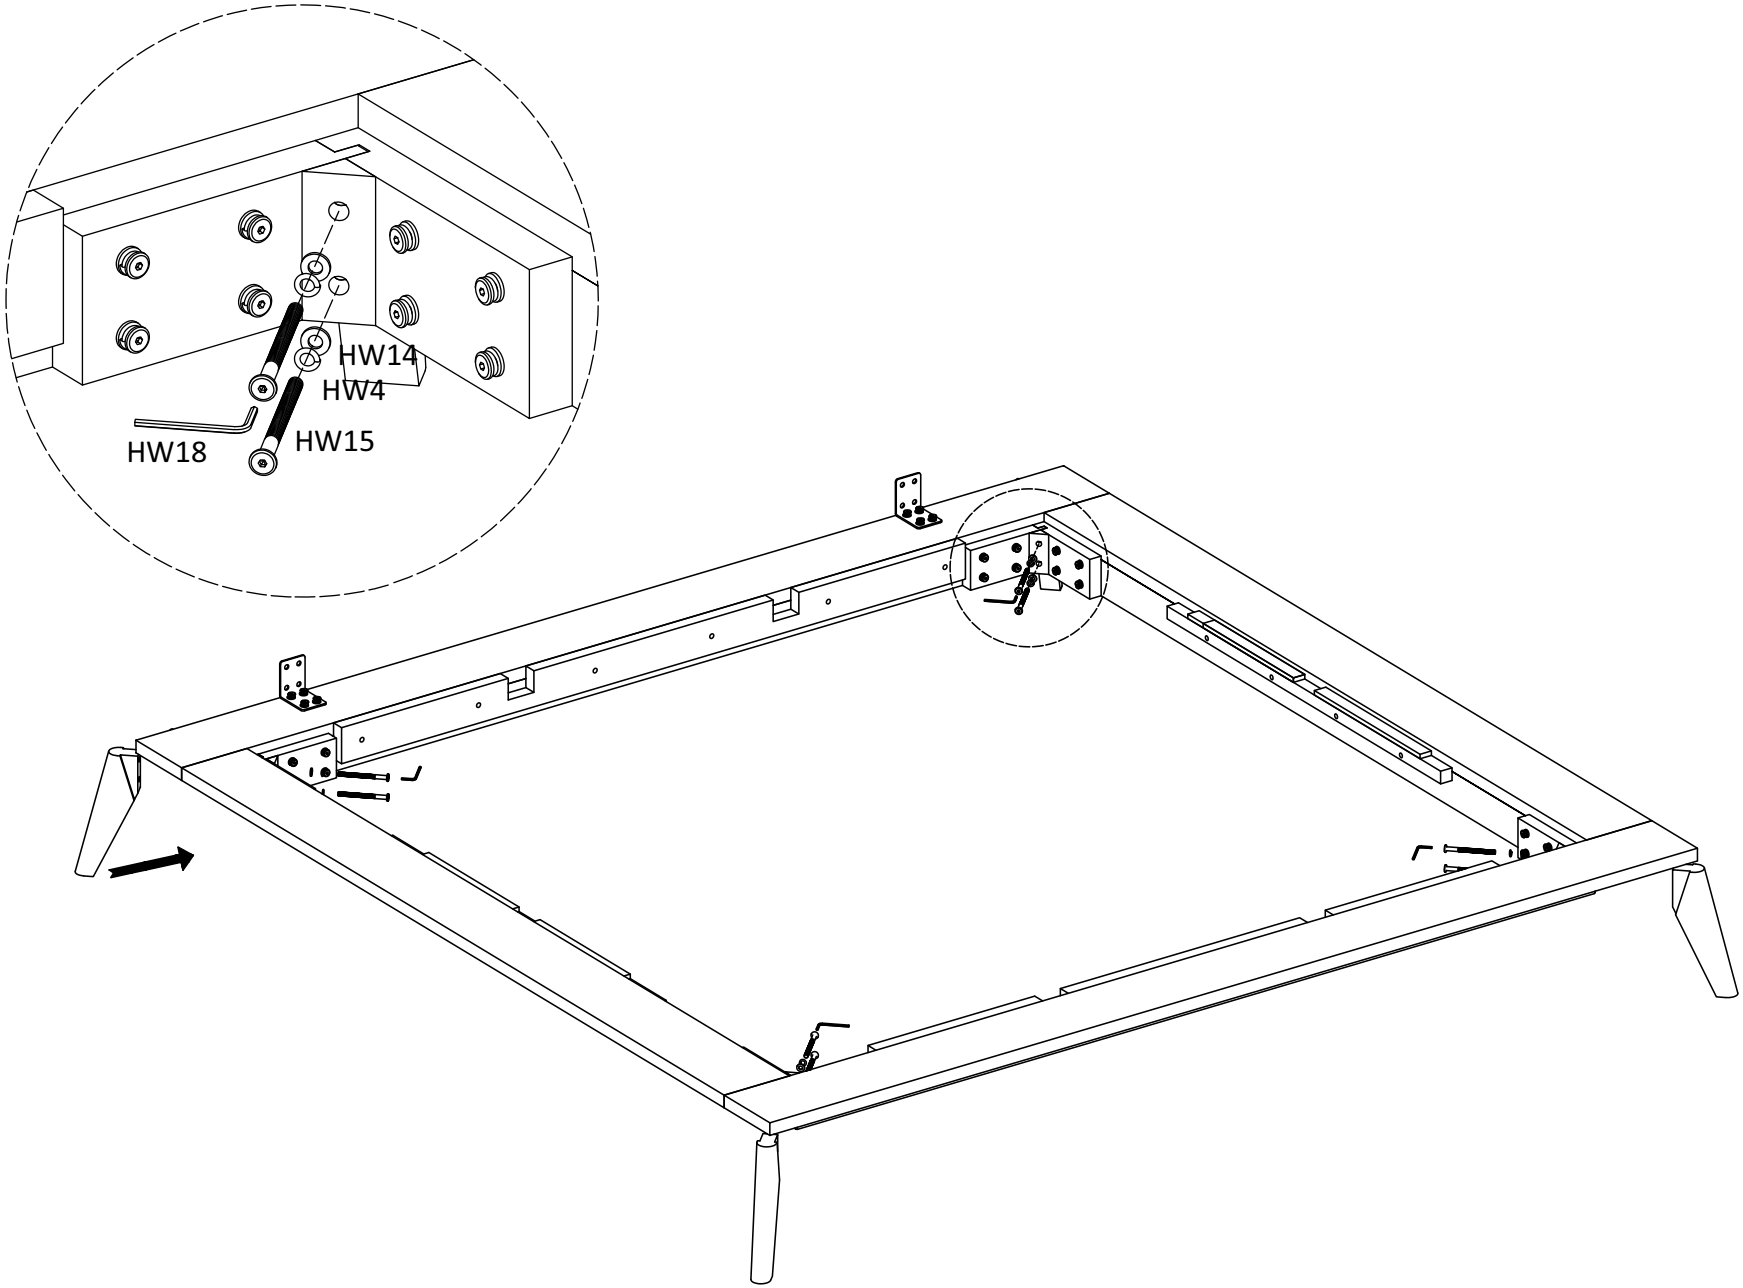


Step 6: Assemble medium cross bolt (HW15), spring washer (HW4) and Flat washer (HW14) in the structure in Step 5 as show.

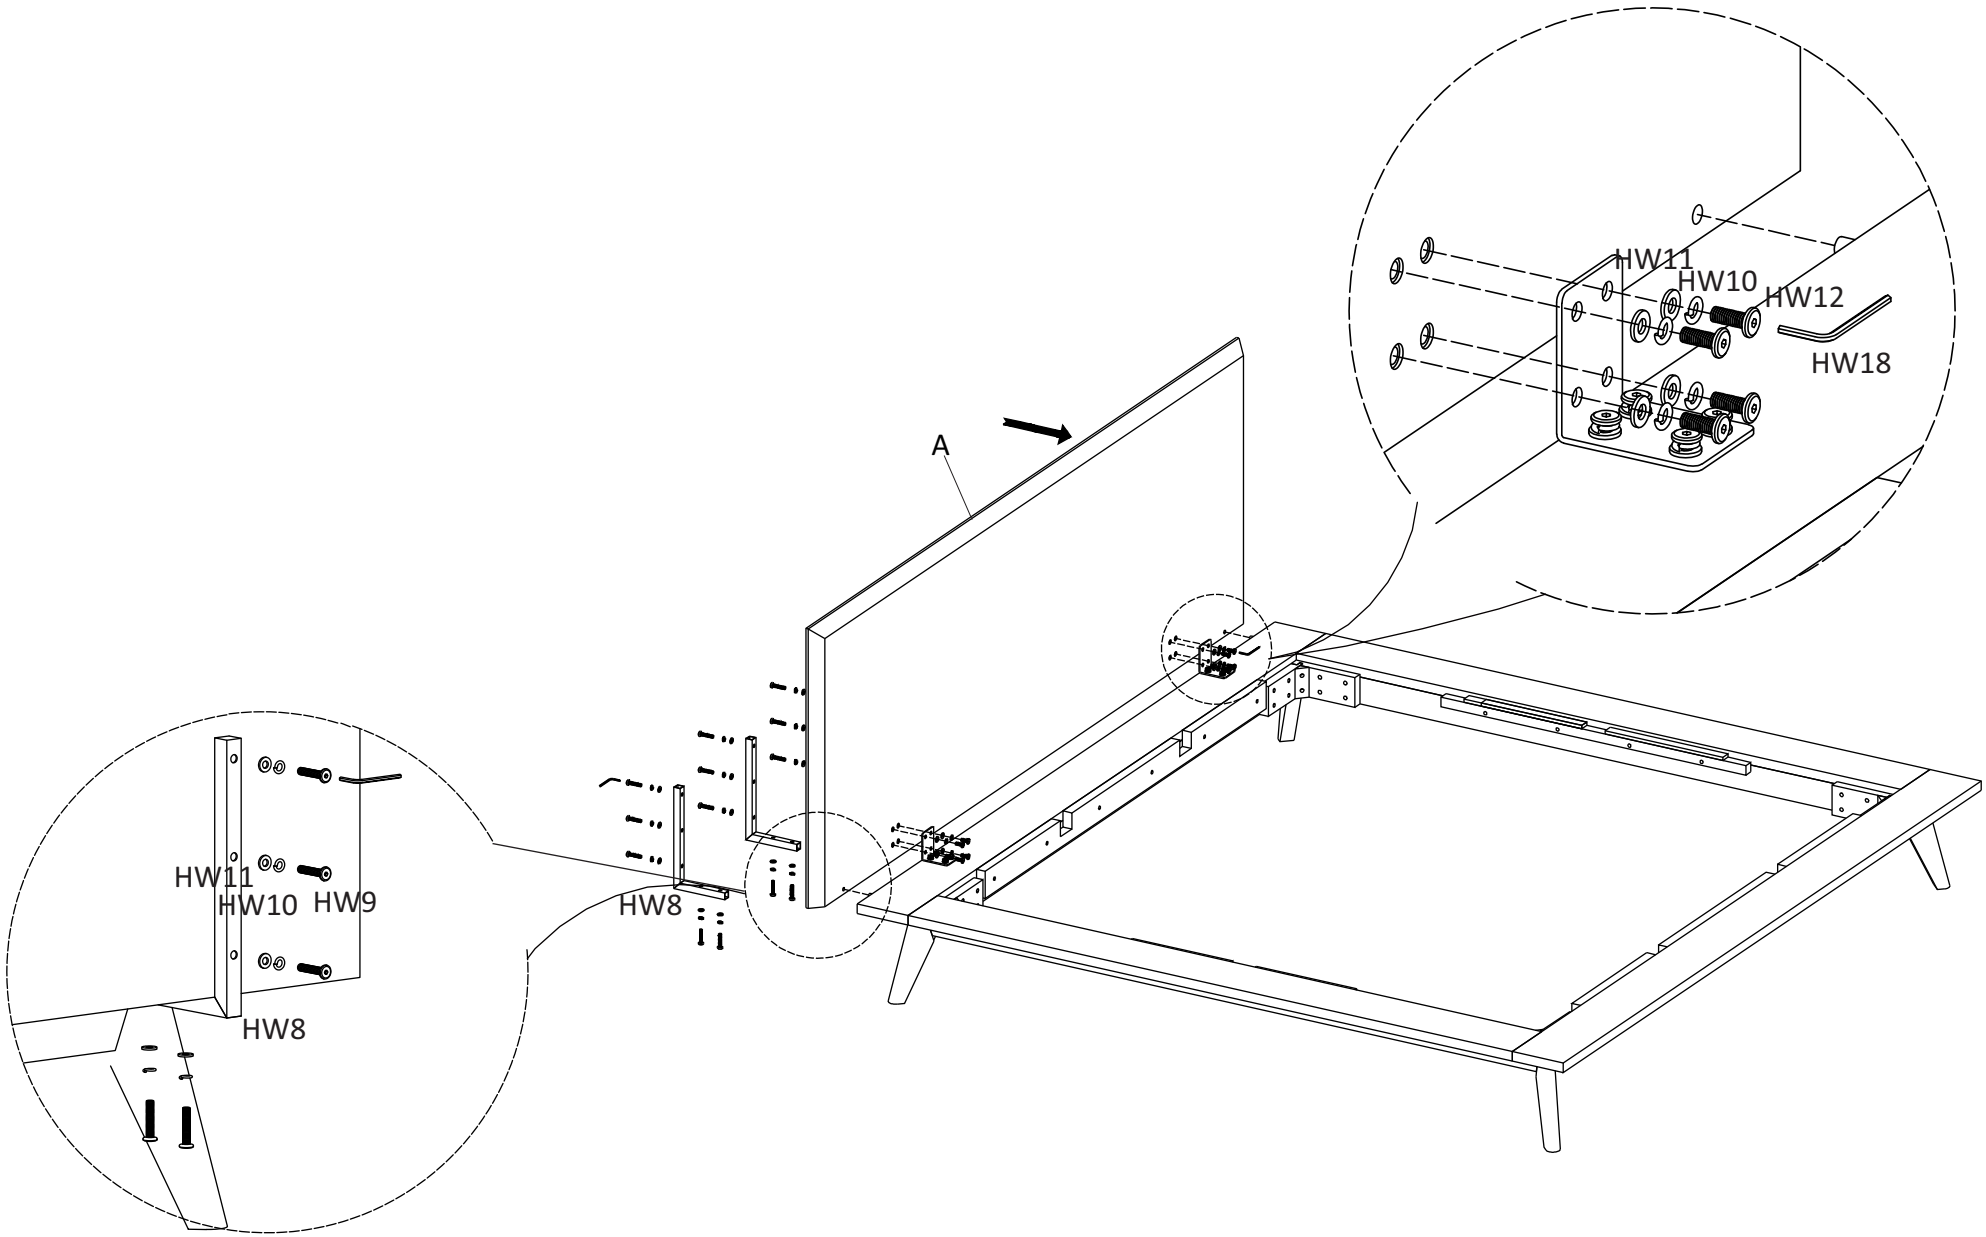

Step 7: Assemble headboard (A) on to the structure in Step 6 using small cross bolt (HW12), spring washer (HW10) and Flat washer (HW11).
Assemble medium cross bolt (HW9), spring washer (HW10), flat washer (HW11), Support bar (HW8) in the structure as show.

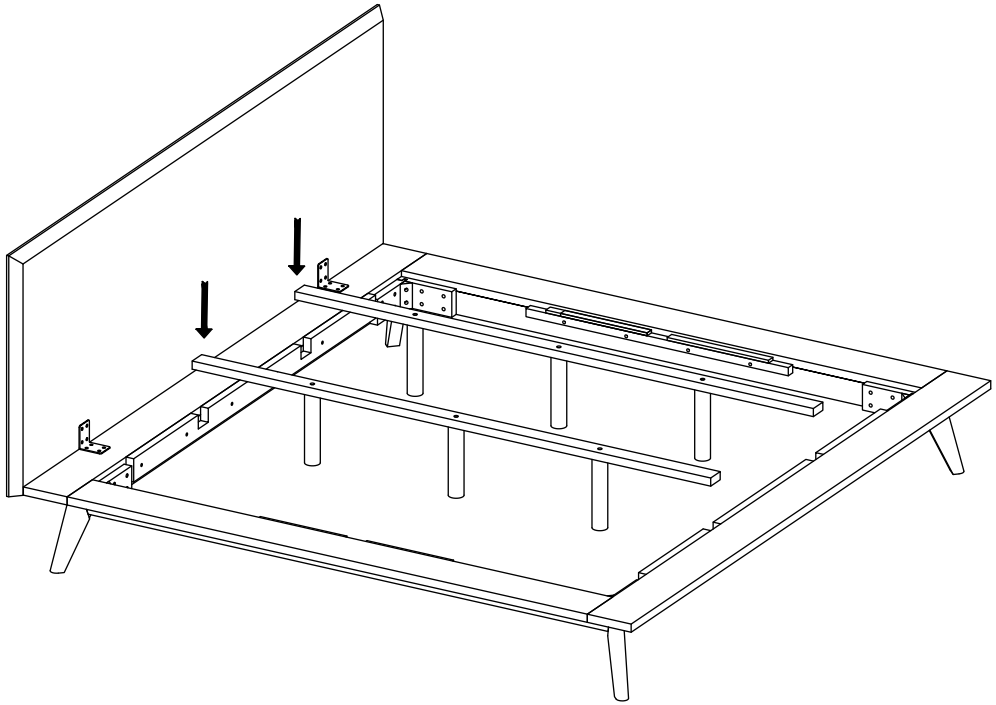

STEP 8: Attach the structure in Step 3 to the structure in Step 7 as show.

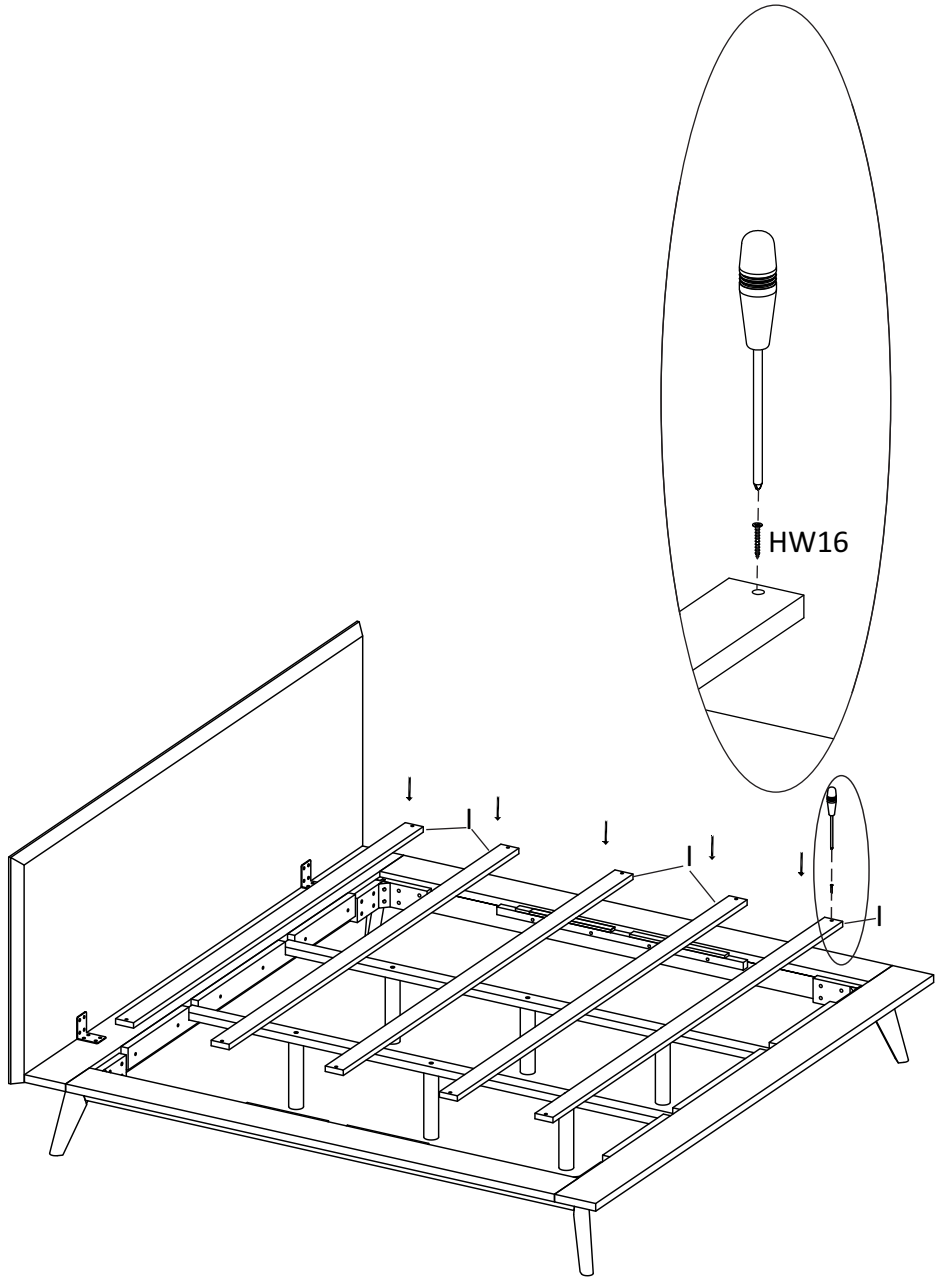

STEP 7: Insert the slats into the side and central rail and secure using screw (HW16).

NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 45 minutes.
* Tools Required for Assembly (included): Allen Key, Spanner; (Not included): Phillips Screwdriver.

CARE AND MAINTENANCE

* Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
* The use of steam or water-based cleaners may cause excessive shrinking or staining.

SAFAVIEH
COUTURE

Item ID: SFV4112-Q
Product Dimensions: 76 3/8”W x 89 3/4”D x 43 1/3”H

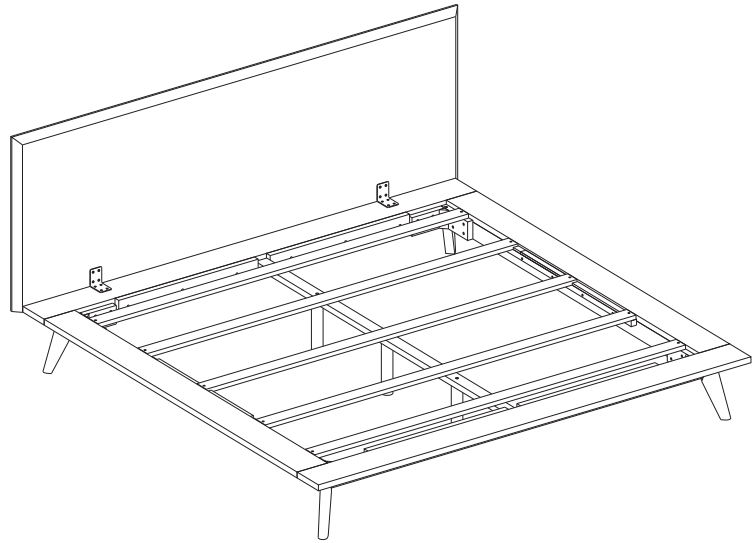

▲WARNING⚠

Weight capacity: 800lbs
Warning: DO NOT STAND ON BED
Warning: DO NOT OVER TORQUE BOLTS


Part List and Hardware List

PIECE	DESCRIPTION	QUANTITY	CARTON CALL
A	HEADBOARD	1X	1 of 3
B	BOTTOM FRAME	1X	2 of 3
C	FOOTBOARD	1X	2 of 3
D	SIDE RAILS	2X	3 of 3
E	CORNER BLOCK	4X	3 of 3
F	LEGS	4X	3 of 3
G	CENTRE SUPPORT RAIL	1X	3 of 3
H	CENTRER LEGS	3X	3 of 3
I	SLATS	5X	3 of 3


PIECE	DESCRIPTION	QUANTITY	CARTON CALL
HW1	Wooden dowel Ø10mm	6X	3 of 3
HW2	Metal thread 8x0.5x70mm	4X	3 of 3
HW3	Semicircle washer 7x15x30mm	4X	3 of 3
HW4	Spring washer 8mm	44X	3 of 3
HW5	Nut 8mm	4X	3 of 3
HW6	Spanner	1X	3 of 3
HW7	Metal palte	2X	3 of 3
HW8	Support bar	5X	3 of 3
HW9	Medium cross bolt (1) 8x0.5x40mm	25X	3 of 3
HW10	Spring washer (black) 8mm	41X	3 of 3
HW11	Flat washer (black) 8mm	41X	3 of 3
HW12	Small cross bolt (1) 8x0.5x20mm	16X	3 of 3
HW13	Medium cross bolt (2) 8x0.5x50mm	32X	3 of 3
HW14	Flat washer 8mm	40X	3 of 3
HW15	Big cross bolt 8x0.5x100mm	8X	3 of 3
HW16	Screw 4x0.5x30mm	10X	3 of 3
HW17	Small cross bolt 6x0.5x40mm	3X	3 of 3
HW18	Allen key	1X	3 of 3

PREPARATION


* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 45 minutes.
* Tools Required for Assembly (included): Allen Key, Spanner; (Not included): Phillips Screwdriver.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

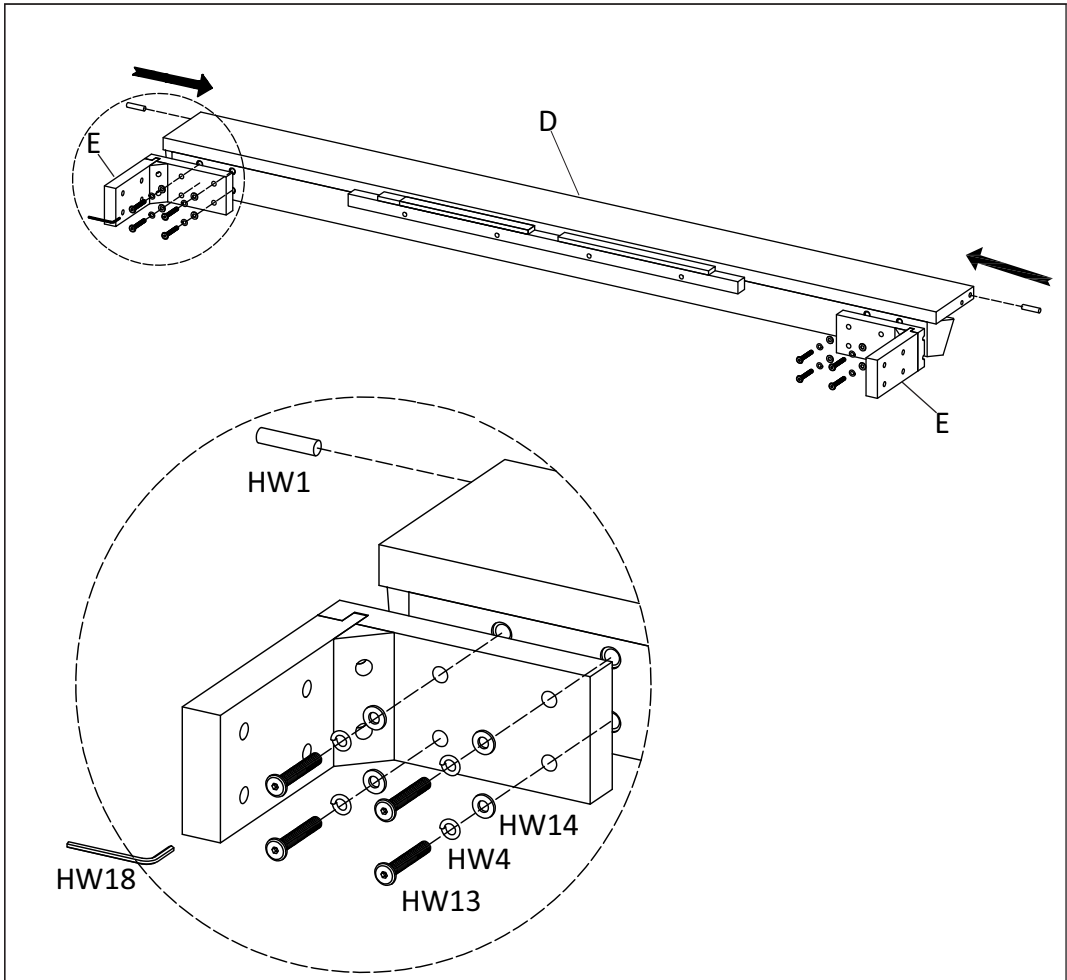


STEP 1: Assemble wooden dowel (HW1) in the side rail (D).
Atach corner block (E) and side rail (D) by medium cross bolt (HW13), spring washer (HW4) and Flat washer (HW14).

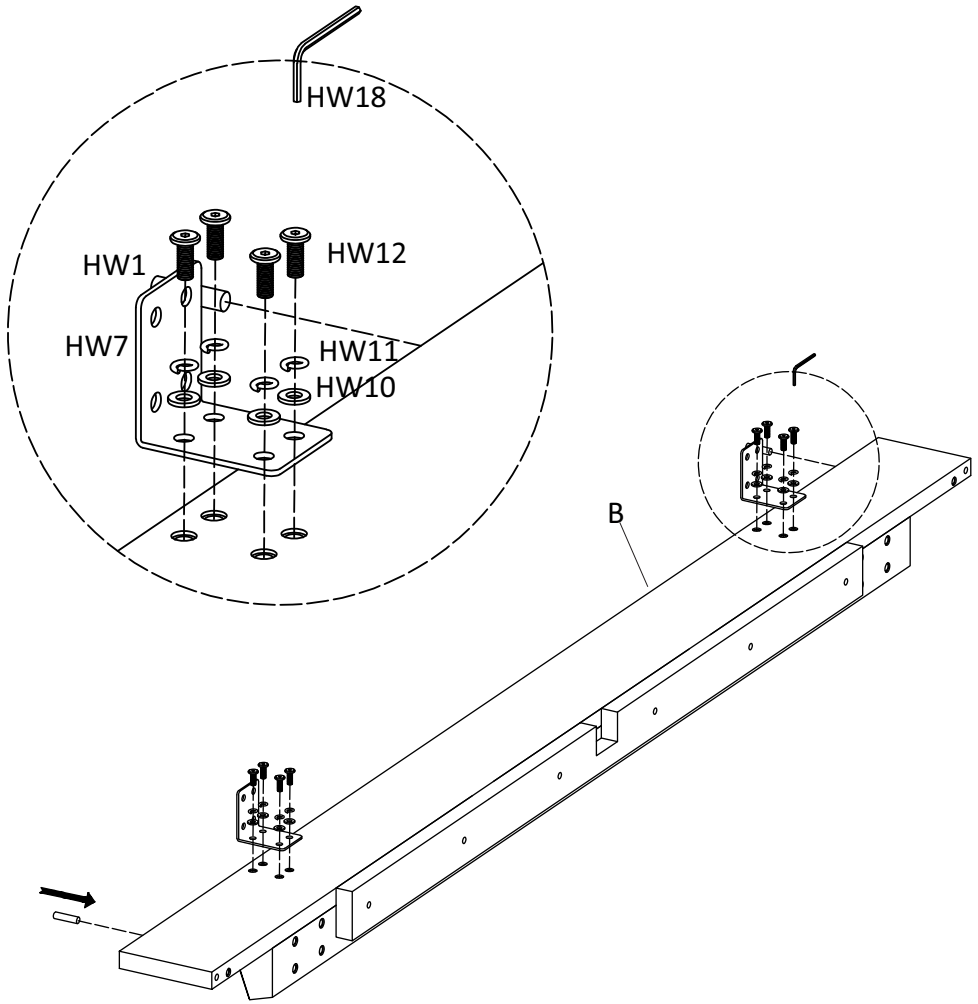


STEP 2: Attach Metal palte (HW7) and bottom frame (B) by small cross bolt (HW12), spring washer (HW10) and Flat washer (HW11) as shown.

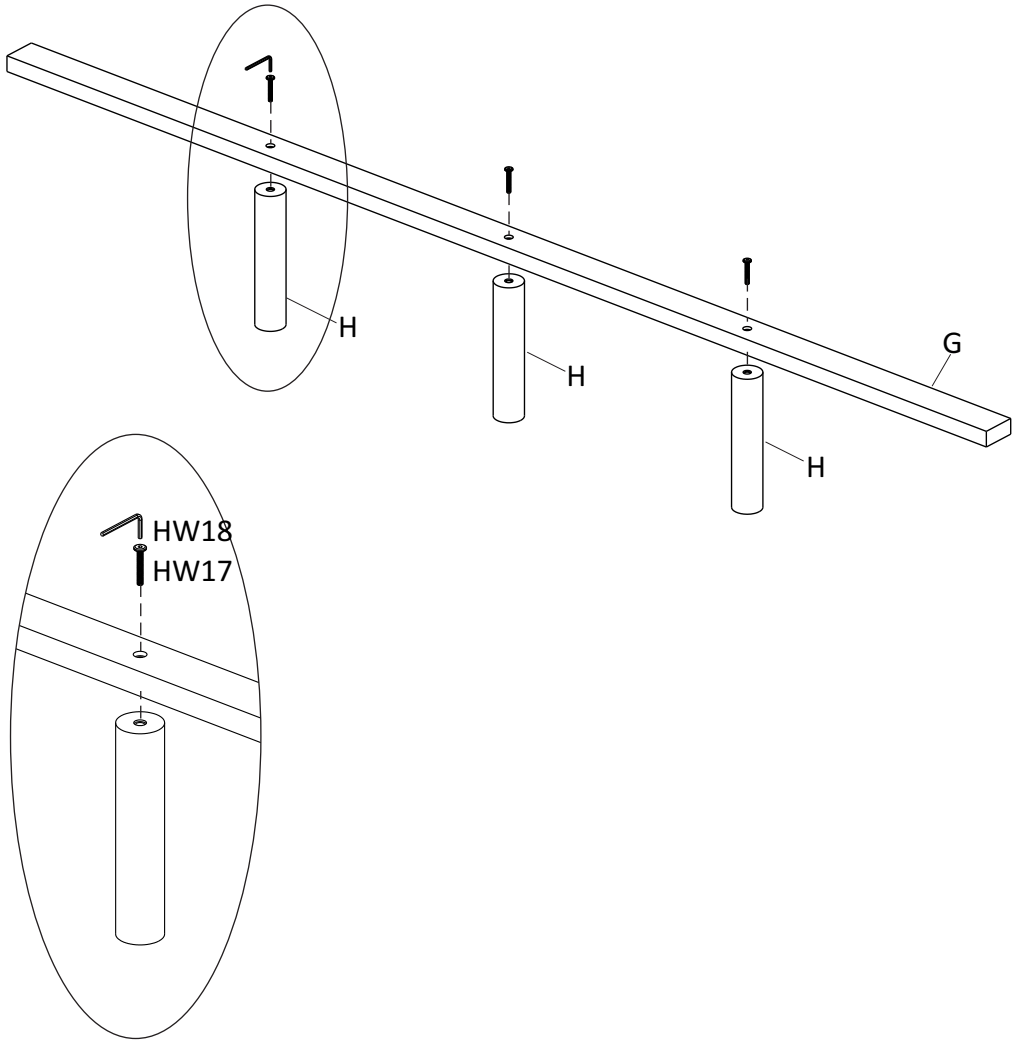


STEP 3: Attach centre support rail (F) and centre legs (G) by cross bolt (HW8) as shown.

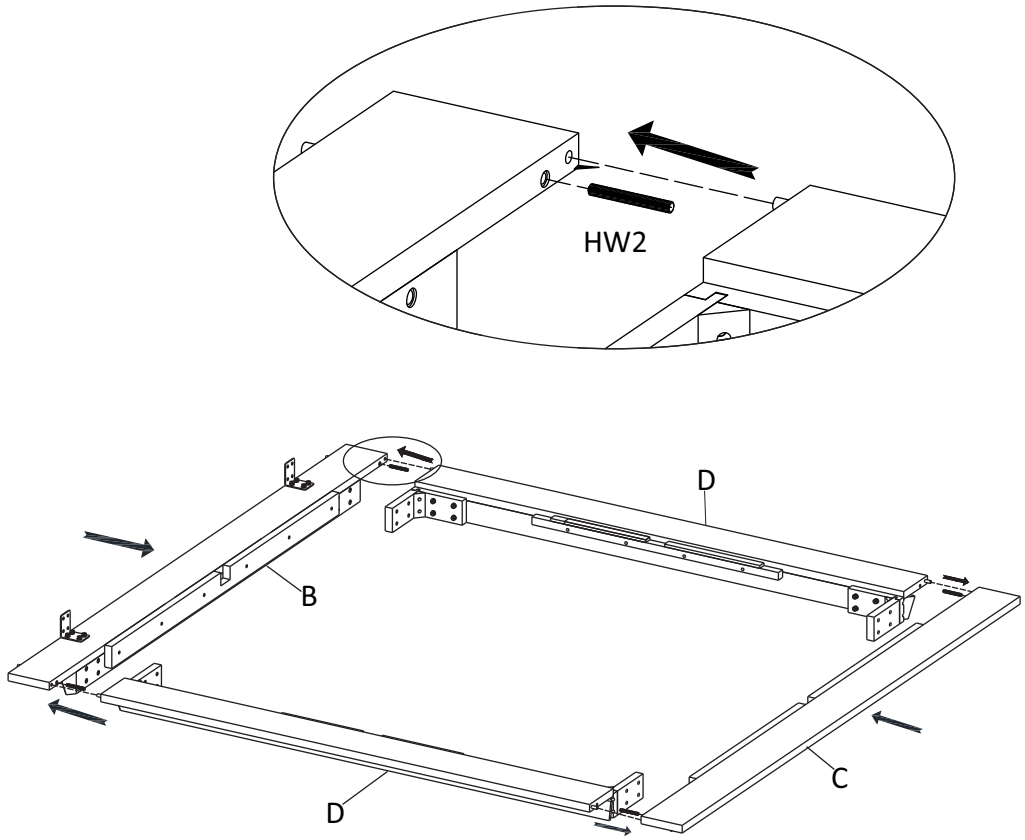


STEP 4: Attach bottom frame (B), footboard (C) and side rail (D) by metal thread (HW2) as shown.

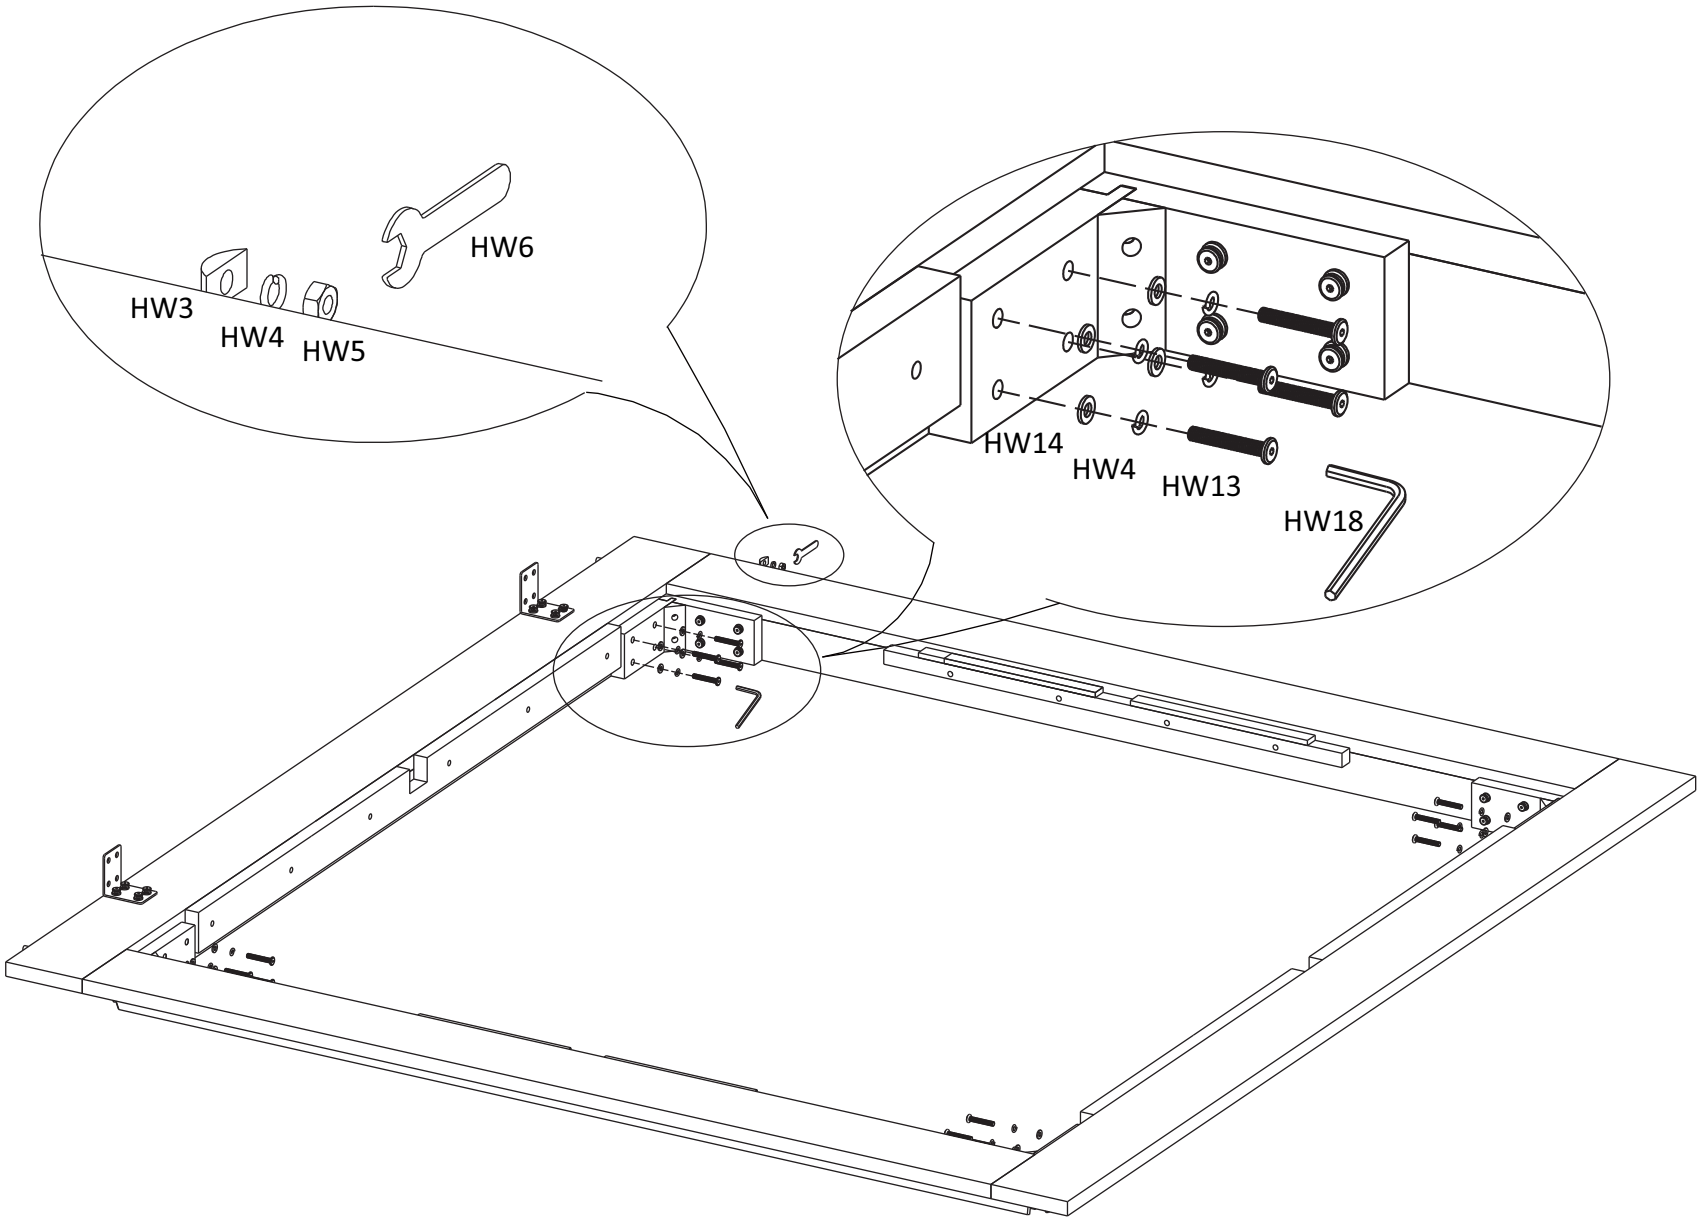


STEP 5: Assemble Semicircle washer (HW3), spring washer (HW4) and nut (HW5) in the structure in Step 4
Assemble medium cross bolt (Hw13), spring washer (HW4) and Flat washer (HW14) in the structure in Step 4 as show.

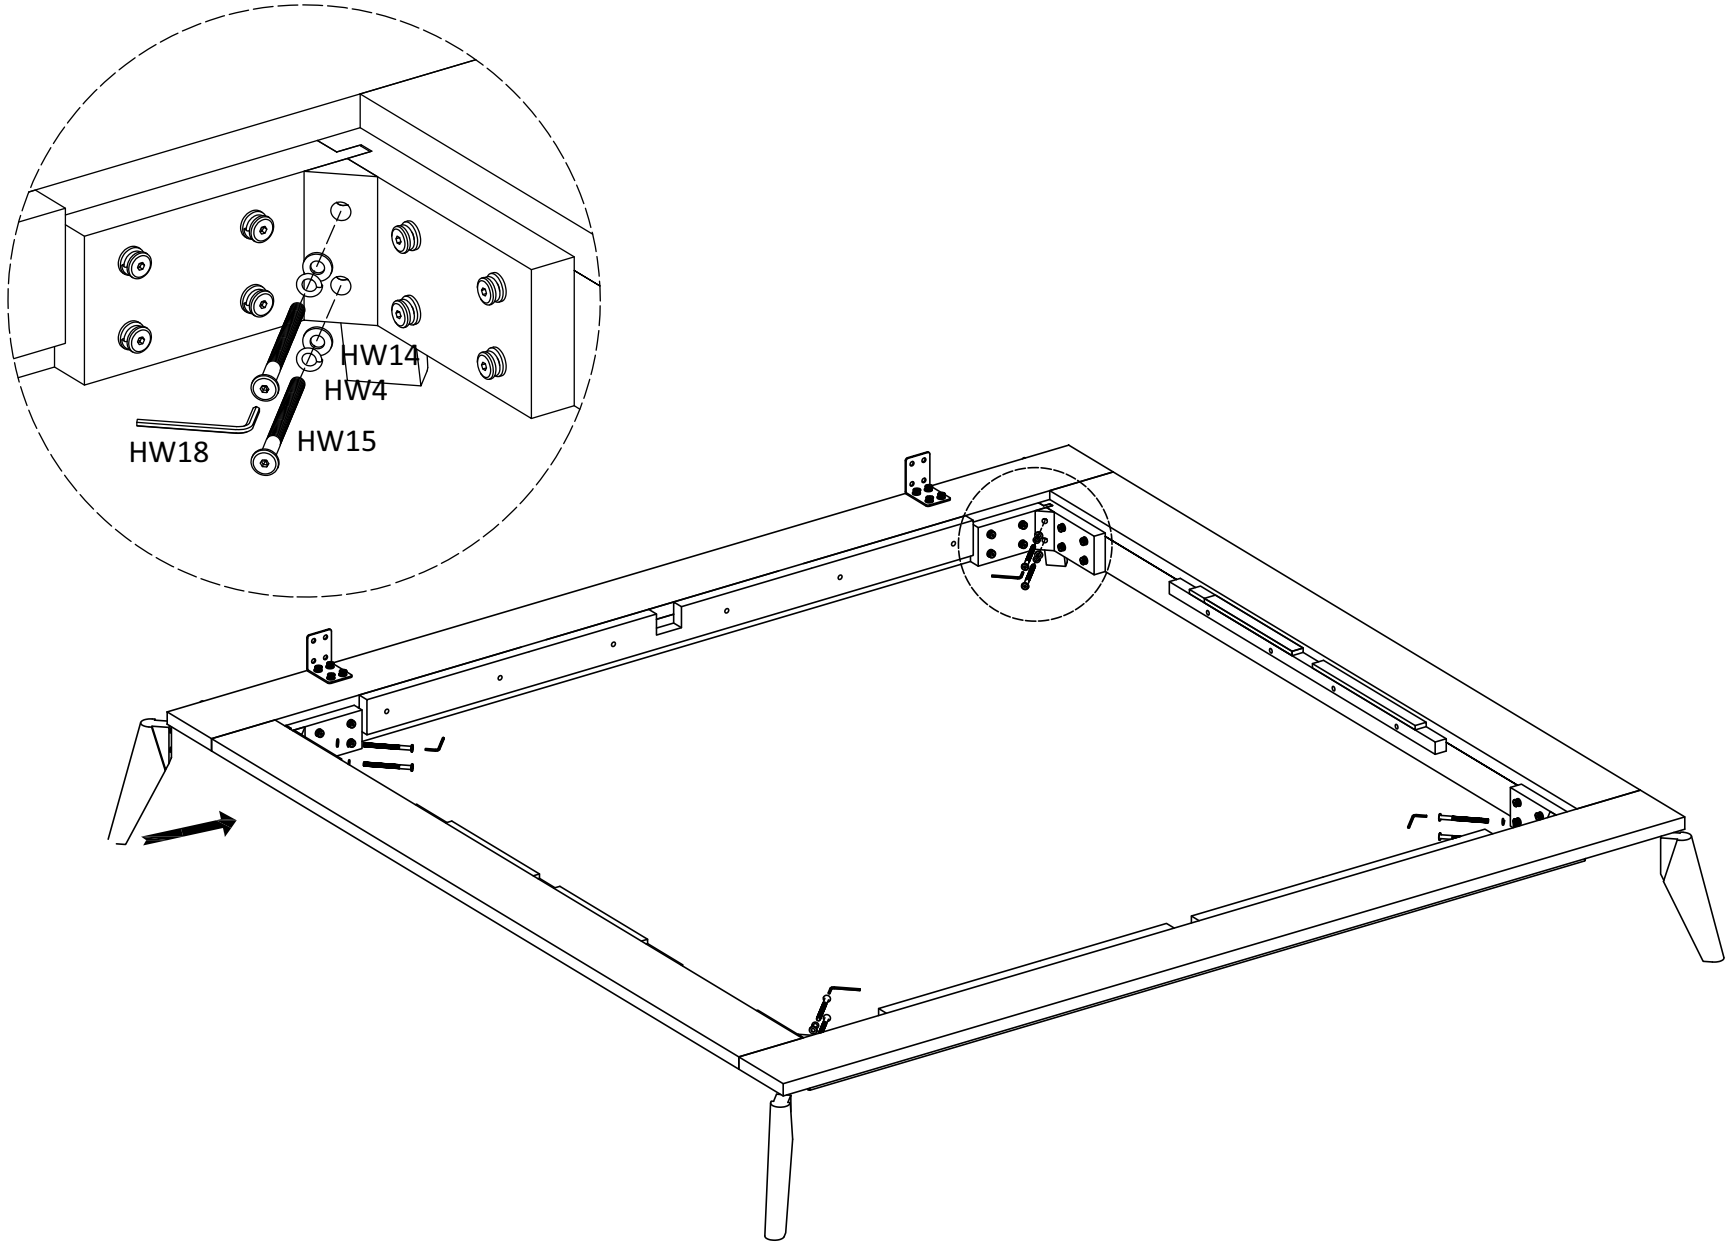


Step 6: Assemble medium cross bolt (HW15), spring washer (HW4) and Flat washer (HW14) in the structure in Step 5 as show.

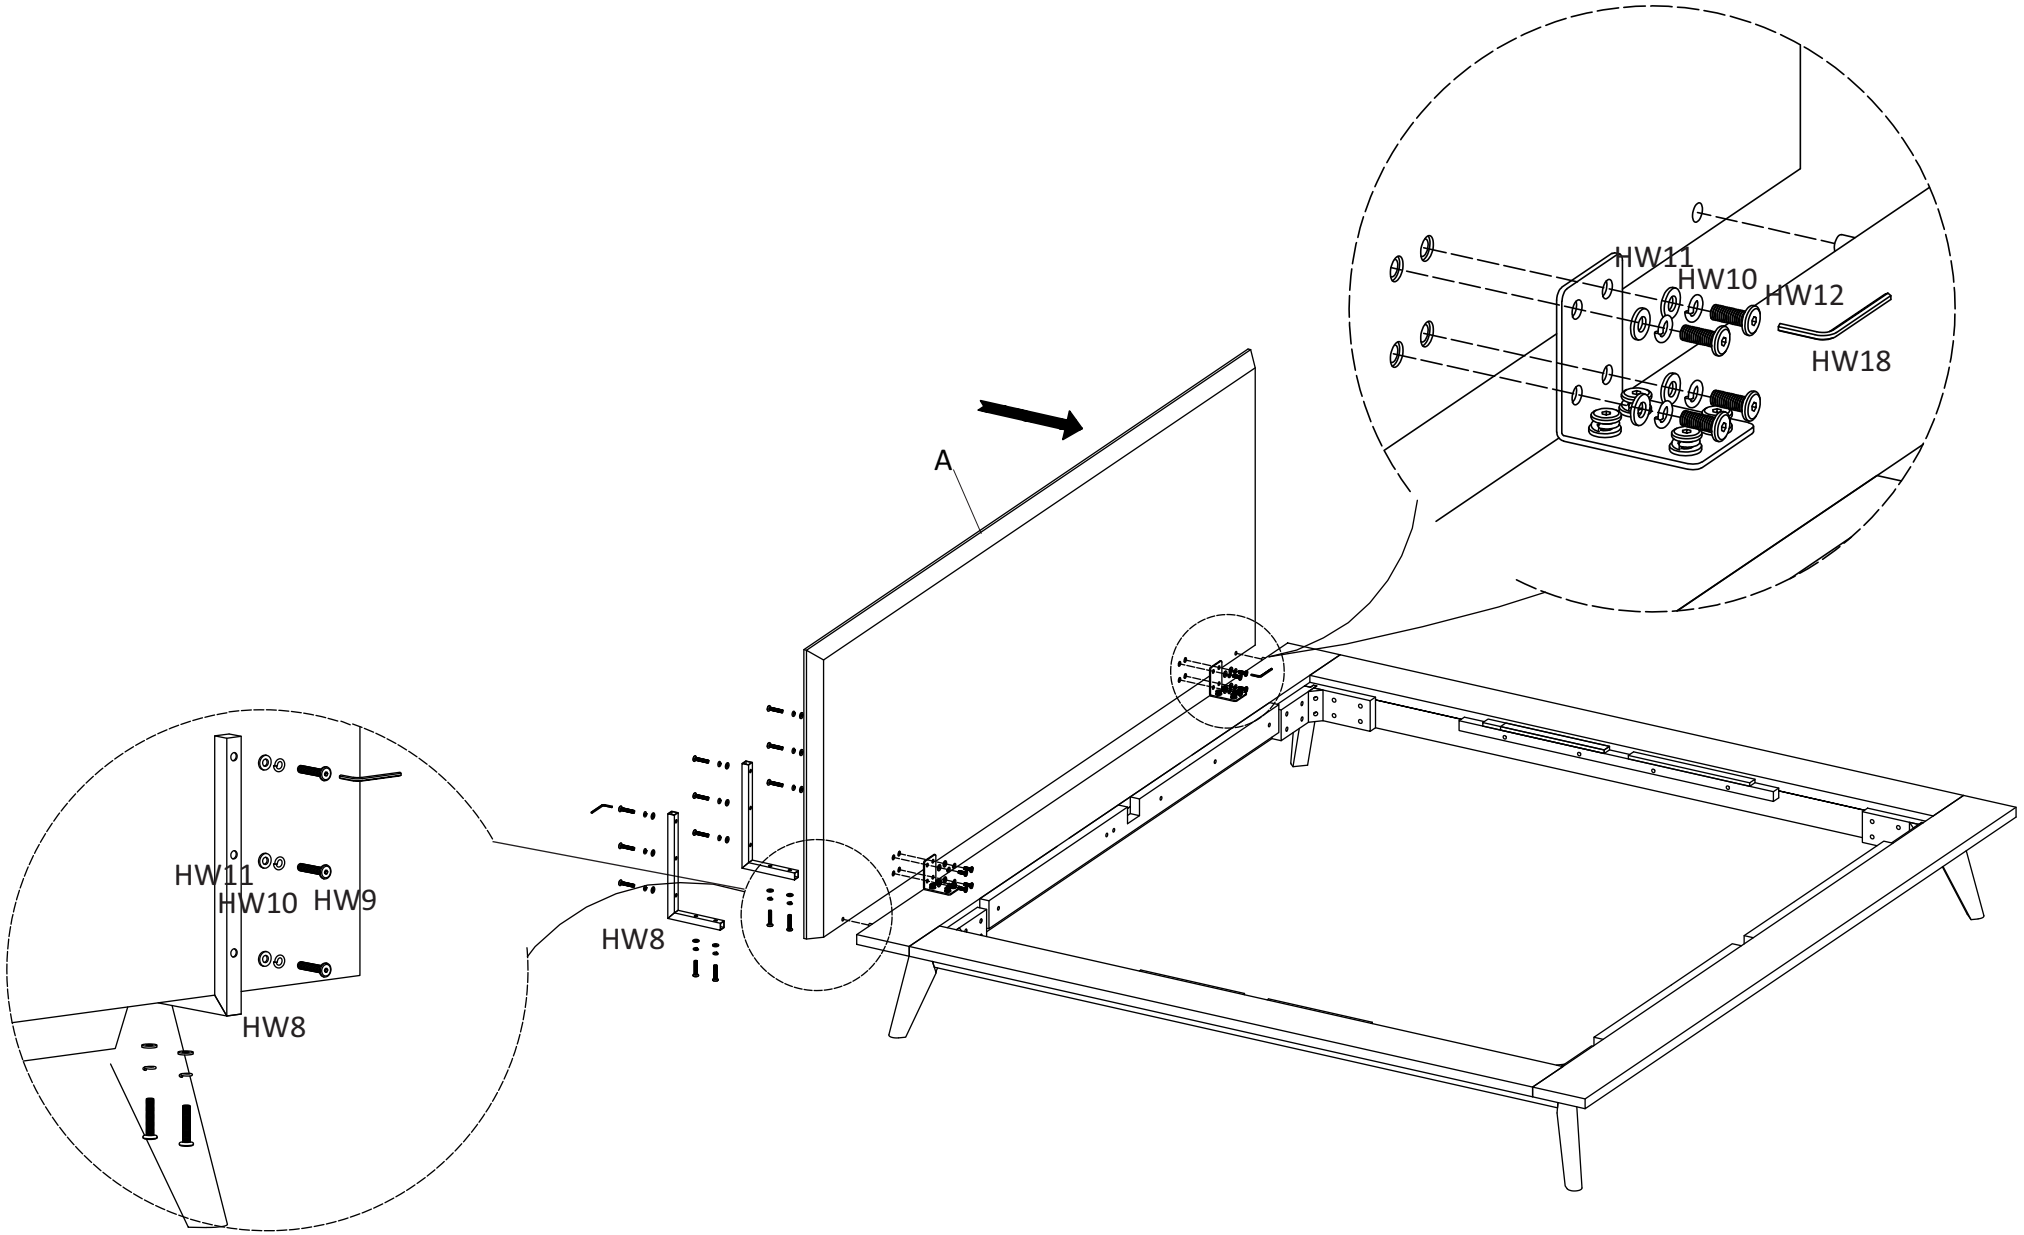

Step 7: Assemble headboard (A) on to the structure in Step 6 using small cross bolt (HW12), spring washer (HW10) and Flat washer (HW11).
Assemble medium cross bolt (HW9), spring washer (HW10), flat washer (HW11), Support bar (HW8) in the structure as show.

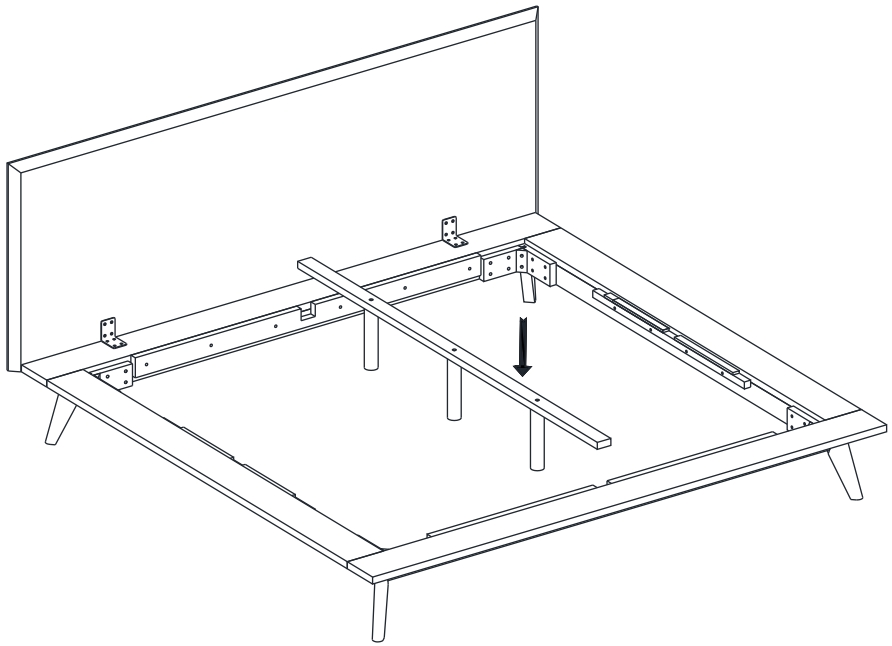

STEP 8: Attach the structure in Step 3 to the structure in Step 7 as show.

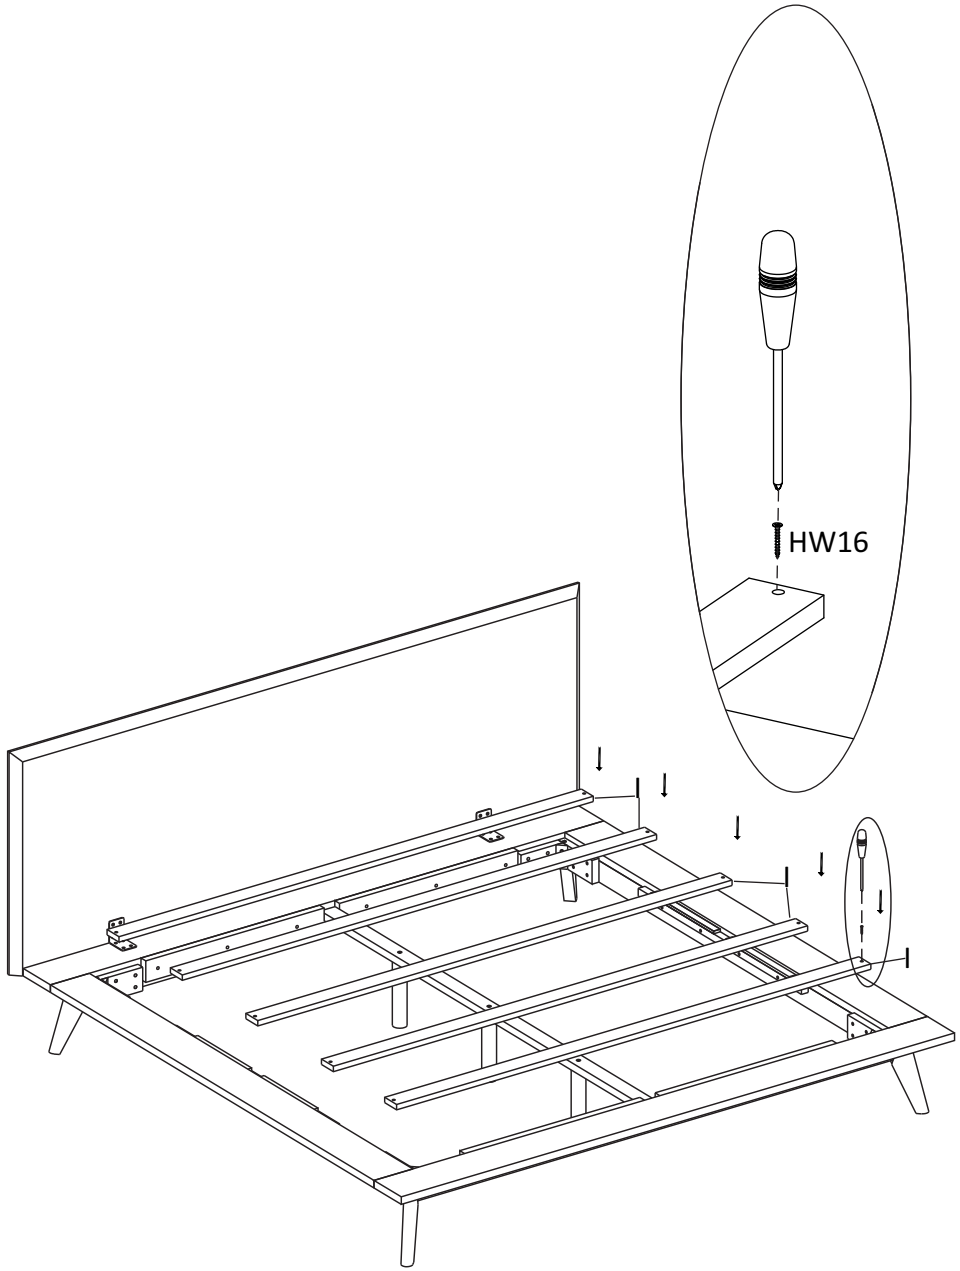

STEP 7: Insert the slats into the side and central rail and secure using screw (HW16).