NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**

PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 10 minutes.
* Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

* Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
* The use of steam or water-based cleaners may cause excessive shrinking or staining.

Part List and Hardware List

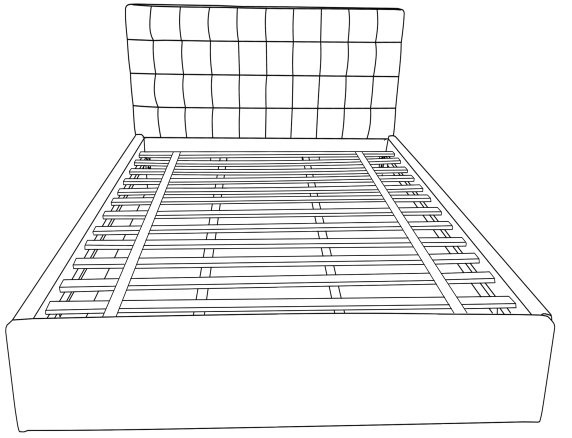
PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Headboard		1X
B	Footboard		1X
C	Sideboard		2X
D	Slat		1X
E	Cross Slat		2X
F	Support Leg for Cross Slat		4X
HW1	Phillips Screws 4*2*40MM		12X
HW2	Wrench		1X

SAFAVIEH

COUTURE

Model#: SFV4826-K

Dimensions: 81.7"WX 87.0"DX47.4"H





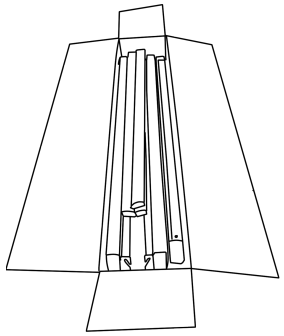
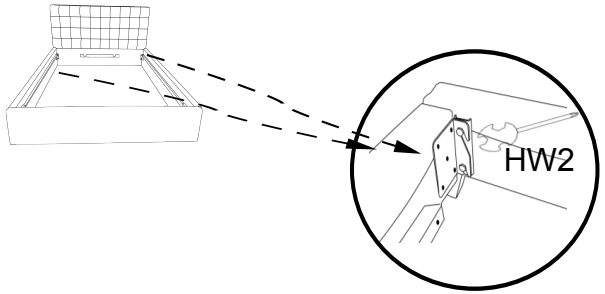
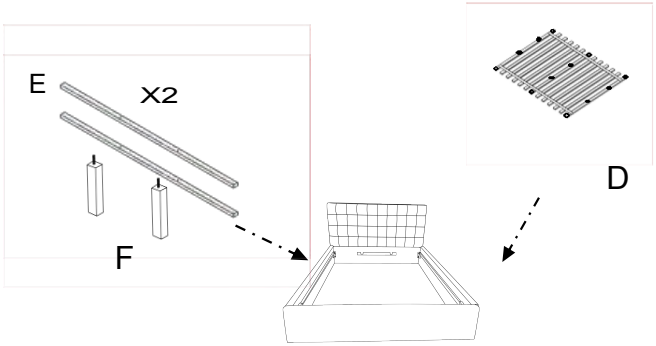
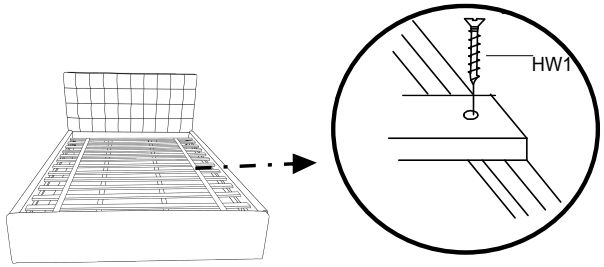
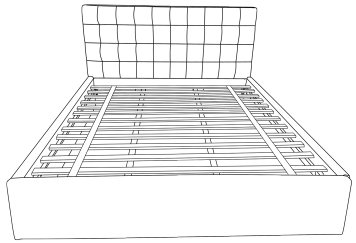
Weight Capacity: 825 lbs

WARNING: DO NOT STAND ON BED

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 10 minutes.
* Tools Required for Assembly (included): Allen Key
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

		
STEP1 Open the carton box, take out the body and hardware.	STEP2 Attach the sideboard C with headboard A and footboard B by sliding the iron plates onto the bolts, the metal card should be alignment card slot when install it, then press it lightly.	STEP3 Rotate the slat legs F to the middle rod of slat E. Put it inside the middle of the bed, and then, smooth the slat D inside the bed
		
STEP4 Secure the slat with screw HW1 by using wrench HW2.There are totally 12 holes on slat to make sure it stable, it's shown in step 3.	It's finished as shown, your bed is ready for use.	

NOTICE

* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email **customersupport@safavieh.com**



PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 10 minutes.
* Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

* Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
* The use of steam or water-based cleaners may cause excessive shrinking or staining.

Part List and Hardware List

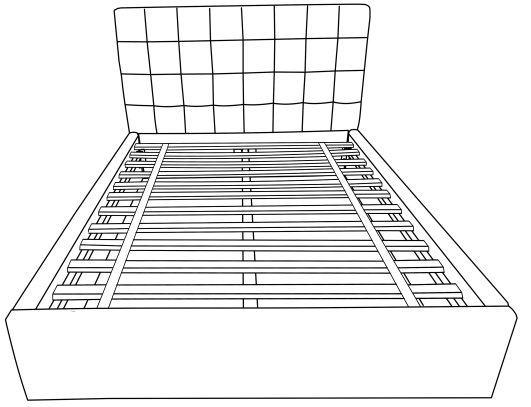
PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Headboard		1X
B	Footboard		1X
C	Sideboard		2X
D	Slat		1X
E	Cross Slat		1X
F	Support Leg for Cross Slat		2X
HW1	Phillips Screws 4*2*40MM		9X
HW2	Wrench		1X

SAFAVIEH

COUTURE

Model#: SFV4826-Q

Dimensions: 66.3"WX 87.0"DX47.4"H





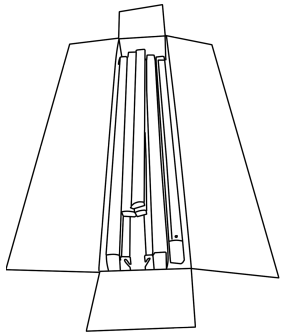
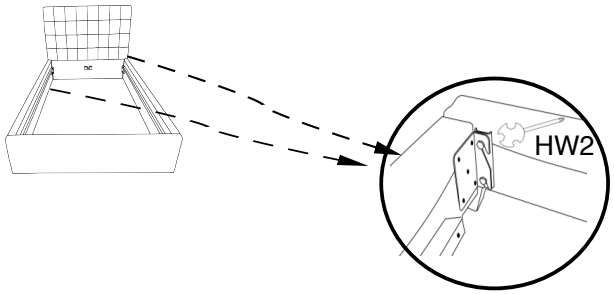
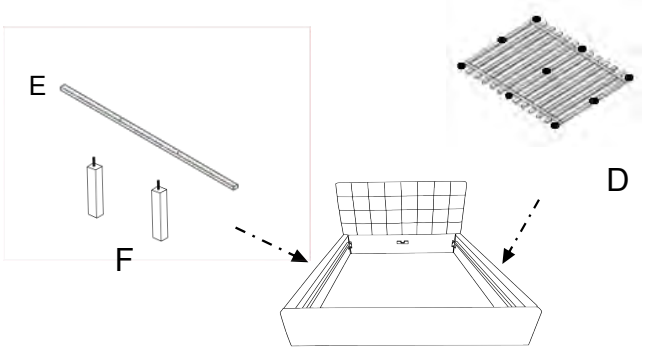
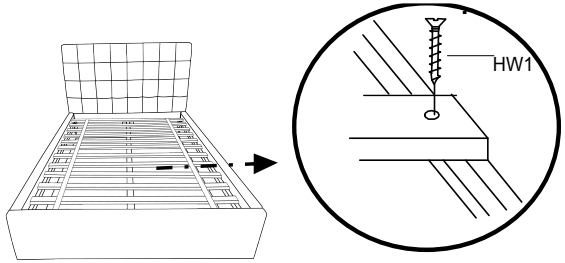
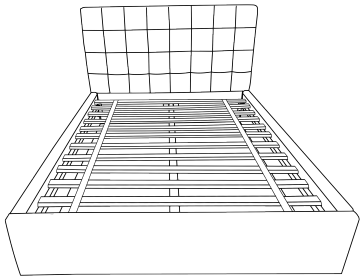
Weight Capacity: 825 lbs

WARNING: DO NOT STAND ON BED

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PREPARATION

* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
* If any part is missing or damaged, do not attempt to assemble the product.
* Estimated Assembly Time: 10 minutes.
* Tools Required for Assembly (included): Allen Key
* If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

		
STEP1 Open the carton box, take out the body and hardware.	STEP2 Attach the sideboard C with headboard A and footboard B by sliding the iron plates onto the bolts, the metal card should be alignment card slot when install it, then press it lightly.	STEP3 Rotate the slat legs F to the middle rod of slat E. Put it inside the middle of the bed, and then, smooth the slat D inside the bed
		
STEP4 Secure the slat with screw HW1 by using wrench HW2.There are totally 9 holes on slat to make sure it stable, it's shown in step 3.	It's finished as shown, your bed is ready for use.	